

# cecotec

## TOAST&TASTE 2L

Tostadora de pan con 2 ranuras ancha largas y con capacidad para 2 tostadas./

Bread toaster with 2 long wide slots with capacity for 2 toasts.



Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções  
Handleiding  
Instrukcja obsługi  
Návod k použití

- y mayores de 8 años si están continuamente supervisados.
- Este aparato puede ser usado por personas con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimiento si están supervisados o han recibido instrucción concerniente al uso del aparato de una forma segura y entienden los riesgos que este implica.
  - Supervise a los niños para asegurarse de que no jueguen con el producto. Es necesario dar una supervisión estricta si la tostadora está siendo usada por o cerca de niños.
  - Mantenga el aparato y su cable fuera del alcance de los niños de edad inferior a 8 años.

## **SAFETY INSTRUCTIONS**

Read this instruction manual carefully before use, even if you are familiar with the operation of this type of product.

- The safety instructions contained herein reduce the risk of fire, electric shock, and injury, as long as they are properly followed.
- Keep the manual in good condition for future reference, along with the proof of purchase, and original package. If possible, give these instructions to new users of the appliance.
- All safety instructions should be closely followed when using the appliance.
- Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
- Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid. Do not expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- If the appliance falls accidentally in water, unplug it

immediately. Do not reach into the water!

- Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
- Do not use the appliance if its cord, plug, or housing is damaged, nor after it malfunctions or has been dropped or damaged in any way.
- Do not twist, bend, strain, or damage the power cord in any way. Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the cord hang over the edge of the working surface or countertop.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Turn off and unplug the appliance from the mains supply when not in use and before cleaning it. Pull from the plug, not the cord, to disconnect it from the outlet.
- This product is designed only for household use. It is not suitable for commercial or industrial use. Do not use outdoors.
- The appliance is only suitable for toasting bread without topping. Do not use it for any other purpose, and follow the instructions described in this manual. Do not place wet foodstuffs inside the toaster, nor bread covered with butter, jelly, frosting, or any other condiment, as it may result in fire, smoke, or jamming of the appliance.
- Do not insert over-sized foodstuffs or inappropriate materials (aluminium foil, packages, or kitchen utensils) into the toasting slot. It could result in fire or electric shock.
- Do not use any accessory that has not been recommended by Cecotec, as they might cause injuries or damage.
- Make sure you know how to use the toaster before use.

- Make sure there is adequate air space above and on all sides of the appliance for air circulation.
- Place the appliance on a dry, stable, flat, heat-resistant surface.
- Do not use the appliance under the following circumstances:
  - On or near a gas or electric hob, in heated ovens, or near open flames.
  - On soft surfaces (such as carpets) or where it may tip over during use.
  - Outdoors or in areas with high humidity levels.
  - Near or below flammable materials (such as curtains, cloths, wall hangings, tea towels, etc.).
  - Under wall cabinets, as bread may catch fire and cause a fire when over toasted.
- Do not cover the toaster while in use.
- Do not insert any object (utensils, fingers, or any other foreign object) inside the toaster while in use, as it may result in fire, electric shock, or injury.
- Unplug the appliance immediately if fire or smoke is observed.
- Do not leave the appliance unattended while in use. Unplug it from the power supply when you finish using it and before leaving the room.
- If the appliance malfunctions, or if fire or smoke is observed, press CANCEL immediately and unplug it from the mains supply. Do not try to repair the product by yourself. Contact the official Technical Support Service of Cecotec.
- To ensure the correct operating of the device, cleaning and maintenance tasks must be carried out according to this instruction manual. Turn off and unplug the appliance before moving and cleaning it. Allow it to completely cool down before cleaning or storing it.

- Remove the crumbs from the crumb tray regularly, in order to avoid the risk of fire. Make sure the crumb tray is completely dry and in place before use.
- Cleaning and maintenance tasks must not be carried out by children.
- Store the appliance and its instruction manual in a safe and dry place when not in use.
- The temperature of accessible surfaces may be high while in use and could cause burns. The metal panel on top of the toaster can become very hot. Do not touch hot surfaces while in use or immediately after. Use oven mitts when handling the toaster and allow its metal parts to cool down before cleaning.
- Be careful when taking out hot bread slices to avoid injuries.
- If the toasting slot gets stuck while the toaster is on, unplug the appliance immediately and let it cool down before emptying and cleaning it. If the problem remains, stop using the appliance and contact the official Technical Support Service of Cecotec.
- Do not attempt to remove food from the inside of the toaster while it is plugged to the mains supply. Unplug it and let it cool down before removing foodstuffs from its interior.
- Do not use a knife or any other sharp metal tool to remove the bread slices from its interior. Never insert your hand inside the slot. Do not touch the metal parts inside the toaster.
- No liability is accepted for any eventual damage or personal injuries derived from misuse or non-compliance with this instruction manual.
- The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
- This appliance can be used by persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

- Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.
- Keep this appliance and its power cord out of reach of children under the age of 8.

## **INSTRUCTIONS DE SÉCURITÉ**

Veillez lire les instructions de sécurité avant d'utiliser l'appareil. Lisez-les attentivement même si vous êtes déjà familiarisé avec le fonctionnement de ce type d'électroménager.

- Les instructions décrites dans ce manuel réduisent le risque d'incendie, de choc électrique et de blessure, à condition qu'elles soient correctement suivies.
- Conservez le manuel en bon état pour toute référence ultérieure, ainsi que la facture d'achat et la boîte d'origine. Donnez ces instructions en même temps que l'appareil aux nouveaux utilisateurs de l'appareil.
- Veuillez suivre très attentivement ces instructions de sécurité lorsque vous utilisez cet appareil.
- Assurez-vous que le voltage du réseau coïncide avec le voltage spécifié sur l'étiquette de classification de l'appareil et que la prise possède une connexion à terre.
- Ne submergez ni le câble, ni la prise ni aucune autre partie fixe du produit dans l'eau ni dans aucun autre liquide. N'exposez pas les connexions électriques à l'eau. Assurez-vous d'avoir les mains complètement sèches avant de toucher la prise ou d'allumer l'appareil.

## 1. PARTS AND COMPONENTS

Fig.1

1. Main body
2. Crumb-collecting tray
3. Toasting slot
4. Lever
5. Intensity knob (7 levels)
6. STOP button
7. Reheat button
8. Defrost button
9. Bun holder

## 2. BEFORE USE

- This product includes a safety package to protect it during transport.
- Unpack the appliance and keep the original packaging carton and materials in a safe place.
- It will help prevent any damage if the product needs to be transported in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Plastic wrapping can cause suffocation hazards for babies and young children.
- Make sure all packaging materials are out of reach of children.
- Inspect all parts of the appliance for visual damage.
- Unwind the power cord completely and inspect it for damage.
- Do not use the product if it or its cord have been damaged or are not working properly. In case of damage, contact the official Technical Support Service of Cecotec for advice, repairs or returns.
- Remove any adhesive labels and wipe the outside of the toaster with a damp cloth.
- Make sure no packaging materials remain in the toasting slot and no object has fallen inside the toaster.
- Make sure you have read and understood all instructions and warnings in this instruction manual.
- Pay particular attention to the safety instructions on previous pages.
- Place the toaster on an even, heat-resistant surface. Do not place the toaster near heat sources, places with high humidity levels, or combustible materials.
- Plug the toaster into an appropriate wall outlet. The plug must have easy access, so that in case of an emergency, it can be easily unplugged.
- Clean the toaster (read the "Cleaning and maintenance" section). Run the toaster at maximum intensity level for at least 2 minutes.

## ENGLISH

### Note

You may notice a slight burning smell or smoke when using the toaster for the first time, caused by the excess of lubricants from the manufacturing process. Ensure good ventilation and let the toaster complete a few cycles until no odour or smoke can be noticed.

After a short cooling down period, your toaster will be ready for use. The operation instructions are detailed below.

## 3. OPERATION

- Plug the toaster into a power supply and introduce the bread loaves in the product's slots.
- Turn the intensity level knob to the desired position.
- Lower the lever, the toaster will start operating and the Cancel button light will turn on.
- The toaster will eject the bread loaves and will turn automatically off when it has finished toasting.
- Use the extra-lift system to remove the smallest bread pieces.

### Reheat function

- Use this function to reheat cold toasts.
- Introduce the toasts in the toaster and lower the lever. Press the Reheat button to select this function.

### Defrost function

Introduce the toasts in the toaster and lower the lever. Press the Defrost button to select this function.

### Stop function

To stop the toasting process at any time, press STOP.

### Crumb-collecting tray

- The tray is designed to collect the breadcrumbs at the bottom of the device during the toasting process.
- Pull from the crumb-collecting tray to take it out. Empty it and then put it back in its position.

### Bun holder

When necessary, install the bun holder on top of the toaster's rack. Select the desired intensity level and use the lever to start the toasting process.

## 4. CLEANING AND MAINTENANCE

- Unplug the toaster from the mains supply and allow it to cool down completely before disassembling, cleaning, or storing it.
- Do not immerse the toaster, cord, or plug in water or any other liquid.
- Do not clean the inside of the toaster, as it may damage the heating elements.
- Do not use a metal scouring pad, abrasive materials, metal polish, harsh chemical cleaner, or hard objects to clean any surface of the toaster.
- Wipe the outside surfaces of the toaster with a soft cloth or sponge and mild detergent.
- Remove the remaining crumbs after each use.
- Store the toaster in a clean, dry place when not in use. Make sure the appliance is clean and dry, and unplugged from the power supply.
- It is recommended to store the appliance in its original box, which will protect it from dust.
- When storing the toaster, the power cord must be stored in the space to that purpose on the bottom of the appliance. Simply wind the power cord around the hooks.

## 5. TECHNICAL SPECIFICATIONS

Product reference: 03029

Product: Toast&Taste 2 L

Rated power: 1350 W

Voltage and frequency: 220-240 V ~ 50-60 Hz

Made in China | Designed in Spain

## 6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

## 7. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

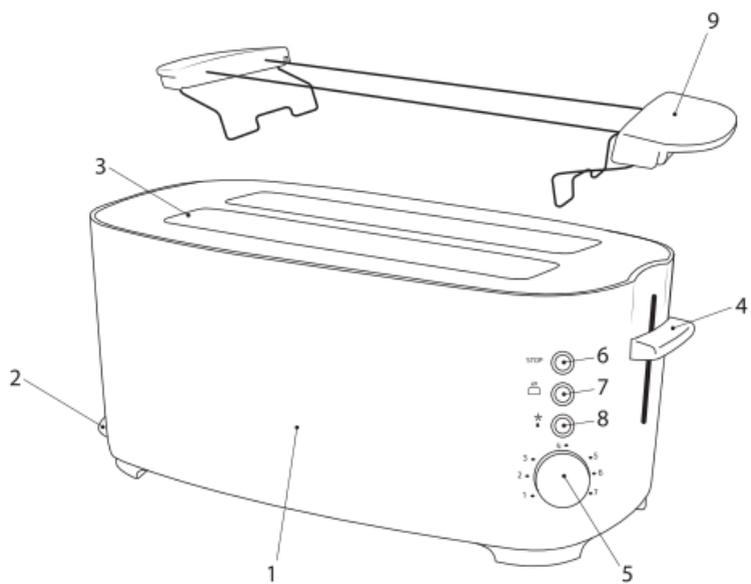


Fig./Img./Abb./Rys./Obr. 1

[www.cecotec.es](http://www.cecotec.es)

Cecotec Innovaciones S. L.  
C/de la Pinadeta s/n, 46930  
Quart de Poblet, Valencia, Spain

EA01210426