

cecotec

PROCLEAN 2110

Microondas/ Microwave



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1

1. Door lock system
2. Display window
3. Shaft
4. Turntable ring assembly
5. Control panel
6. Mica plate
7. Glass turntable
8. Grill
9. Metal grille

NOTE:

The graphics in this manual are schematic representations and may not exactly match the appliance.

2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the appliance when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.
- Use a damp cloth to clean the inside of the appliance and the removable parts. Make sure that all parts are dry before using the appliance.
- Make sure the appliance is switched off before connecting it to a wall outlet.
- The microwave door must be closed in order to operate.
- The appliance must be placed in such way that the plug is accessible and the socket must be properly earthed to avoid electric shocks.
- In case there is any manufacturing remains in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.
- Check that the appliance is not damaged, that the door is not misaligned or bent, that the door seals are in good condition, that the hinges are not broken or loose, and that there are

no dents on the inside or on the door. If any damage is observed, stop using the appliance and contact the official Cecotec Technical Support Service immediately.

3. OPERATION

Fig. 2

Control panel

The microwave panel has 2 selector knobs:

Power knob

Select from 9 settings: 5 microwave power levels, 1 grill function setting, and 3 combinations. The different microwave power levels are as follows:

Low: 18% power

Defrost: 36% power

Medium: 58% power

Medium-high: 81% power

High: 100% power

Timer knob

The cooking or heating time can be programmed from 1 to 30 minutes. Turn the knob clockwise to increase the cooking time. You can turn the knob at any time to increase or decrease the operating time or to stop the microwave.

Using the microwave

- Plug the appliance to a power supply (before switch-on, make sure the timer knob is in the Off position).
- Place the food to be cooked or heated inside the microwave and close the door.
- Turn the Power knob to select the desired heating power:
- Turn the Timer knob clockwise to select the desired operating time. The microwave will start working when the timer is set.
- To stop the microwave during the heating or cooking process before the set time, turn the timer knob to the Off position and open the door.
- When you have finished using the microwave, make sure that Timer knob is in the off position.

Note:

When selecting less than 2 minutes of operation, turn the timer knob past 2 minutes and then back to select the desired time.

Grill cooking

Turn the knob clockwise past the maximum microwave power setting and select the grill function. This function is ideal for cooking steaks, entrecôte, sausages, or breast fillets.

Combinations

The microwave also features 3 combinations of microwave and grill:

Washing programme	Microwave cooking time	Grill cooking time	Suitable for
Comb.1	30%	70%	Fish, potatoes
Comb.2	49%	51%	Pudding, omelette, baked potatoes
Comb.3	67%	33%	Poultry

4. TIPS

- Placing the food: place the thickest parts of the food towards the edge of the turntable. Try to avoid overlapping food.
- Watch the cooking time: cook for the shortest amount of time at first and add more minutes if necessary. Excessive heating of food can lead to smoking or burning.
- Cover food while cooking: covering the food you are going to cook avoids splattering and allows for a more even cooking.
- Turn or stir food 1 time during the cooking process (e.g., hamburgers or steaks).
- Respect pre-heating time. Pre-heating time specified on the food label must not be exceeded.
- Switch the food in the middle of the process, e.g., place the meatballs first on top and then on the bottom, and the meatballs on the outside to the inside and vice versa.
- The use of round or oval plates is recommended rather than square plates, as the food in corners tends to overcook.
- It is important to use materials and containers which are suitable and safe for microwave cooking. The table below shows which materials are suitable and which are not:

Container material	Suitable	Warnings
Browning dish	Yes	Follow the manufacturer's instructions. The bottom of the browning dish must be at least 5 mm above the turntable. A misuse may break the turntable.

Dinnerware	Yes	Suitable for microwaves only. Follow the manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Yes	Always remove the lid. Use them only to slightly heat food. Most glass jars are not heat resistant and may break.
Glassware	Yes	Heat-resistant microwave glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Microwave cooking bags	Yes	Follow the manufacturer's instructions. Do not close with a metal tie. Make slits to allow steam to escape.
Paper towels	Yes	Use to cover food for reheating and absorbing fat. Use with care for short-term cooking/warming only.
Baking paper	Yes	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Yes	Microwave-safe only. Follow the manufacturer's instructions. It must be labelled as "Microwave-safe". Some plastic containers soften, as the food inside gets hot. Boil-in bags and closed plastic bags should be cut or punctured slightly if indicated on the appliance.
Plastic wrap	Yes	Microwave-safe only. Use it to cover food during cooking and retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Yes	Microwave-safe only (meat and candy thermometers).
Aluminium tray	No	May cause arcing. Move food into a microwave-safe dish or container.
Food carton with metal handle	No	May cause arcing. Move food into a microwave-safe dish or container.

Metal or metal-trimmed utensils	No	Metal shields the food from microwave energy. The metal trim could cause an electric arc.
Metal twist ties	No	May cause arcing. Move food into a microwave-safe dish or container.
Paper bags	No	May cause a fire in the microwave.
Plastic foam	No	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	No	Wood may dry out inside the microwave and may split or crack.

5. CLEANING AND MAINTENANCE

Warning


- The appliance, as well as food remains, must be cleaned and removed regularly. Lack of maintenance of the microwave may affect the mica plate and could damage the microwave.
- Disconnect the power cable from the wall socket before cleaning. Do not immerse the appliance in water or any other liquid during cleaning.
- Failure to maintain the appliance in clean conditions could lead to surface deterioration and adversely affect shelf life.
- Never use strong detergents, petrol, abrasive powders, or a metal brush to clean any part of the appliance.
- It is necessary to occasionally remove the turntable for cleaning. Clean the turntable with warm soapy water or in the dishwasher.
- Keep the inside of the appliance clean. Wipe up splashes or spilled liquids with a damp cloth. A mild detergent can be used if necessary. Do not use sprays.
- Do not remove the waveguide cover.
- When the microwave has been used for a long time, some strong odours may arise from inside. To get rid of them, follow one of the steps below:
 1. Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.
 2. Place a glass of red tea inside the microwave and heat it on high power.
 3. Place orange peels inside the microwaves and heat them at high power for 1 minute.
- Use a soft, damp cloth to clean the gaskets, door, interior walls, and turntable. Do not allow water to enter the appliance through the ventilation openings.
- Use a dry cloth to clean the control panel.

- Clean the turntable ring and the base of the microwave periodically to prevent the appliance from making noise. Clean the microwave base with a cloth and mild detergent. The turntable ring can be washed in soapy water or in the dishwasher. After disassembling the ring, make sure you properly put it back in position.

6. TECHNICAL SPECIFICATIONS

Product name: ProClean Z110
Product reference: 01369
Energy consumption: 1100 W (Microwave); 900 W (Grill)
Microwave power: 700 W
Frequency: 2450 MHz
Capacity: 20 litres
Technical specifications may change without prior notification to improve product quality.
Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old machines and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

8. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.