

cecotec

GRANDHEAT 2000 FLATBED BLACK/ WHITE

Microondas digital/

Digital microwave



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1.

1. Control panel
2. View window
3. Door
4. Safety lock system

Control panel

Fig. 3.

1. Display
2. Microwave
3. Defrost
4. Stop/Cancel
5. Start

2. BEFORE USE

Take the product out of the box. If the microwave has a protective film, tear it off before starting operation. Check carefully if there is any damage, and if there is, immediately notify the Technical Support Service.

The product must be placed on a flat, stable and dry place and kept away from corrosive materials, heat and humidity, such as gas burners or water.

The product must be placed in such way that the plug is accessible and must ensure an effective grounding in case of leakage in order to avoid electric shocks.

The microwave door must be closed in order to operate.

In case there is any manufacturing rests in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.

Warning: Do not remove the light brown mica cover that is attached to the microwave cavity to protect the magnetron.

3. PRODUCT INSTALLATION

Countertop installation

Place the appliance on a flat, stable surface.

Fig. 3.

The minimum installation height is 85 mm.

The rear surface of appliance shall be placed against a wall.

Leave a minimum clearance of 30 cm above the microwave, a minimum clearance of 20 cm is required between the microwave and any adjacent walls.

Do not remove the legs from the bottom of the microwave.

Blocking the intake and/or outlet openings can damage the microwave.

Place the microwave as far away from radios and TV as possible. Operation of microwave may cause interference to your radio or TV reception.

Plug the appliance into a power supply.

Warning: Do not install microwave over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the microwave could be damaged, and the warranty would be void.

4. OPERATION

Microwave cooking

Tap the microwave icon once. The default cooking time "0:30" will be displayed on the screen.

Tap the microwave icon several times to select the desired cooking time. The maximum cooking time is 60 minutes.

Tap Start to start cooking. The device will beep once and the countdown will be displayed. The default power level is P100 and cannot be changed.

0---5 min: 30 seconds

5---60 min: 2 minutes

Note: During microwave operation, each press on the Microwave icon will increase the cooking time by 30 seconds.

Time defrost

Tap Defrost to enter the Defrost mode. The microwave will display the default defrosting time "0:30".

Tap Defrost repeatedly to set the desired defrosting time. The maximum time is 60 minutes.

Tap Start to start defrosting. The device will beep once and the countdown will be displayed. The default power level is P35 and cannot be changed.

Note: During the defrosting process, each press on the Defrost icon will increase the set time by 30 seconds.

Notes:

The device will beep every time a key is pressed.

During the configuration of settings, press Stop/Cancel to cancel all the settings. The device will automatically return to standby mode.

ENGLISH

If the door is opened during operation, press start to resume operation.
After a program is set, if Start is not pressed within 1 minutes, the settings will be cancelled.
After a program is finished, the device will beep every 2 minutes for 10 minutes.
In standby mode, press Stop/Cancel for 3 seconds or if there is no operation within 10 minutes, the screen will turn automatically off. Press any key to turn the display on again.

5. CLEANING AND MAINTENANCE

The device, as well as food rests, must be cleaned and removed regularly.
Unplug the cable from the power supply before starting the cleaning. Do not immerse the product in water or any other fluid during cleaning.
The lack of maintenance and cleaning of the product may cause a deterioration on its surface and affect its lifespan.
Do not use strong detergents, powder abrasives or metal brushes to clean the device.
Do not remove the mica plate.
When the microwave has been used for a long time, some strong odours may arise from inside.
In order to get rid of them, follow one of the steps below:
Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.
Place a cup of red tea inside the microwaves and heat it at high power for 2 or 3 minutes.
Place orange peels inside the microwaves and heat it at high power for 1 minute.
Use a dampened soft cloth to clean enclosures, door, interior walls and the door frame.

Warning: All maintenance tasks must be strictly carried out by qualified technical personnel.

6. TROUBLESHOOTING

Problem	Cause	Solution
The device does not turn on	The power cord is not plugged in properly.	Disconnect it and connect it again after 10 seconds.
	Fuse blow or short circuit.	Contact the Technical Support Service of Cecotec.
	Faulty power outlet.	Test the power outlet with a different appliance.
The device does no heat	Door not closed properly.	Close the door properly.
Dim microwave light	In low power microwave operation, the device light may become dim.	It is normal and does not affect the device operation.

Steam accumulating in the door, hot air comes out of the vents.	During cooking, steam may be emitted by foods. Most will get out through vents, some of it may accumulate in the door.	It is normal and does not affect the device operation.
---	--	--

7. TECHNICAL SPECIFICATIONS

01396 GrandHeat 2000 Flatbed Black
 01397 GrandHeat 2000 Flatbed White
 Rated input power: 1150 W
 Rated output power: 700 W
 230 V ~ 50 Hz
 Capacity: 20L
 Made in China | Designed in Spain

8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.