

Hand Blender

User Manual



HBS 6702 W

EN | DE | FR | TR
ES | PL | RO | IT

01M 8834363200-2919-05

beko

Please read this user manual first!

Dear Customers,

Thank you for selecting an Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Materials are intended to be in contact with food.



Do not immerse the appliance, power cord or power plug in water or in other liquids.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

Complies with the WEEE Directive.



It does not contain PCB.
Made in P.R.C.

CONTENTS

ENGLISH	4-8
DEUTSCH	9-16
FRANÇAIS	17-23
TÜRKÇE	24-33
ESPAÑOL	34-42
POLSKI	43-53
ROMANIAN	54-62
ITALIANO	63-70

1

Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance may be used by children and the people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of the reach of children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Wait for moving accessories to stop and unplug the appliance when left attended, while installing/removing accessories or before cleaning.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.
- To prevent overheating, do not use the appliance continuously for more than 10 seconds. Leave to cool for 1 minute in between each 10 seconds of operation.
- Use the appliance only with the supplied rubber base and container.
- Do not operate the appliance without the ingredients in the bowl.

1

Important instructions for safety and environment

- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.
- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- Follow all warnings to prevent injuries due to incorrect use.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.5 Things to do for energy saving

Follow the times recommended in the manual during use. Unplug the appliance after use.

2 Hand Blender

2.1 Overview



1. Speed indicator LEDs
2. Speed control
3. On/Off button
4. Turbo button
5. Motor unit
6. Attachment release buttons
7. Blending attachment
8. Measuring beaker
9. Non-slip base that can be used as a lid as well

2.2 Technical data

Power supply: 220-240 V~, 50/60 Hz

Power: 700 W

Technical and design modifications reserved.

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Operation

3.1 Preparation

1. Remove all packaging and sticker materials and dispose of them according to the applicable legal regulations.
2. Before using the appliance for the first time, clean parts which come into contact with food (see the "Cleaning and care" section).
3. Cut the food into small pieces before processing with the appliance.

3.2 Blending

1. Put the food that you would like to puree or mix in the measuring beaker (8) or a similar bowl.
2. Attach the blending attachment (7) to the motor unit (5) by pushing the attachment to the motor until it locks. Make sure the blending attachment is properly attached to the motor unit.
3. Insert the plug into the wall socket.
4. Immerse the blending attachment (7) in the measuring beaker (8), that contains the ingredients to be blended.



To prevent the ingredients from splashing, do not press the On/Off button (3) or turbo button (4) until the blending attachment (7) has been immersed in the ingredients.

5. Press and hold down the On/Off button (3).
 - The appliance starts operating.
6. Use the speed control (2) to select a speed or press and hold the turbo button (4).
 - The speed indicator LED (1) illuminates according to the desired speed 1-6.



When you use the turbo button (4) the appliance operates at maximum speed. In this case you cannot adjust the speed with the speed control (2).



While using the turbo button (4), all speed indicator LEDs (1) illuminate.

7. Move the appliance slowly up and down and in circles to blend the ingredients.



Always switch off the appliance before taking out the processed food.

8. Release the On/Off button (3) or turbo button (4) when you are finished and disconnect the power plug from the wall socket. Remove the mixture from the measuring beaker (8).
9. Disassemble the blending attachment (7) only by pushing the attachment release buttons (6) at the sides of the appliance and pulling it off from the motor unit (5).



To prevent overheating do not operate the appliance continuously for more than 10 seconds.



Never switch on the appliance for longer than necessary for processing the food.



To prevent overflowing of the mixture do not overfill the measuring beaker (8) or bowl. Smaller amounts are easier to process.



To prevent any accidents use the beaker lid as anti-slip rubber pad by putting the beaker base (9) on the lid.



If you would like to use the blending attachment (7) directly in the pot, first take the pot off the stove to prevent the blending attachment from overheating.

4 Information

4.1 Cleaning and care



WARNING: Never use petrol solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.



WARNING: Do not touch the chopping blades with your bare hands. The blades are very sharp. Use a brush!



WARNING: Never put the motor unit (5) or power cord in water or any other liquids and never hold them under running water.

1. Turn the appliance off and disconnect it from the wall socket.
2. Let the appliance cool down completely.
3. Use a damp soft cloth to clean the motor unit (5).
4. Immediately after using, clean the blending attachment (7), and measuring beaker with warm, soapy water and dry them thoroughly. Never wash them in dishwasher.



Before using or storing the appliance after cleaning, dry all parts carefully using a soft cloth.

4.2 Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged and completely dry.
- Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance will render it non-operational or cause permanent damage.