

cecotec

PROCLEAN 4110

Microondas / Microwave



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1

1. Door safety lock system
2. Microwave window
3. Rotating axis
4. Roller ring
5. Rotary plate
6. Control panel
7. Mica panel
8. Grill

Fig. 2

1. Low power
2. Defrost
3. Medium power
4. Medium-High power
5. High power
6. Grill
7. Combi 1
8. Combi 2
9. Combi 3

2. BEFORE USE

- Take the product out of the box. If the microwave has a protective film, tear it off before starting operation. Check carefully if there is any damage, and if there is, immediately notify the Technical Support Service.
- The product must be placed on a flat, stable and dry place and kept away from corrosive materials, heat and humidity, such as gas burners or water.
- To ensure enough ventilation, minimum distances have to be kept:
 - From the back part to the wall: 10 cm.
 - From the side to the wall: 5 cm.
 - Free distance from the top surface: 20 cm.
 - From the microwave to the ground: 85 cm.
- The product must be placed, at least, at 5 m from the TV, Radio or antenna.
- The product must be placed in such way that the plug is accessible and must ensure an effective grounding in case of leakage in order to avoid electric shocks.
- The microwave door must be closed in order to operate.

ENGLISH

- In case there is any manufacturing rests in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.

Warning:

Never remove the mica plate.

3. PRODUCT ASSEMBLY

- Connect appliance to power outlet. Before connecting it, make sure the timer is set on Zero position.
- Do not block the microwave ventilation screen.
- Place the food on the glass tray and close the door. Food must be placed on a container, never directly on the glass tray.
- Select power level.
- Program timer. If the cooking time is less than 10 minutes, turn the timer knob passed 10 minutes and then take it back to the desired number of minutes.
- Once the timer is programmed the microwave will start operating. If pausing is needed during operation, open the door at any time.
- Once the door is closed again, the product will start operating again.
- When the timer times out and the cooking is finished, a bell will ring and the inside light will automatically turn off. If food is removed from the microwave before the bell rings, make sure you put the timer back to Zero position in order to avoid it from operating empty.

4. OPERATION

Timer

- The maximum cooking time that can be set is 30 minutes.
- Each setting is 1 minute.
- A bell will ring when the cooking process finishes and the timer will go back to Zero position.

Power knob

There are 5 power levels:

High power	100 % power output	Quick cooking
Medium-High power	81 % power output	Normal cooking
Medium power	58 % power output	Slow cooking

Defrost	36 % power output	Defrost
Low power	18 % power output	Keep warm

The following table shows different food's approximate defrosting time:

Food type	Weight	Defrosting time
Meat	0.1~1.0 kg	1:30~26:00
Poultry	0.2~1.0 kg	2:30~22:00
Seafood	0.1~0.9 kg	1:30~14:00

Functions

- Grill: During this function, only heating elements operate. Perfect for broiling sausages, chicken wings, meat, sandwiches etc.
- Combination: Magnetron and heating elements operate in an alternate way. According to food properties, select mode in order to obtain the best result:
- Combi 1: Operating time: 30 % magnetron, 70 % heating elements.
- Combi 2: Operating time: 49 % magnetron, 51 % heating elements.
- Combi 3: Operating time: 67 % magnetron, 33 % heating elements.

Microwave cooking tips

- Food arrangement: Place the thickest food parts towards the edge of the glass tray. If possible, do not overlap food.
- Watch cooking time: Cook for the shortest amount of time at first, and add more minutes in case it is necessary. Over-cooking may result in smoke and burns.
- Cover food while cooking: Covering the food you are going to cook avoids spattering and allows for a more even cooking.
- Flip or stir food once during the cooking process.
- Respect pre-heating time. Pre-heating time specified on the food's label must not be exceeded.

5. CLEANING AND MAINTENANCE

Warning:

The device, as well as food rests, must be cleaned and removed regularly.

- Disconnect the power cord from the wall socket before cleaning. Do not immerse the product in water or any other fluid during cleaning.
- Failure to maintain the product in clean conditions could lead to surface deterioration and could adversely affect the product's shelf life, resulting in possible hazard.

ENGLISH

- Never use strong detergents, gasoline, abrasive powder or metal brush to clean any part of the product.
- Do not remove the wave guide.
- When the microwave has been used for a long time, some strong odours may arise from inside. To eliminate these odours, follow one of the below methods:
- Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.
- Place a cup of red tea inside the microwaves and heat it at high power for 2 or 3 minutes.
- Place orange peels inside the microwaves and heat it at high power for 1 minute.
- Use a dampened soft cloth to clean enclosures, door, interior walls and the door frame.

6. TECHNICAL SPECIFICATIONS

Model: ProClean 4110

Product reference: 01547

Microwave power: 800 W

Grill power: 1000 W

Voltage and frequency: 230 V, 50 Hz

Capacity: 23L

Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

8. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

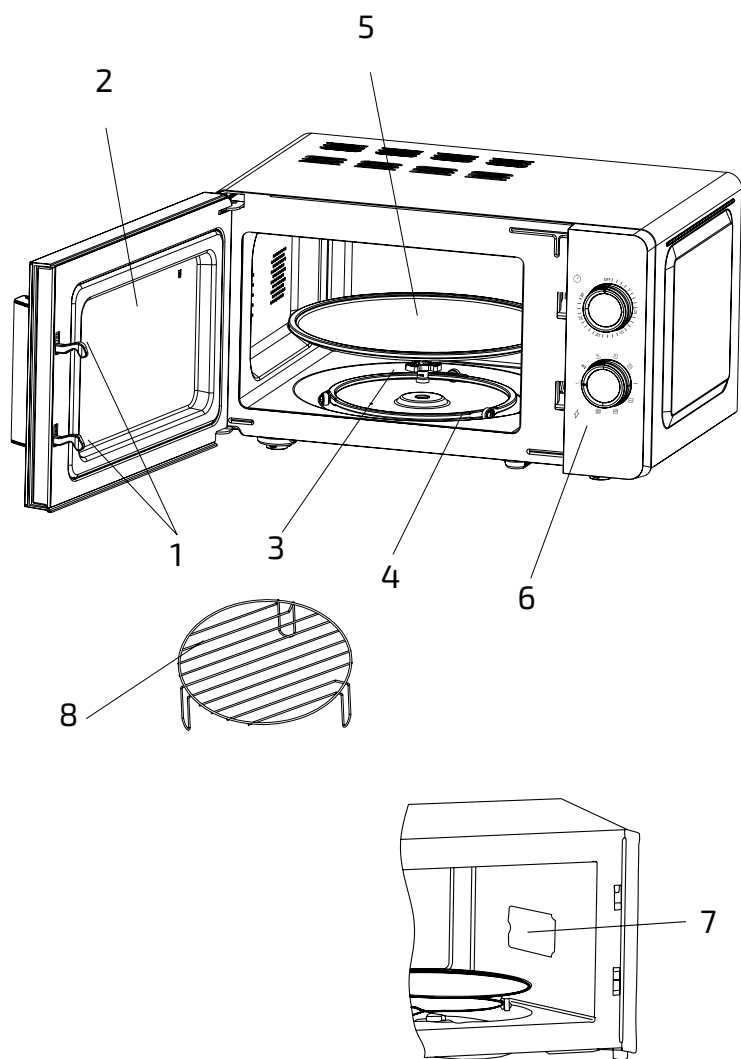


Fig./Img./Abb./Afb./ Rys./Obr. 1

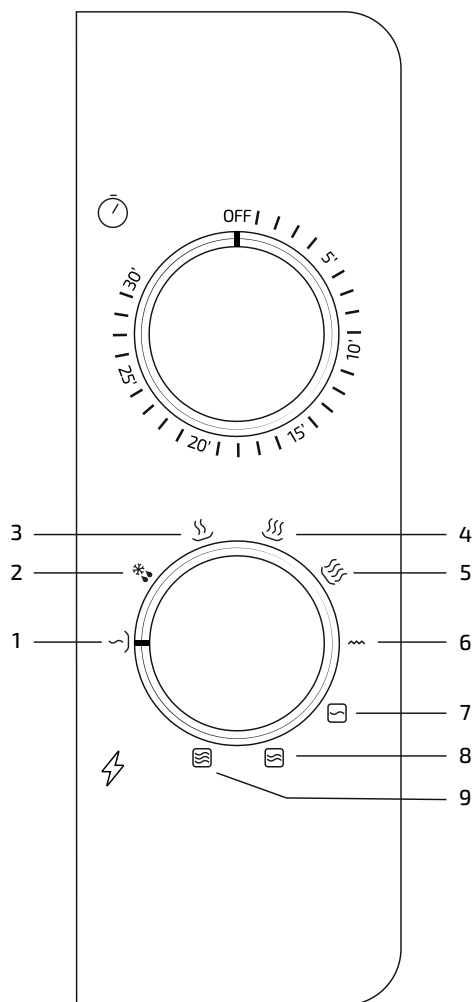


Fig./Img./Abb./Afb./ Rys./Obr. 2

www.cecotec.es

Grupo Cecotec Innovaciones S.L.
C/ de la Pinadeta s/n, 46930
Quart de Poblet, Valencia (Spain)

IC02210203