

# cecotec

## **BOLERO COOLMARKET 2D ORIGIN 215 RED E/ BEIGE E/ BLACK E/ BLUE E/ GREEN E**

Mini frigorífico retro/ Mini retro fridge



## bolero

Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções  
Instrucțiehandleiding  
Instrukcja obsługi  
Návod k použití

## 1. PARTS AND COMPONENTS

Fig. 1

1. Freezer compartment
2. Temperature knob
3. Light switch
4. Shelf
5. Drain plug
6. Drawer cover
7. Drawer
8. Door shelves
9. Bottle holder

### Note:

The graphics in this manual are schematic representations and may not exactly match the appliance.

## 2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the appliance when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.

## 3. INSTALLATION

### Installation

1. Place the refrigerator on a completely flat surface. Leave 5-10 cm between each side of the appliance and the wall, and 30 cm between the top of the appliance and the ceiling.
2. Choose a place that is not exposed to sunlight, high temperatures, or humidity, as moisture can cause stains.
3. Remove the bottom panel before installation.
4. The appliance can be adjusted via its two front support feet. You can raise the appliance by turning them clockwise.
5. Choose a solid and flat surface for installation. Improper levelling and installation can

cause noise and vibrations:

- A. Noise may increase if the floor is not solid.
- B. You can place a sheet under the appliance to solve the heat-emission problem if you need to place it on a carpet.
6. Make sure the adjustable feet are securely on the floor, and adjust the tilt of the appliance slightly backwards to keep the doors securely closed.

## 4. OPERATION

- You can manually control the refrigerator internal temperature via the temperature knob. However, the number displayed on the temperature knob isn't directly indicative of interior temperature.
- The higher the number, the lower the interior temperature.
- 0 means off.
- Turn the temperature knob to 4 for normal use, turn it between 4-7 if you need a lower interior temperature, and between 4-1, if you need a higher interior temperature.

## 5. INSTRUCTIONS ON FOOD STORAGE

### Use precautions

- The appliance may not operate consistently (there may be some defrosting of the contents or the temperature may become too hot) if placed in locations with a temperature outside of the temperature range for which the refrigerator is designed for a long period of time.
- Information on the climatic class of the appliance can be found in the Technical Specifications section and on the appliance marking.
- The internal temperature may be affected by factors such as the location of the appliance, room temperature, door opening frequency, etc., and you should take these factors into account if you decide to use any temperature-control devices.
- It is not recommended to store liquids in glass containers or soft drink cans in the freezer compartment.

### Food location

- Due to the circulation of cold air in the refrigerator, the temperature in each zone is different, so food must be placed in different zones.
- The refrigerator compartment is suitable to store food that does not need to be frozen, cooked food, beer, eggs, some seasonings that need to be kept cold, milk, fruit juice, etc.
- The freezer compartment is suitable to store ice cream, frozen foods, and foods that need to be kept for a long time.

**Shelves:**

To remove the shelf, first lift it up and then pull it out; to refit it, put it back in position before lowering it. Keep the rear edge of the shelf facing upwards to prevent food from coming into contact with the wall.

**Tips on buying frozen food**

- When buying frozen food, pay attention to the storage instructions on the package. You may store each frozen food for the period indicated in the star rating. This is usually the period indicated as "best before" on the front of the package.
- Make sure that the packaging of frozen food is in perfect condition.
- Do not buy frozen foods unless you can freeze them immediately. Special insulated bags are available in most supermarkets and department stores. In them, frozen food is kept cold for a longer period of time.
- Some foods do not require defrosting before cooking. Vegetables and pasta can be added directly to boiling water or steamed. Frozen sauces and soups can be placed in a pan and heated gently until thawed.
- Use quality foods and alter them as little as possible. When food is frozen in small quantities, it takes less time to freeze and thaw.
- Calculate the amount of food to be frozen. When freezing large quantities of fresh food, set the temperature knob to a lower freezing temperature. This way food can be frozen quickly maintaining its freshness.

**Care for food storage**

- Clean and dry food completely before storing it in the refrigerator. Before introducing food in the refrigerator, it is advisable to seal it to prevent water evaporation and thus keep fruit and vegetables fresh on the one hand, and to prevent odours on the other.
- Do not put too much or too heavy food in the refrigerator. Leave enough space between the food; if they are too close together, they will block the flow of cold air, which will affect the cooling effect. Do not store too much or too heavy food to prevent the shelves from bending. When storing food, leave a distance from the interior wall; do not place water-rich food too close to the inner wall of the refrigerator to prevent it from freezing on the interior wall.

**Storing food by category:**

Place daily food items at the front of the shelf so as to reduce the door opening time and avoid food spoilage due to expiry.

**Energy-saving tips:**

Let hot food cool down to room temperature before putting it in the refrigerator. Place frozen food in the refrigeration compartment to defrost them; you can use the low temperature of the frozen food to cool the fresh food to save energy.

**Storing fruits and vegetables**

Please note that some types of fresh vegetables and fruits are sensitive to cold and therefore not suitable for storage in the refrigerator crisper drawer or in the freezer compartment.

**6. CLEANING AND MAINTENANCE**

Before cleaning, disconnect the power plug; do not connect or disconnect the power plug with your hands wet, as there is a risk of electric shock and injury. Do not spill water directly on the refrigerator to avoid rust, electrical leakage and accidents. Do not reach into the bottom of the refrigerator, as you may get scratched by the sharp metal corners.

**Cleaning the interior and exterior**

- Food residues in the refrigerator can cause undesired odours, so you should clean the refrigerator regularly. Clean the refrigerator compartment at least once a month.
- Remove all removable parts, etc., and clean them with a soft cloth or sponge dampened with lukewarm water or neutral detergent.
- Clean the dust that accumulates on the rear panel and side plates of the refrigerator regularly.
- After using neutral detergent, make sure you rinse it with clean water, and then dry it with a cloth.
- Do not use bristle brushes, steel wire brushes, detergent, soap powder, alkaline detergent, benzene, petrol, acid, hot water, or other corrosive elements to clean the refrigerator surface, door gasket, plastic decorative parts, etc. to avoid damage.
- Carefully dry the door gasket and clean the slot with a wooden stick wrapped with cotton. After cleaning, fix the four corners of the door gasket and then gradually push it into the slot in the door.
- If the refrigerator will not be used for a long period of time, unplug it from the mains, empty all food, and clean the appliance, leaving the door ajar to avoid unpleasant odours.

**Power failure or cooling system fault**

- Try to open the refrigerator door as little as possible, so that you can keep food in good condition for hours, even in summer.
- If you receive an early power failure warning:
  1. Set the thermostat knob to the highest setting one hour in advance (do not store new food during this time!). Set the temperature back to the original setting when the power supply returns to normal.
  2. You can also make ice in an airtight container and place it on the top chamber of the refrigerator to extend the shelf life of fresh food.

Note:  
Once you start using the refrigerator, it is best to use it continuously to lengthen its service life.

**Replacing the light bulb**

The refrigerator has a LED light with low consumption and a long shelf life. In the event of an anomaly, please contact the technical support service. Lights or other parts of the appliance may only be replaced by the manufacturer.

**7. TROUBLESHOOTING**

For the following minor malfunctions, please try to solve the problem yourself before contacting the official Cecotec Technical Support Service.






Fault	Possible causes	Possible solutions
The appliance does not work.	The appliance is not connected to the mains. The switches in the electrical installation or the fuses are damaged. There is no power or the fuse trips.	Plug the appliance into the main socket. Power outage or line disconnection.
Abnormal noise.	The refrigerator is not stable. The refrigerator is too close to the wall.	Set the adjustable feet of the refrigerator. Separate the refrigerator from the wall.
Low cooling efficiency.	The food inside is hot or there is too much food. You open the door too often. The door gasket has objects that do not allow to close it completely. The appliance receives direct sunlight or is close to a heat source. It is not well ventilated. The selected temperature is too high.	Store food in the refrigerator when at room temperature. Check and close the door. Remove the refrigerator from the heat source. Ventilate the room. Correct temperature settings.
Unpleasant smells in the refrigerator.	There is spoiled food inside. The refrigerator should be cleaned. Food with a strong odour stored inside the refrigerator.	Dispose of food which is spoiled. Clean the refrigerator. Pack the strong smelling foods.

Note:  
If none of these situations match your problem, do not attempt to disassemble or repair the

appliance by yourself. Repairs carried out by unqualified persons may result in injury or serious malfunctions. Contact the official Cecotec Technical Support Service. The repair must be carried out by an authorised technician and you must use only original spare parts.

**8. TECHNICAL SPECIFICATIONS**

You can find more information on this model by scanning the QR code (and the energy label as well).

Reference:	02751	02752	02753	02754	02755
Model	Bolero CoolMarket 2D Origin 215 Red E	Bolero CoolMarket 2D Origin 215 Beige E	Bolero CoolMarket 2D Origin 215 Black E	Bolero CoolMarket 2D Origin 215 Blue E	Bolero CoolMarket 2D Origin 215 Green E
QR code					
Voltage	220-240 V				
Rated frequency	50 Hz				
Rated current	0.57 A				
Climate class	SN/N/ST				
Refrigerant	R600a / 38 g				
Insulating foam	Cyclopentane				

Refrigerating appliance intended for use at room temperatures between 10°C and 38°C.  
Technical specifications may change without prior notice to improve product quality.  
Made in China | Designed in Spain

## 9. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

## 10. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs are carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

## 11. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

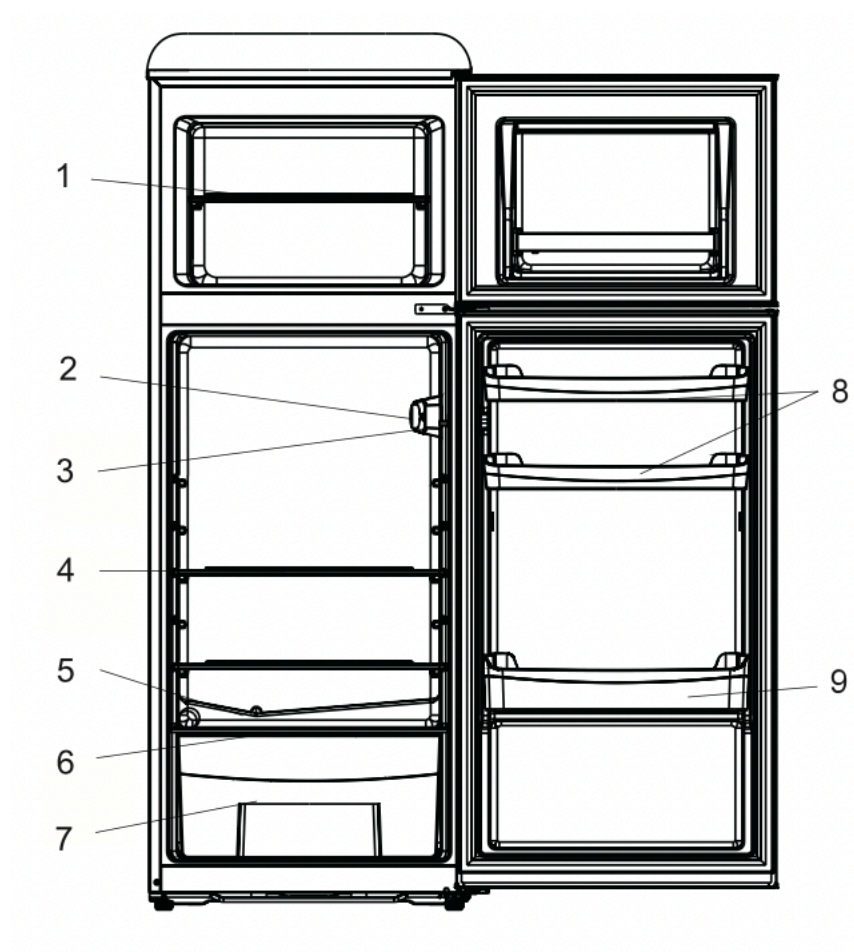


Fig./Img./Abb./Rys./Obr. 1

[www.cecotec.es](http://www.cecotec.es)

Cecotec Innovaciones S. L.  
Av. Reyes Católicos, 60  
46910, Alfafar (Valencia) SPAIN

LI01230510