

# Mixer

## User Manual



HMM7350X

EN



01M-8834003200-2519-02

**beko**

# Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

## Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



**WARNING:** Warnings for dangerous situations concerning the safety of life and property.



Do not immerse the appliance in water.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

This appliance conforms to the WEEE regulation.



It does not contain PCB.  
Made in P.R.C

# CONTENTS

## **1 Important safety and environmental instructions 4**

1.1 General safety .....	4
1.2 Compliance with the WEEE Directive and Disposing of the Waste Product: .....	7
1.3 Compliance with RoHS Directive .....	7
1.4 Package information .....	7
1.5 Plug Wiring .....	8

## **2 Your Mixer 9**

2.1 Overview .....	9
2.2 Technical data.....	9

## **3 Operation 10**

3.1 Intended use .....	10
3.2 Initial use .....	10
3.3 Whisking / Blending .....	10
3.3.1 Whiskers.....	11
3.3.2 Mixer spirals.....	11
3.4 TURBO button .....	11
3.5 Things to do for energy saving .....	11

## **4 Cleaning and care 12**

4.1 Cleaning .....	12
4.2 Storage.....	12
4.3 Handling and transportation.....	12

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

## 1.1 General safety

- This appliance complies with the international safety standards.
- This appliance can be used by people who have limited physical, sensory or mental capacity or who do not have knowledge and experience, provided that they are supervised or they understand the instructions with regard to safe use of the product and potential dangers.
- This appliance cannot be used by children.
- Keep the appliance and the power cable out of the reach of children.
- Do not use it if the power cable or the appliance itself is damaged. Contact an authorised service.

## Important safety and environmental instructions

- Unplug the appliance when left unattended, while installing/removing accessories or before cleaning.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Unplug the appliance before cleaning, disassembly, accessory replacement and wait for it to stop completely.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.
- Remove bones and stones from food to prevent the the appliance from getting damaged.
- This appliance is not suitable for dry or hard foods.

## Important safety and environmental instructions

- To prevent overheating, do not use whisking continuously for more than 10 minutes. Leave to cool for 5 minutes in between each 10 minutes of operation.
- To prevent overheating, do not use mixing with spirals continuously for more than 2 minutes. Leave to cool for 1 minute in between each 2 minutes of operation.
- Follow all warnings to prevent injuries due to incorrect use.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.
- If you keep the packaging materials, store them out of the reach of children.

## 1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

## 1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## 1.4 Package information




Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

## 1.5 Plug Wiring

The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

- **Fiting a different plug**
- As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:
- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E)  $\equiv$  line
- With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

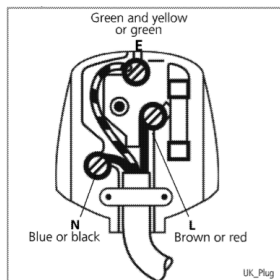



## 2 Your Mixer

### 2.1 Overview



1. Motor unit
2. Accessory slots
3. Accessory release button
4. Operation and speed adjustment button
5. TURBO Button
6. Whiskers (6a/6b)
7. Dough kneading spirals (7a/7b)

### 2.2 Technical data

**Voltage:** 220-240 V~, 50/60 Hz

**Power:** 350 W

Technical and design modifications reserved.

The values which are declared in the markings affixed on your product or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

## 3 Operation

### 3.1 Intended use

This appliance is intended only for household use; it is not suitable for professional use.

### 3.2 Initial use

Clean the appliance parts before initial use (see 4.1).

### 3.3 Whisking / Blending

1. Insert whisking and blending accessories in slots (2) under the mixer.
2. Insert whisking accessory with a round ring (6a) and mixer spiral (7a) into the large slot and other whisking (6b) and mixer spiral (7b) into the small slot in the mixer.



**WARNING:** Do not use whisker accessory together with mixer spirals.



Start mixing in low speed while mixing ingredients. Ingredients may be splattered when you start with high speed.

3. Plug in the appliance.
4. Hold the appliance above the container in which you previously prepared the ingredients for whisking or mixing in an inclined position, pointing the base of the container.



**WARNING:** Place the container to be used for processing on a stable and flat surface.

5. Run the appliance moving the operation button gradually (4) to desired speed level.



**WARNING:** Speed levels range between 1-5. Increase speed by starting with level 1.

6. When whisking/mixing is completed, move operation button (4) to "0" position and wait for it to stop completely.

## 3 Operation



**WARNING:** Set the speed adjustment button to "0" position when processing is over.

7. Unplug the appliance.
8. Press accessory release button (3) and remove accessories.



**WARNING:** When operation button is in "0" position, you can press accessory release button to release whisker and mixer accessories.

### 3.3.1 Whiskers

- Always use both whiskers.
- Teflon-coated pots can be scratched.
- Use for whisking liquid ingredients such as cakes, sauces, soup.

### 3.3.2 Mixer spirals

- Always use both mixer spirals.
- Teflon-coated pots can be scratched.
- Use to knead dough.

### 3.4 TURBO button

When you need extra high speed, press and hold TURBO button and release when you do not need.



**WARNING:** Do not use TURBO feature for more than 1 minute.

### 3.5 Things to do for energy saving

Switch off and unplug the appliance after using it.

## 4 Cleaning and care

### 4.1 Cleaning

**WARNING:**

Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

1. Unplug the appliance before cleaning.
2. Make sure whisker and mixer spirals are at complete stop and remove accessories.
3. Wipe appliance motor unit (1) with a damp cloth.
4. Removed accessories can be washed using a sponge and dish-washing detergent.
5. Dry all parts of the appliance after cleaning.



**WARNING:** Whiskers and kneading spirals are dishwasher safe.

### 4.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance before lifting it.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

### 4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.