


Hand Blender

User Manual

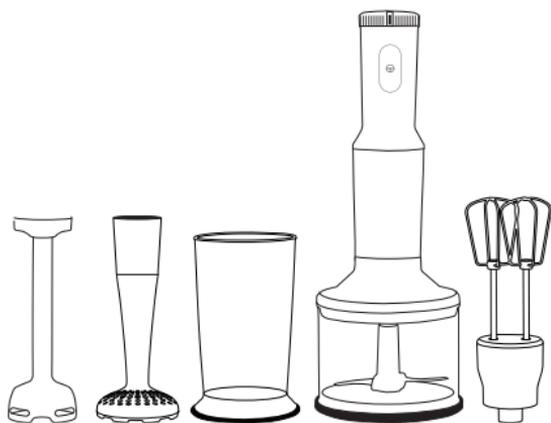

HBA7753DX

EN	DE	FR	TR
PL	RO	IT	SR

01M-8816093200-2619-02

beko

CONTENTS

ENGLISH 10-17

DEUTSCH 18-29

FRANÇAIS 30-40


TÜRKÇE 41-50











POLSKI 51-62













ROMANIAN 63-74








ITALIANO 75-85

СРПСКИ 86-95

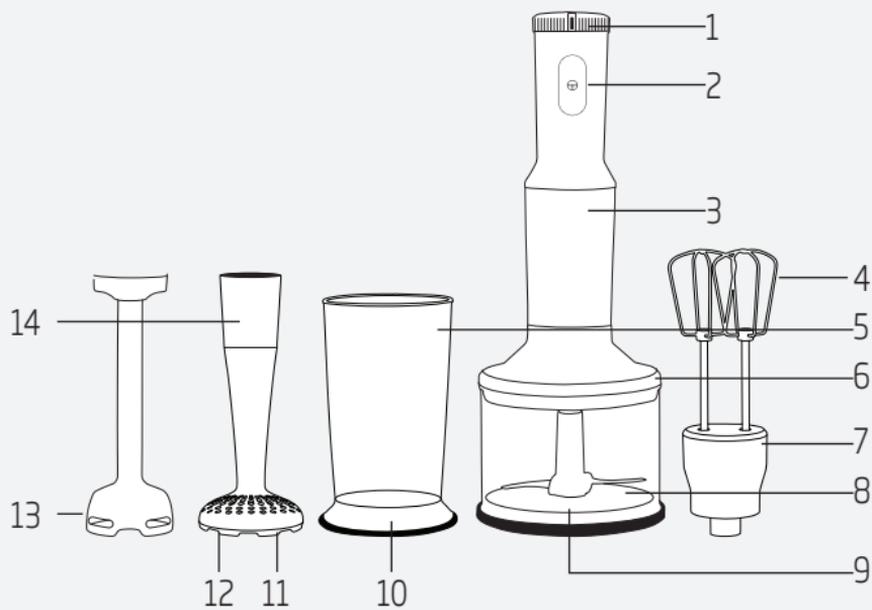

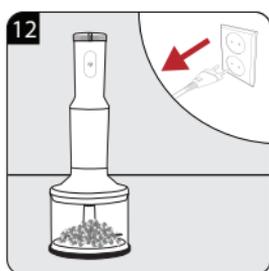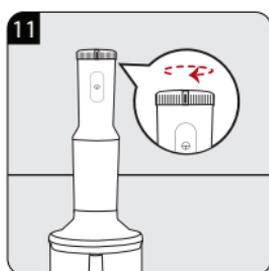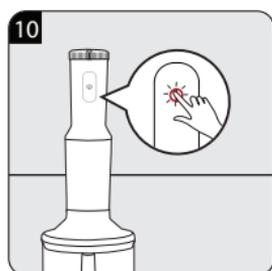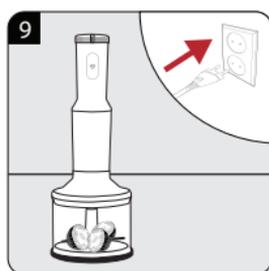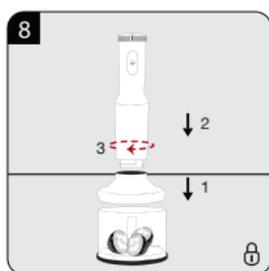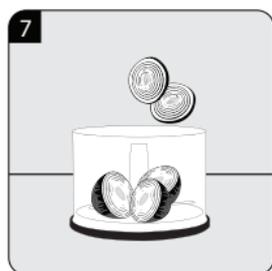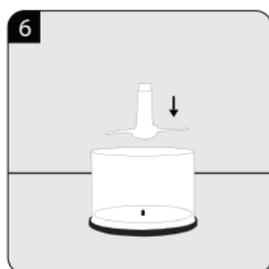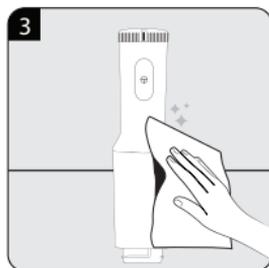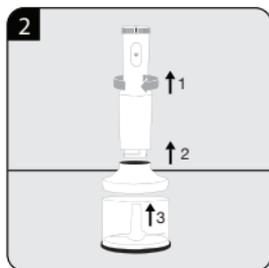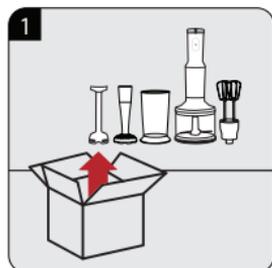

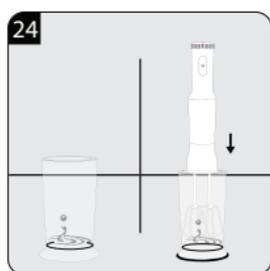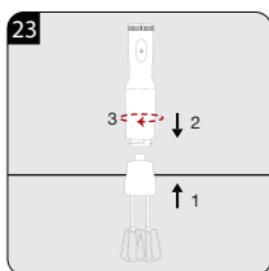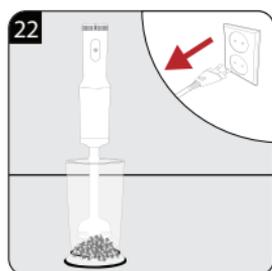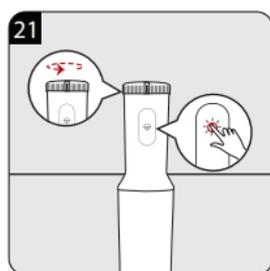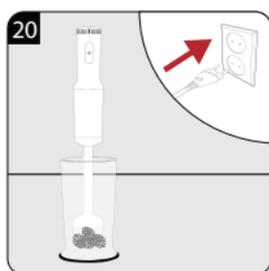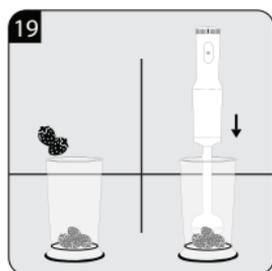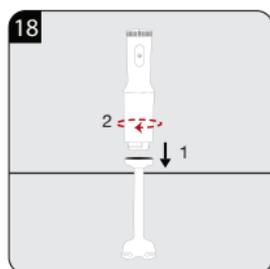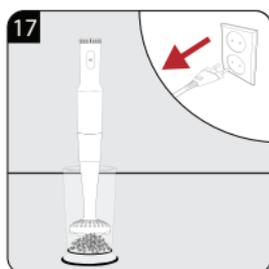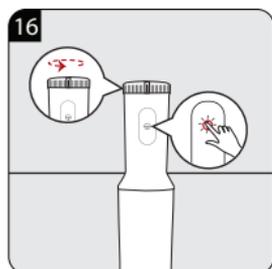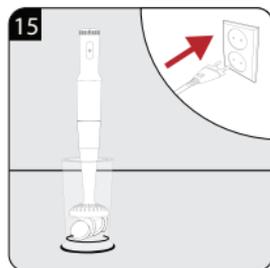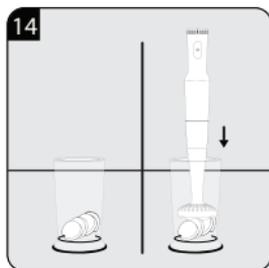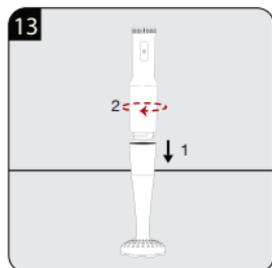

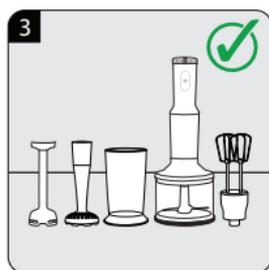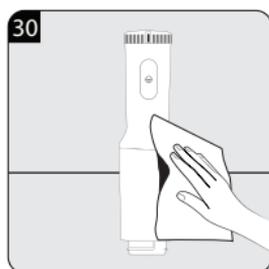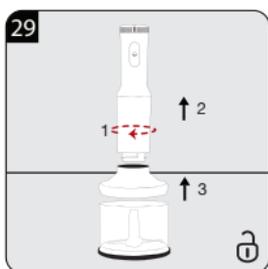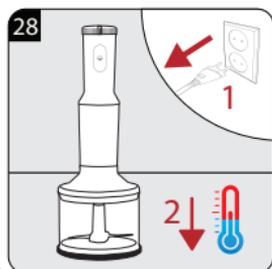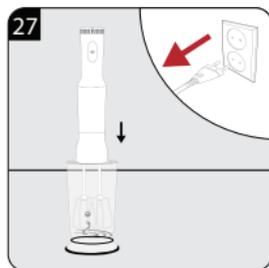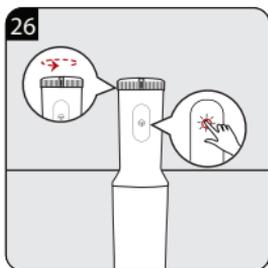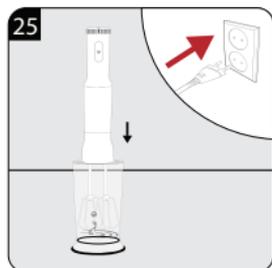

		
EN	OPERATION	CLEANING AND CARE
DE	BETRIEB	REINIGUNG UND PFLEGE
FR	FONCTIONNEMENT	NETTOYAGE ET ENTRETIEN
TR	KULLANIM	TEMIZLEME VE BAKIM
PL	OBSŁUGA	CZYSZCZENIE I KONSER- WACJA
IT	UTILIZZO	PULIZIA E CURA
RO	UTILIZARE	CURĂ AREA ȘI ÎNGRIJIREA
SR	UKOVANJE	ČIŠĆENJE I ODRŽAVANJE
AR	التشغيل	التنظيف والعناية

Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Do not immerse the appliance, power cable, or power plug in water or any other liquids.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

This appliance conforms to the WEEE regulation.



It does not contain PCB.
Made in P.R.C

1. Speed adjustment button
2. Operating switch
3. Motor unit
4. Double beater
5. Measuring beaker
6. Chopping lid
7. Whisk holder
8. Chopping bowl
9. Chopping blade
10. Non-slip rubber base (cover)
11. Masher blade
12. Masher
13. Blending shaft
14. Masher head

- Blade protector

Technical data

Voltage: 220-240 V~, 50-60 Hz

Power: 750 W

Technical and design modifications reserved.

The values which are declared in the markings affixed on your product or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

1 Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance may be used by children and the people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of the reach of children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.

1 Important safety and environmental instructions

- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Wait for moving accessories to stop and unplug the appliance when left attended, while installing/removing accessories or before cleaning.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.
- Use the appliance only with the supplied rubber base and glass container.
- Do not operate the appliance without the ingredients in the bowl.
- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.

1 Important safety and environmental instructions

- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- Follow all warnings to prevent injuries due to incorrect use.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.

1 Important safety and environmental instructions

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 Operation

2.1 Intended use

This appliance is intended only for household use; it is not suitable for professional use.

It is designed for chopping and whisking small amounts of solid food only.

2.2 Maximum quantities and processing time

- Refer to the table for processing time and maximum quantities.

Attachments	Ingredients	Operation time
Blender leg	150g carrot (cut-into 1.5cm cubes) and 300ml water	20 seconds
Mini Chopper	200g meat	20 seconds
Potatoes leg	300g cooked potato	1 minute
Whisker	4 egg whites	180 seconds



When you do not exceed 10 seconds in intermittent uses, you can operate the appliance until the end of the process by waiting for a couple of seconds.

2 Operation

2.3 Blending and chopping with the blending shaft



- Turn speed adjustment button (1) to gradually increase speed.
- Start mixing in low speed while mixing ingredients. Ingredients may be spattered when you start with high speed.
- You can get better results if you make circular movements with the appliance during processing.



WARNING: Do not touch the blades with your bare hands.

2.4 Chopping



- Do not chop extremely hard items such as coffee beans, ice cubes, nutmeg, grains or bones. Remove stalks from herbs, shells from nuts and bones, tendons and gristle from meat.
- Cut the food in small pieces.
- During operation always hold the chopping bowl (8) with one hand to prevent it from tipping over.
- Do not use the appliance continuously for more than 10 seconds.
- To achieve the best results press the operation button (1) intermittently.

2 Operation



WARNING:

- Be careful when inserting the chopping blade (9) as it is very sharp.
- Do not touch the chopping blade (9) with bare hands.
- Never operate the appliance if the chopping lid (6) is not properly seated on the chopping bowl (8), as this could damage the chopping blade (9)

Mixture Butter + Honey

Butter taken from the freezer (should be kept in the freezer for min. 4 hrs. and cut into pieces of sizes approximately 10-15 mm x 35-40 mm) and honey taken from the refrigerator (should be kept in the refrigerator min. 1 day).

2.5 Potato Masher



WARNING:

- Make sure that the potatoes for which you are going to use the masher are well-boiled. Otherwise, the masher may get damaged.

3 Cleaning and care

3.1 Cleaning



WARNING:

- Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.
- Do not touch the chopping blades (9) with your bare hands. The blades are very sharp. Use a brush!
- Never put the motor unit (3) or power cord in water or any other liquids and never hold them under running water.
- Do not wash the blending shaft (13) in dishwasher.
- Never immerse inner part of blending shaft (13), the motor unit (3) or power cable in water or in any other liquid.

3.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance before lifting it.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

3.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.