



IRONHERO 1200 MANNEQUIN DRY

Maniquí de secado y planchado para todo tipo de prendas/

Drying and ironing mannequin for all types of clothes.




Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instructiehandleiding
Instrukcja obsługi
Návod k použití

SAFETY INSTRUCTIONS

Before using the device, read the following instructions carefully. Keep this instruction manual for future reference or new users.

- All safety instructions must be closely followed when using the device.
- When using electrical and electronic devices, basic precautions must always be followed to reduce the risk of fire, electrical shock, and injury.
- This device is designed for domestic use only and is not intended for bars, restaurants, farmhouses, hotels, motels, and offices.
- **WARNING:** the device is designed for drying water-washed textiles only.
- Do not use this device to iron delicate fabrics such as wool or similar. Always follow the drying and ironing instructions on the fabric label.
- This device can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved. Children must not play with the device. Cleaning and user maintenance should not be carried out by unsupervised children.
- Supervise children to prevent them from playing with the device.
- Defects caused by improper use, damage, or attempts at self-repair are excluded from the warranty. Defects caused by wear and tear are also excluded.

-  This symbol means: CAUTION: hot surface. The temperature of the accessible surfaces of the device may be hot when the device is in operation.
- The motor and telescopic tubes heat up during operation. Do not touch them during or immediately after use.
- Switch off and unplug the device from the mains when not in use and before assembly/disassembly or cleaning.
- Check the power cord for visible damage. If the cord is damaged, it must be replaced by the manufacturer, the supplier, or qualified personnel to avoid hazards.
- Let the device cool down completely before storing it.
- Keep all packaging materials away from children.
- Always place the power cord so that it does not pose a hazard.
- Do not move the device during use.
- Plug the device to a properly installed socket. The mains socket must be accessible to allow for quick unplugging if necessary. The mains voltage must match the technical data of the device. Do not use extension cords.
- Do not immerse the cord, plug, or any other part of the device in water or any other liquid or expose electrical connections to water. Make sure your hands are dry before handling the plug or switching on the device.
- If the device falls into water or comes into contact with any liquid, unplug it immediately from the power supply. Do not attempt to take the device out of the water if still plugged in. Should it fall into water, refer to a qualified specialist before resuming use.
- Do not use the device in damp environments.
- Do not use the device in rooms with easily flammable dust or toxic/explosive vapours.
- Do not use the device near flammable materials.

- Do not connect the device to a multi-socket adaptor shared by other high-voltage devices to avoid overloads and possible short circuits (fire).
- Avoid damaging the device in any way.
- Place the device on a dry, stable, and heat-resistant surface. Leave enough space on the sides and top of the device.
- Do not place the device under other electronic devices.
- The device must be switched off when plugged to or unplugged from the mains. To disconnect the device from the mains, pull from the plug and never from the cord.
- Never cover the ventilation outlets or insert objects in them.
- Make sure the cord is not crushed, bent, or stretched over sharp edges and that it does not touch hot surfaces.
- Protect the device from heat, flames, extreme temperatures, moisture, and shocks.
- Never use caustic or abrasive cleaning agents to clean the device.

INSTRUCTIONS DE SÉCURITÉ

Veuillez lire les instructions suivantes avec attention avant d'utiliser l'appareil. Gardez bien ce manuel pour de futures références ou pour tout nouvel utilisateur.

- Veuillez suivre ces instructions de sécurité très attentivement lorsque vous utilisez l'appareil.
- Lors de l'utilisation d'appareils électriques, il faut toujours prendre des précautions afin de réduire le risque d'incendies, de décharges électriques ou de lésions.
- Cet appareil est conçu pour un usage domestique uniquement et ne doit pas être utilisé dans les bars, restaurants, fermes, hôtels, motels et bureaux.
- AVERTISSEMENT : cet appareil est uniquement conçu pour le

1. PARTS AND COMPONENTS

1. Hanger
2. Telescopic rod
 - a. Lower rod
 - b. Upper rod
3. Fan
4. Motor unit
5. Ventilation slots
6. Control panel
7. Mounting flange
8. Height-adjustment clip
9. Collar section
10. Balloon for top and bottom garments
11. Y-shaped bracket
12. Non-drip protector
 - c. Support rod
13. Counterweight clamps

Control panel. Fig. 2

1. Power button
2. Timer increase button
3. Timer decrease button
4. Temperature setting button
5. Air-speed setting button
6. Temperature/speed indicator
7. Timer indicator

Note:

The graphics in this manual are schematic representations and may not exactly match the product.

2. BEFORE USE

- This device is packaged in a way as to protect it during transport. Take the device out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent product damage when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.



- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.
- **WARNING:** hot surface. The motor unit and telescopic rod heat up during operation. Do not touch them during or immediately after use.
- Follow the drying instructions for the fabrics you wish to dry.
- Never cover the ventilation outlets or insert objects in them.

Box content

- IronHero 1200 Mannequin Dry drying and ironing mannequin
- 2 telescopic rods
- Support rod
- Y-shaped bracket
- Hanger
- Non-drip protector
- Balloon for top garments
- Balloon for bottom garments
- 4 counterweight clamps
- Instruction manual

3. OPERATION

Instructions on the control panel

1. Power button: press this button to turn the device on or off.
2. Timer increase/decrease button: you can set the timer to 15, 30, 60, 90, 130, or 180 minutes. Press the corresponding button to adjust the timer. A countdown will start and last for the duration of the set time.
3. Temperature setting button: you can adjust the temperature by pressing  and select between room temperature () , 50 °C, and 60°C if speed is set to LOW and 70 °C if speed is set to HIGH.
4. Air-speed setting button: press this button to select LOW or HIGH air-speed level.

Assembly

The device includes two telescopic rods that can be used at the same time thanks to the Y-shaped bracket for bottom or heavy garments, or you can use a single rod for lighter garments such as shirts.

Assembly for top garments

1. Insert the left and right hangers into the collar section. Fig. 3
2. Loosen the height-adjustment clip and pull the upper rod (a) to adjust the height. Once

ENGLISH

adjusted the rod, re-tighten the clip. Fig. 4

3. Insert the upper rod (a) into the hole at the bottom of the collar section of the hanger. Fig. 5
4. Insert the non-drip protector into the lower rod (c). Fig. 6
5. Insert the above assembly into the hole on the surface of the motor unit as shown in Figure 7.
6. Fix the balloon for top garments to the mounting flange and make sure that no air leaks from the bottom. The seam of the balloon should coincide with the centre of the edge of the motor unit as much as possible. Fig. 8-9
7. Dress the balloon with the garment (as shown in Figure 10) and ensure the following:
 - The collar of the garment is well positioned.
 - That the buttons (if the garments has any) are centred on the front of the balloon.
 - The arms of the balloon fit with the sleeves of the garment and do not wrinkle or twist.
 - The garment is fully buttoned.

Warning

Make sure the balloon is well fixed to the mounting flange and that there are no air leaks.

Assembly for bottom garments

1. Remove the hanger and collar section assembly. Fig. 11
2. Loosen the height-adjustment clip and pull the upper rods (a) to adjust the height. Once the desired height has been set, re-tighten the clip. Fig. 12
3. Insert the lower rods (b) into the Y-shaped bracket. Fig. 13
4. Insert the support rod (c) into the bottom of the Y-shaped bracket. Then insert the non-drip protector into the support rod (c). Fig. 14-15
5. Insert the above assembly into the hole on the surface of the motor unit as shown in Figure 16.
6. Fix the balloon for bottom garments to the mounting flange and make sure that no air leaks from the bottom. The seam of the balloon should coincide with the centre of the edge of the motor unit as much as possible. Fig. 17-18
7. Dress the balloon with the bottom garment and make sure it fits well and does not twist or wrinkle. All buttons and zips (if there are any) must be fastened. Fig. 19

Warning

Make sure the balloon for bottom garments is well fixed to the mounting flange and that there are no air leaks.

Using the counterweight clamps

1. The counterweight clamps help to better stretch the garment vertically for improved ironing.

2. Attach a counterweight clamp on the end of each sleeve. Fig. 20
3. Place two counterweight clamps at the bottom centre (back and front) of the shirt. Fig. 21

Tips for use

- The drying/ironing process should last between 15 and 30 minutes for best results. However, the duration may vary depending on the material and thickness of the garment. It is advisable to start the process with a short time setting and increase it if necessary.
- The balloon can be enlarged or reduced in size with the help of the zips on the sides. For small sizes, the zips must be closed. For large sizes, the zips must be opened.
- Shirts with large buttons may cause the button band to slightly crease during ironing. In this case, it is advisable to manually re-iron the button band.

4. CLEANING AND MAINTENANCE

- Unplug the device from the mains and let it to cool down completely before cleaning.
- Never immerse the device in water or other liquids.
- Never use caustic or abrasive cleaning agents to clean the device, as they could damage the surface.
- If necessary, you can clean the device and the balloon with a slightly damp cloth and a little neutral detergent. Wipe them with a dry cloth. Both balloons can be machine-washed.
- Allow all parts to dry completely before storing them.
- Store the device and all its accessories in a dry, clean, and safe place, where it is protected from direct sunlight and out of the reach of children or animals.

5. TROUBLESHOOTING

WARNING:

Do not attempt to repair the device yourself. If the problem persists after the checks explained below, contact a qualified electrician, authorised personnel, the store where you purchased the product, or the official Cecotec Customer Service.

<p>The device does not work. The LED light does not turn on.</p>	<p>The plug is not correctly inserted into the socket. Plug it in correctly. The socket is damaged. Try another socket. Check the fuse of the mains connection. The device wasn't switched on. Set the timer to any value to check.</p>
--	---

ENGLISH

Unusual noise.	The ventilation slots are covered or obstructed. Clear the obstruction.
The device suddenly turns off.	<p>The ventilation slots are covered or obstructed. Clear the obstruction.</p> <p>The device has an automatic safety shut-off function. It will automatically switch off in case of overheating. Let the device to cool down and switch it back on.</p> <p>The device fell. The device has a safety system that activates in the event of a fall. Position the device correctly and switch it back on.</p> <p>The set time has elapsed. Re-set the timer.</p>
Strange odours.	You may notice a slight odour when using the appliance for the first time; this is due to manufacturing residues. This is normal and won't adversely affect operation.

6. TECHNICAL SPECIFICATIONS

Model: IronHero 1200 Mannequin Dry / X/ M / S / T
Reference: 08500 / 08501 / 08502 / 08503 / 08504
Voltage: 220-240 V~ 50/60 Hz
Power: 1200 W
Protection: II

Technical specifications may change without prior notice to improve product quality.
Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old devices and/or their batteries.

Compliance with the above guidelines will help to protect the environment.

8. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs are carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

9. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

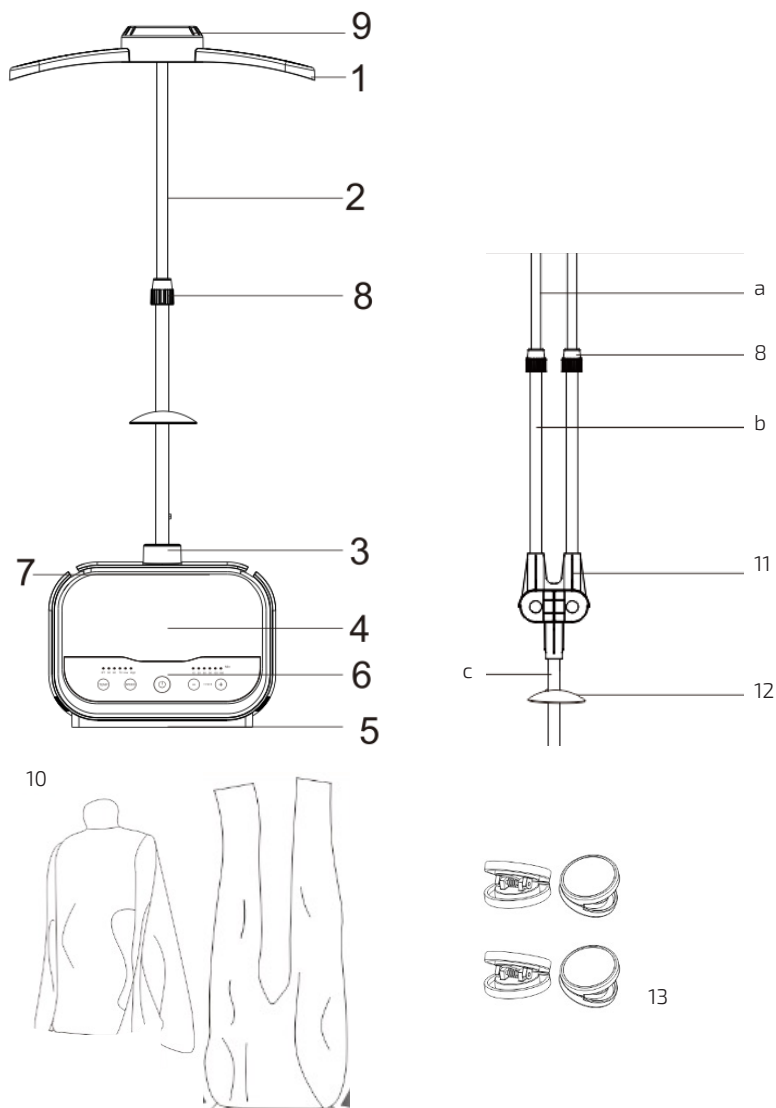 


Fig./Img./Abb./Afb./ Rys./Obr. 1

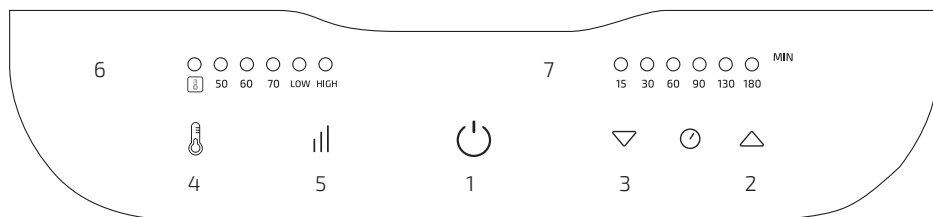 


Fig./Img./Abb./Afb./ Rys./Obr. 2

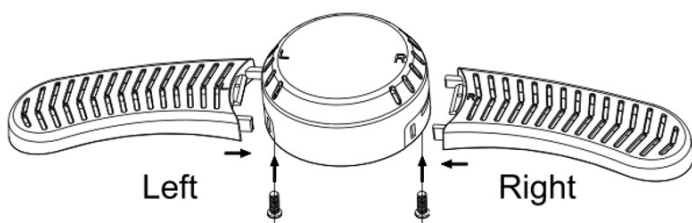 


Fig./Img./Abb./Afb./ Rys./Obr. 3

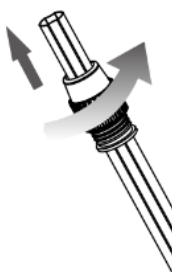 


Fig./Img./Abb./Afb./ Rys./Obr. 4

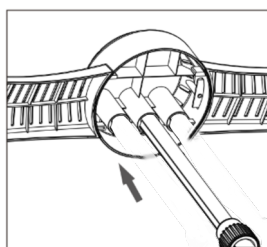 


Fig./Img./Abb./Afb./ Rys./Obr. 5

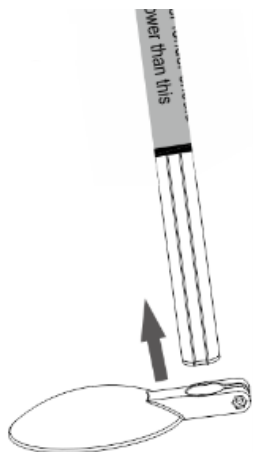 


Fig./Img./Abb./Afb./ Rys./Obr. 6

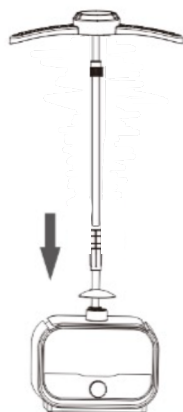 


Fig./Img./Abb./Afb./ Rys./Obr. 7



Fig./Img./Abb./Afb./ Rys./Obr. 8

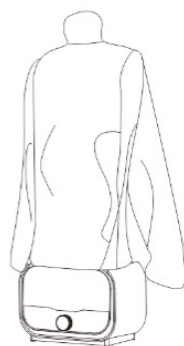 


Fig./Img./Abb./Afb./ Rys./Obr. 9



Fig./Img./Abb./Afb./ Rys./Obr. 10

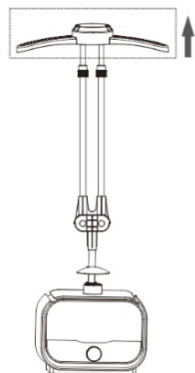 


Fig./Img./Abb./Afb./ Rys./Obr. 11

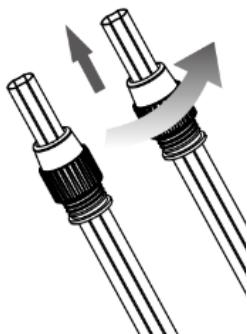 


Fig./Img./Abb./Afb./ Rys./Obr. 12



Fig./Img./Abb./Afb./ Rys./Obr. 13

 


Fig./Img./Abb./Afb./ Rys./Obr. 14

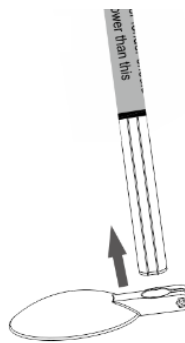 


Fig./Img./Abb./Afb./ Rys./Obr. 15

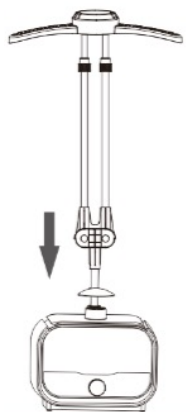 


Fig./Img./Abb./Afb./ Rys./Obr. 16

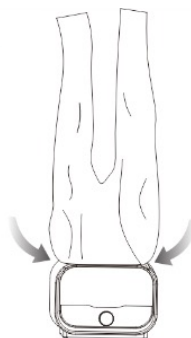 


Fig./Img./Abb./Afb./ Rys./Obr. 17



Fig./Img./Abb./Afb./ Rys./Obr. 18

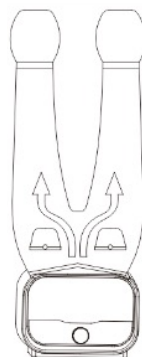 


Fig./Img./Abb./Afb./ Rys./Obr. 19



Fig./Img./Abb./Afb./ Rys./Obr. 20

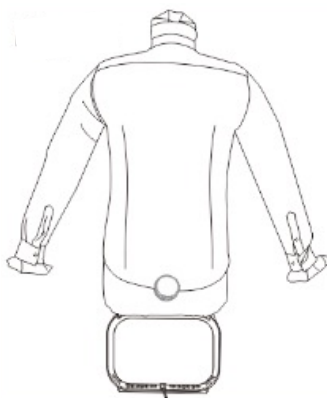 


Fig./Img./Abb./Afb./ Rys./Obr. 21

www.cecotec.es

Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

EA01230227