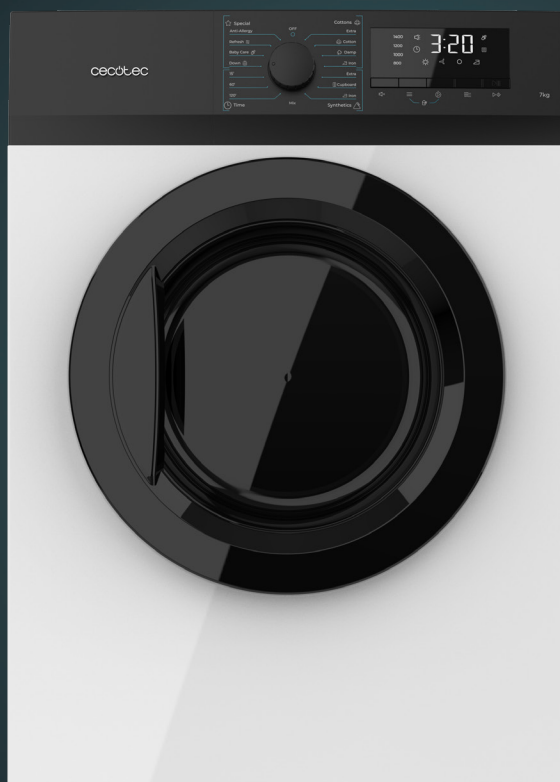


# cecotec

## BOLERO DRESSCODE DRY 7200V C

Secadora de evacuación / Vented tumble dryer



# bolero

Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções  
Handleiding  
Instrukcja obsługi  
Návod k použití  
Kullanma kılavuzu

NOTA	4
Instrucciones de seguridad	5
Safety instructions	15
Instructions de sécurité	24
Sicherheitshinweise	34
Istruzioni di sicurezza	45
Instruções de segurança	54
Veiligheidsinstructies	64
Instrukcja bezpieczeństwa	74
Bezpečnostní pokyny	84
Güvenlik talimatları	93

## ÍNDICE

1. Piezas y componentes	103
2. Antes de usar	103
3. Instalación	104
4. Preparación de las prendas	106
5. Funcionamiento	108
6. Limpieza y mantenimiento	113
7. Resolución de problemas	114
8. Especificaciones técnicas	115
9. Reciclaje de aparatos eléctricos y electrónicos	116
10. Garantía y SAT	117
11. Copyright	117

## INDEX

1. Parts and components	118
2. Before use	118
3. Installation	119
4. Laundry preparation	121
5. Operation	123
6. Cleaning and maintenance	128
7. Troubleshooting	128
8. Technical specifications	130
9. Disposal of old electrical and electronic appliances	130
10. Technical support and warranty	131
11. Copyright	131

## SOMMAIRE

1. Pièces et composants	132
2. Avant utilisation	132
3. Installation	133
4. Préparation du linge	135
5. Fonctionnement	137
6. Nettoyage et entretien	142
7. Résolution de problèmes	143
8. Spécifications techniques	144
9. Recyclage des équipements électriques et électroniques	145
10. Garantie et SAV	146
11. Copyright	146

## INHALT

1. Teile und Komponenten	147
2. Vor dem Gebrauch	147
3. Montage	148
4. Vorbereitung der Kleidungsstücke	150
5. Bedienung	152
6. Reinigung und Wartung	157
7. Problembehebung	158
8. Technische Spezifikationen	160
9. Recycling von Elektro- und Elektronikgeräten	160
10. Garantie und Kundendienst	161
11. Copyright	161

## INDICE

1. Parti e componenti	162
2. Prima dell'uso	162
3. Installazione	163
4. Preparazione degli indumenti	165
5. Funzionamento	167
6. Pulizia e manutenzione	172
7. Risoluzione dei problemi	173
8. Specifiche tecniche	174
9. Riciclaggio di apparecchiature elettriche ed elettroniche	175
10. Garanzia e SAT	175
11. Copyright	175

## 1. PARTS AND COMPONENTS

Fig. 1

1. Control panel
2. Door
3. Appliance body
4. Adjustable feet
5. Thermostat reset button
6. Side ventilation outlet
7. Ventilation hose cover
8. Rear ventilation outlet

### NOTE:

The graphics in this manual are schematic representations and may not exactly match the device.

## 2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place to prevent damage to the device if you need to transport it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.
- Make sure that the electrical connections comply with the installation instructions.
- Remove the polystyrene protection parts and any other packaging material from the drum.
- Before using the dryer for the first time, it is recommended to put some damp cloths inside the drum and set a drying cycle of 30 minutes. This process will help to remove any dust or dirt that may be inside the dryer.

### Box content

- Dryer
- Extraction tube
- Instruction manual

### 3. INSTALLATION

- Do not place the dryer on the power cable.
- The electrical installation of this appliance must be carried out by a professional electrician or qualified technician.
- If the dryer has to be moved, transport it vertically.
- Remove all packaging before starting the dryer.
- Open the bag with the accessories and check that none are missing.

Warning:



This tumble dryer is not suitable for use as a built-in appliance.

#### **Suitable location for installation**

- For convenience, it is recommended to install the dryer next to or near the washing machine.
- During the drying cycle, it is normal for the dryer to emit a certain amount of warm, moist air, which should be exhausted from the room as soon as possible to prevent condensation from forming. This can usually be achieved organically by installing the dryer in a well-ventilated room or near an open window. However, it is advisable to exhaust the air inside the dryer to the outside using the vent hose supplied with the appliance. The hose can be led outside through a window or permanently connected to a wall vent.
- Avoid installing the dryer in a place where dirt tends to accumulate.
- Make sure that no objects or materials obstruct the air inlet grilles at the rear of the dryer.
- To minimise vibration and noise during use, the dryer should be placed on a stable and level surface.

Note: if the floor is uneven, adjust the adjustable feet. Do not place wood pegs or other supports under the base of the feet.

#### **Level adjustment**

- If the dryer is not properly levelled, vibrations may occur.
- To check that the appliance is stable, stick it to a corner or wall and push it towards it slightly. If you notice that the appliance moves, it is not level, and you will need to readjust the feet.

NOTE: do not place objects that may reduce the space between the dryer and the floor, such as carpets or wood, as this may cause heat to build up and affect the proper functioning of the appliance.

Warning

The hot air emitted by the dryer can reach temperatures up to 60 °C. Therefore, avoid installing it on floors that are not resistant to high temperatures.

### Adjustable feet

Turn the feet to the right and left until the dryer is level and the feet are firmly placed on the floor. Fig. 2



Do not remove the feet under any circumstances.

### Connecting the vent hose. Fig. 3

Note: to facilitate the installation of the ventilation hose, the dryer has two vent outlets: one at the rear and one on the left side.

1. Connect the ventilation hose to the vent outlet of your choice.
2. To connect to the rear vent outlet, pull the nozzle (A) from the outlet and align the arrows on the hose with the arrows on the nozzle.
3. Thread the hose in the direction of the arrow and push it firmly until it clicks into place.
4. Then, seal the unused vent outlet with the supplied vent hose cover (B).

### Tips

- If the ventilation hose is too long and the room temperature is low, moisture may condense inside the hose. This is a normal phenomenon.
  - To prevent waste water from collecting in the hose or flowing back into the dryer, it is recommended to drill a small hole ( $\varnothing$  3 mm) in the bottom of the hose and place a container just below to collect the condensed water.
5. Once connected to the dryer, route the vent hose to the desired outdoor outlet.
- NOTE: avoid kinking the hose as much as possible.
6. If you choose to connect the hose to a fixed wall vent, contact a qualified technician for installation.


### Warning

- Do not connect the vent hose to a hood, chimney or flue that is designed to exhaust fumes from other combustion appliances.
- To avoid condensation problems, it is essential that the dryer is equipped with a flexible hose that allows the hot air from the appliance to be channelled to the outside.
- To prevent the appliance from overheating, it is important that the vent outlet is not obstructed.
- If the dryer is installed next to other kitchen units, make sure that they do not crush the vent hose. If the hose is slightly crushed, the drying efficiency will be reduced, which will prolong the drying time and increase energy consumption. If the hose is fully crushed, the dryer's safety circuit breakers may be activated.

### Electric connection

The electrical installation of this appliance must be carried out by a professional electrician or qualified technician.

## Warning

-  This appliance must be connected to an earthed socket.
- The manufacturer disclaims any liability in the event of non-compliance with this safety measure.
- Before starting the dryer, make sure that the mains voltage values correspond to those indicated on the rating plate of the appliance.

## 4. LAUNDRY PREPARATION

### Practical tips on drying clothes

It is recommended not to dry particularly delicate fabrics such as net curtains, wool, silk, garments with metal trim, nylon stockings, bulky materials such as anoraks, blankets, duvets, sleeping bags, down-filled quilts and any items made of foam rubber or similar materials.

Follow the drying instructions on the garment labels.

- ☐ Tumble dry
- ☒ Normal drying
- ☐ Delicate drying
- ☒ Do not tumble dry

- Close bed linen covers and pillowcases to prevent smaller items of clothing from getting rolled up inside them.
- Close zips, fasten brackets and hooks, fasten buttons on shirts, knot or tie fabric belts and apron strings, etc. To achieve uniform drying, sort the garments according to the type of fabric and the desired level of drying.
- Do not over-dry clothes, this will prevent creasing and save energy.
- It is recommended to separate dark clothes from lighter coloured or lint-loving clothes such as towels.
- Spin the laundry thoroughly before drying.
- Garments that require less care, such as shirts, should be spun briefly before drying.
- Knitted fabrics, such as underwear or lingerie, may shrink slightly during the drying cycle. Do not over-dry this type of garment. When buying garments made from this type of fabric, be aware that they tend to shrink when tumble-dried, so it is advisable to choose one size larger.
- Starched garments can also be put in the dryer. To achieve the desired starched effect, select the Iron dry programme. To remove starch residues, wipe the inside of the drum after the drying cycle with a damp cloth and dry it thoroughly.
- To avoid the appearance of static electricity at the end of the drying cycle, use a suitable fabric softener when washing the laundry or a specific product for dryers.
- When the drying cycle is finished, remove the laundry from the dryer.

ENGLISH

- If the laundry is still damp after drying, you can programme a post-drying cycle lasting at least 30 minutes. This will be necessary especially in the case of multi-layered garments, such as shirt collars, pockets, etc.
- Remove all metal objects from pockets (such as hairpins or clips, etc.).
- To prevent tangling or snagging of garments, close zips and duvet covers, tie drawstrings or ties on aprons, etc.
- Before tumble drying, turn double-layered garments, such as quilted anoraks, inside out to prevent damage. In this way, they will dry better.
- Remove all the objects from the pockets such as lighters and matches.

Maximum load capacity

The maximum recommended load capacities for each programme can be found in the section "Drying programmes".

Practical advice

- Cotton and linen: fill the drum to the maximum but do not overload it.
- Synthetic fabrics: fill the drum only half full.
- Delicate fabrics and wool: fill the drum less than half full.
- Try to use the maximum recommended load capacity to save energy.

Dry load weight

The following load weights are indicative:

Laundry	Dry load weight (g)	Laundry	Dry load weight (g)
Bathrobes	1200 g	Dresses	200 g
Handkerchiefs	100 g	Women's underwear	100 g
Duvet covers	700 g	Work clothes	600 g
Bed sheets	500 g	Shirts	200 g
Pillowcases	200 g	Pyjamas	500 g
Cloth tablecloths	250 g	Blouses	100 g
Towels	200 g	Men's underwear	100 g
Tea towels	100 g		

## 5. OPERATION

Control panel

Fig. 5

1. Start/pause button
2. Anti crease function button
3. Delay start button
4. Drying type button
5. Buzzer button
6. Programme knob

### Daily use

#### Loading the dryer

1. Open the door.
2. Separate and unfold the laundry and put it in the dryer.
3. Close the door. Make sure that no clothes are jammed between the door and the seal.

#### Selecting the drying programme

1. Turn the programme knob to select the desired programme. The indicator light of the selected programme will light up.

NOTE: the programme will be cancelled if no button is pressed within 10 minutes.

Note:

Cotton refers to the standard programme for cotton. This programme is suitable for drying cotton clothes with normal humidity and is the most efficient for this purpose from an energy consumption point of view.



#### Humidity sensor

The dryer is equipped with a humidity sensor which detects the remaining moisture content of the load and therefore automatically adjusts the drying time.

1. Select the drying programme according to the type of fabric of the laundry.
2. This system is automatically activated in the programmes Cottons, Synthetics, Baby Care and Down.


#### Setting the drying time

 
If the laundry is still wet after the end of the programme, you can adjust the drying time of the programme.

1. Select the 60 or 120 minutes programme for drying cotton garments and the 15 minutes programme for synthetic fabrics.
2. To cancel an ongoing programme, turn the programme knob to the OFF position .
3. Switch off the appliance before removing the laundry. To do this, turn the knob to the OFF position .




### Additional functions


Some additional functions are available depending on the selected programme. These functions must be selected after selecting the desired drying programme and before pressing the start/pause button .

When you press  to activate one of the functions, the corresponding indicator light will light up. If you press it again, the indicator light will switch off.

### Start/pause button



 
1. After selecting the programme and drying functions, press the start/pause button  to start the dryer.
2. The drying cycle will stop if you press the button again or if you open the door while the programme is in operation.
3. While the dryer is paused, you cannot select any programme or function, except for the buzzer and the anti crease function.
4. Press the start/pause button again to resume the programme.

### Selecting the anti crease function

1. The anti crease function is automatically activated at the end of the drying programme. However, you can also increase the duration of this function while the programme is in standby mode or in progress.
2. To activate it, press the  icon.

### Activating the delay start function

This function allows you to delay the start time of the programme by a maximum of 24 hours.

1. Each time the  icon is pressed, the time value will increase by 1 hour.
2. This function must be selected after selecting the desired drying programme and before pressing the start/pause button .
3. The countdown will start when you press the start/pause button  and the corresponding indicator light will light up.
4. All other indicator lights will switch off.

### Selecting the type of drying

This indicator light lights up when the drying programme is selected according to the spin speed of the dryer.

### Activating/deactivating the beeping

The beeping can be activated or deactivated during the drying cycle.

1. To deactivate the beeping, press the  icon, the indicator light will turn off.
2. If you wish to activate it, press the  icon again, the indicator light will turn on.

NOTE: the dryer will beep.

## Display


 

The display shows the following information:

- The duration of the selected programme (in hours and minutes).

NOTE: it is automatically calculated according to the maximum load allowed for each type of fabric and the level of drying required.

- When the programme starts, the remaining drying time will appear on the display.









## Delay start

- If you have enabled the delay start function , the remaining time until the programme start time will be shown on the display.
- To activate the delay start, press the start/pause button .
- If you want to check the selected programme, press the delay start button  again. This will display the duration of the previously selected programme.

## Wrong selection of functions



If you select an incorrect option or an option that is not compatible with the selected programme, the dryer will beep to warn of the error.

## Indicator lights


- The indicator lights correspond to the following functions:
- Drying . This indicator light shows that the dryer is in the drying phase.
- Cooling . This indicator light shows that the dryer is in the cooling phase. At the end of the drying cycle, an automatic cooling phase is activated for 5 to 10 minutes to dissipate the heat from the laundry.
- End of programme . This indicator light lights up when the cooling phase is over.
- Anti crease . This indicator light lights up when the anti crease function is selected.
- Lint filter . This indicator light lights up after each drying cycle to remind you to clean the lint filter.
- Child lock . This indicator light indicates that the buttons on the dryer are locked.
- Buzzer . This indicator light lights up when the beeping is activated.
- Delay start . This indicator light lights up when the delay start function is selected.

Revolutions per minute indicator lights: these indicator lights light up when the drying programme is selected according to the spin speed of the dryer.


## Thermostat reset

- If the heating element does not work during operation, the manual thermostat may have been activated.
- To restart, first turn the programme knob to the Synthetics position  and press the start/pause button .
- After 20 minutes, press the thermostat reset button as shown in figure 6.

### End of programme

- All drying programmes end with a cooling phase lasting between 5 and 10 minutes.
- If the laundry is not removed at the end of the drying cycle, the anti crease function will be activated automatically (duration: maximum 10 minutes).
- If you continue without removing the laundry after the anti crease phase is over, the dryer will stop automatically. The dryer will beep for 15 seconds (if the function is activated) and END will appear on the display.
- To finish, turn off the dryer by turning the programme knob to the OFF position .



### Warning

If the door is opened while the programme is in operation, you must first close the door and then press the start/pause button  again to resume the programme from the point where it was interrupted.

### After each use

Clean the lint filter.

### Modifying the programme




 

 
 



1. To modify an ongoing programme, first cancel it by turning the programme knob to the OFF position .
2. Select the new programme and press the start/pause button .

### Warning

The dryer will enter standby mode in the following cases:

- After 10 minutes of inactivity, the appliance will enter standby mode and the display will show the symbol "--".
- After 5 minutes of inactivity, the appliance will enter standby mode and the display will show the word "END".

## Drying programmes

Programme	Option	Maximum load (kg)	Description
Cottons 	Extra (Extra dry) <b>Extra</b>	7 kg	For drying bathrobes, bath towels, jeans, work clothes, etc.
	Cotton 	7 kg	For drying bathrobes, bath towels, jeans, work clothes, etc.
	Damp (Damp) 	7 kg	For drying shirts, T-shirts, cotton trousers, etc.
	Iron (Iron dry) 	7 kg	For drying knitted garments, cotton shirts, etc.
Synthetics 	Extra (Extra dry) <b>Extra</b>	3.5 kg	For drying sheets, bed linen, table linen, starched garments, etc.
	Cupboard dry (Dry for storage) 	3.5 kg	For drying sheets, table linen, synthetic fabrics, etc.
	Iron (Iron dry) 	3.5 kg	For drying synthetic fabrics.
Mix (Mixed)	Mix (Mixed) <b>Mix</b>	3.5 kg	For drying knitted garments, shirts, etc.
Time (Drying time)	15', 60', 120'	7 kg	For drying thick or multi-layered fabrics, especially plush. Ideal for loose garments or small loads of laundry.
Special	Down 	4 kg	For drying feather-filled garments.
	Baby Care 	3.5 kg	For drying baby clothes.
	Refresh 	1.5 kg	Allows to cool or ventilate clothes.
	Anti-Allergy <b>Anti-Allergy</b>	2 kg	For drying underwear, shirts etc.

Note: if the dry weight of the laundry does not exceed 1 kg, it is recommended that you select the Time programme.

## 6. CLEANING AND MAINTENANCE

Before cleaning the appliance or performing any maintenance task, make sure that it is unplugged from the mains.


### Cleaning the surface of the dryer


To clean the outside of the dryer, use a cloth lightly dampened with soap and dry it thoroughly. Do not use methyated spirits, solvents or similar cleaning agents.

### Cleaning the door


Regularly clean the inside of the door to remove lint. Thorough cleaning ensures that the dryer functions properly. Fig. 7



### Lint filter cleaning

- After each drying cycle, the display will indicate that the programme has finished by showing "END", and the lint filter indicator light  will light up to remind you to clean it. Fig. 8
- To clean the filter, remove it from its compartment.

 **WARNING:** do not use the dryer without the filter in place.

## 7. TROUBLESHOOTING

- Some problems are due to lack of regular maintenance or neglect, which can easily be solved without calling a technician. Before contacting the official Cecotec Technical Support Service, please refer to the following section.
- When the dryer is switched on, the start/pause icon may flash to indicate that the appliance is not working. Once the problem is solved, press the start/pause button  again to restart the programme. If, after performing the following checks the problem persists, contact the official Cecotec Technical Support Service.

Problem	Possible causes	Solutions
The dryer does not work	The plug is not plugged in. The door is open. Make sure that you have pressed the start/pause button  .	Plug the power cord into the outlet. Close the door. Press the start/pause button  again.
The laundry does not dry properly	The selected programme is not the right one. The filter is clogged. The laundry load is inadequate.	Select a different drying programme the next time you start the dryer (see section "Drying programmes"). Clean the lint filter. Observe the maximum recommended load capacity.
The light inside the drum does not switch on (depending on the model)	The light bulb has blown.	Replace the light bulb.
The drying cycle is interrupted or terminated shortly after the start of the programme. "END" appears on the display	Not enough laundry has been loaded or the laundry is too dry for the selected programme.	Increase the drying level (e.g. from "Extra (Extra dry)" to "Damp").
The drying cycle takes too long	The dryer is overloaded with laundry.	Do not overload the dryer.

Note: if you are unable to identify or solve the problem, contact the official Cecotec Technical Support Service. When you do so, the Technical Support Service will ask you to indicate the model, serial number and date of purchase of the appliance, as this information will facilitate the identification of the problem.

In the event of contacting a professional technician to repair the fault, whether it is one of those mentioned above, or caused by incorrect use or installation, the cost of the service will be paid by the user, even if the appliance is under warranty.

8. TECHNICAL SPECIFICATIONS

Product reference:	02158
Name:	Bolero DressCode Dry 7200V C
Rated voltage	220~240 V
Rated frequency	50 Hz
Load capacity (max.)	7 kg
Full power	2350 W
Power (on) (W)	0.48
Power (off) (W)	0.21
Full load power consumption (kWh)	4.29
Programme duration at full load (min)	160
Degree of waterproofing	IPX4
Dimensions (W x D x H) (mm)	595 X 555 X 850

Note: all values given in the table have been obtained in the laboratory from tests carried out using the standard programme for cotton in accordance with European Standard EN 61121:2013. These values may vary depending on the type of fabric, residual humidity, ambient conditions and fluctuations in the mains voltage.

\*Altering appliance specifications or attempting to modify the appliance in any way may be dangerous.

Technical specifications may change without prior notification to improve product quality.  
Made in China | Designed in Spain

9. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

## **10. TECHNICAL SUPPORT AND WARRANTY**

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

## **11. COPYRIGHT**

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.



[www.cecotec.es](http://www.cecotec.es)

Cecotec Innovaciones S.L.  
Av. Reyes Católicos, 60  
46910, Alfafar (Valencia)  
AP01240603

