

# cecotec

**COOLMARKET** COOLMARKET SBS 430 WHITE E

**COOLMARKET** COOLMARKET SBS 430 INOX E

**COOLMARKET** COOLMARKET SBS 430 DARK E

Frigorífico /Refrigerator



# bolero

Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções  
Handleiding  
Instrukcja obsługi  
Návod k použití



Instrucciones de seguridad	4
Safety instructions	9
Instructions de sécurité	13
Sicherheitshinweise	18
Istruzioni di sicurezza	23
Instruções de segurança	28
Veiligheidsvoorschriften	33
Instrukcje bezpieczeństwa	38
Bezpečnostní pokyny	43

## ÍNDICE

1. Piezas y componentes	47
2. Antes de usar	47
3. Instalación	47
4. Funcionamiento	49
5. Instrucciones para el almacenamiento de alimentos	52
6. Limpieza y mantenimiento	54
7. Resolución de problemas	56
8. Especificaciones técnicas	57
9. Reciclaje de aparatos eléctricos y electrónicos	58
10. Garantía y SAT	59
11. Copyright	59

## INDEX

1. Parts and components	60
2. Before use	60
3. Installation	60
4. Operation	62
5. Instructions on food storage	65
6. Cleaning and maintenance	66
7. Troubleshooting	68
8. Technical specifications	69
9. Disposal of old electrical and electronic appliances	70
10. Technical support and warranty	70
11. Copyright	71

## SOMMAIRE

1. Pièces et composants	72
2. Avant utilisation	72
3. Installation	72
4. Fonctionnement	74
5. Instructions pour le stockage des aliments	77
6. Nettoyage et entretien	79
7. Résolution de problèmes	81
8. Spécifications techniques	82
9. Recyclage des équipements électriques et électroniques	83

10. Garantie et SAV	84
11. Copyright	84

## INHALT

1. Teile und Komponenten	85
2. Vor der Verwendung	85
3. Montage	85
4. Bedienung	87
5. Anweisungen für die Lebensmittellagerung	90
6. Reinigung und Wartung	92
7. Problemlösung	94
8. Technische Spezifikationen	95
9. Recycling von Elektro- und Elektronikgeräten	96
10. Garantie und Kundendienst	97
11. Copyright	97

## INDICE

1. Parti e componenti	98
2. Prima dell'uso	98
3. Installazione	98
4. Funzionamento	100
5. Istruzioni per la conservazione degli alimenti	103
6. Pulizia e manutenzione	105
7. Risoluzione dei problemi	106
8. Specifiche tecniche	108
9. Riciclaggio di apparecchiature elettriche ed elettroniche	109
10. Garanzia e supporto tecnico	109
11. Copyright	109

## ÍNDICE

1. Peças e componentes	110
2. Antes de usar	110
3. Instalação	110
4. Funcionamento	112
5. Instruções para o armazenamento de alimentos	115
6. Limpeza e manutenção	117
7. Resolução de problemas	118
8. Especificações técnicas	120
9. Reciclagem de aparelhos elétricos e eletrônicos	121
10. Garantia e SAT	121
11. Copyright	122

## INHOUD

1. Onderdelen en componenten	123
2. Voor u het toestel gebruikt	123



## SAFETY INSTRUCTIONS

Read the instructions carefully before using the appliance for the first time and keep this instruction manual for future reference or new users.

- It is important to make sure all users are familiar with the operation and safety features of the appliance to prevent faults and unnecessary accidents.
- Make sure that the mains voltage in your house matches the voltage stated on the rating label of the product.
- This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. The cleaning and maintenance of the appliance should not be carried out by children without supervision.
- Keep the packaging material away from children, as there is a risk of suffocation.
- **WARNING:** if the interior light is damaged, contact the official Cecotec Technical Support Service. Do not try to repair it on your own.
- **WARNING:** when positioning the appliance, make sure the power cord is not trapped or damaged. A crushed or damaged connector may heat up and cause a fire.
- Make sure you can access the plug of the appliance after installation.
- Do not place food directly against the air outlet on the interior of the appliance.
- Keep the ventilation openings clear from obstructions.
- Do not place carbonated or fizzy drinks in the freezer



compartment, as this creates pressure in the container and could explode and damage the appliance.

- WARNING: do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by Cecotec.
- WARNING: do not damage the refrigeration circuit.
- If the cord is damaged, it must be replaced by the manufacturer, the supplier, or qualified personnel in order to avoid a hazard.
- WARNING: do not use electrical appliances inside the refrigerator.
- We recommend you check the power cord regularly to detect any sign of possible damage. Do not use the appliance if the cord is damaged.
- To avoid injuries or death caused by electric shock, do not use the appliance with your hands wet or over a wet surface.
- You should never use this refrigerator with an extension cord or a multi-socket adaptor. Make sure the appliance is plugged in directly to a power supply.
- When installing the appliance, make sure that there is free space in the rear part, as this is the main heat outlet. This will allow for adequate ventilation.
- Do not place hot food or drinks in the refrigerator, allow them to cool down to room temperature beforehand.
- Do not place any other appliance on the refrigerator and do not wet it.
- Do not store explosive substances such as aerosols or flammable propellants in this appliance.
- This appliance is exclusively designed for household use. Do not use this unit outdoors or in damp environments.
- WARNING: to avoid any risk due to the instability of the refrigerator, you must install it according to the instructions.




- This appliance has a built-in earthed plug. Make sure the power supply in your house is properly grounded.
- Wait 5 minutes after a power failure before turning the appliance back on. Otherwise, the compressor may get damaged.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always handle the appliance carefully to avoid any damage on it.
- Frozen food can cause ice burns if consumed right after removing it from the freezer compartment.
- Do not remove or touch items in the freezer compartment with your hands wet, as it could cause skin abrasions or frost/freeze burns.
- Never use the base, drawers, or door as support.
- Do not overload the door shelves or place too much food on the drawers to prevent items from falling off and damaging the appliance.
- **WARNING:** do not attach multi-socket adaptors or multiple power supplies to the rear part of the appliance.
- The two-star compartments are suitable for storing pre-frozen food, storing or making ice cream and making ice cubes.
- Compartments with one, two, or three stars are not suitable for freezing fresh food.
- Before carrying out any maintenance and cleaning task, turn off the appliance and unplug it.
- It is advisable to wait for at least four hours before connecting the appliance to allow oil to flow through the compressor.
- Air must flow around the appliance. Lack of air leads to overheating. To achieve good ventilation, follow the installation instructions.



- Whenever possible, the rear part of the appliance should not be too close to the wall to prevent it from touching or reaching the hot parts (the compressor and the condenser). To avoid risk of fire, follow the installation instructions.
- Make sure the power cord is accessible after installation.
- All electrical work required to maintain this appliance must be carried out by a qualified electrician.
- Clean the surfaces that come into contact with food and with the accessible draining systems regularly.

## REFRIGERANT

- Isobutane refrigerant (R600a), contained within the refrigeration circuit of the appliance, is a natural gas with a high level of environmental compatibility; however, it is flammable. Make sure that no components of the refrigeration circuit have been damaged during the transport and installation of the appliance.
- **WARNING:** the refrigerant and the insulator gas are flammable. When disposing of the appliance, only dispose of it at an authorised waste-disposal facility. Do not expose it to flames.
- **WARNING:** the device contains refrigerant and gases in the insulation. The appliance and gases must be disposed of professionally, as they may cause injuries to eyes or ignition. Make sure the refrigeration-circuit pipe is not damaged before disposing of it correctly.
-  **WARNING:** risk of fire. If the refrigeration circuit is damaged:
- Avoid open flames and sources of ignition.
- Completely air the room where the appliance is located.



## ENGLISH

### 1. PARTS AND COMPONENTS

Fig. 1

1. LED light indicator
2. Door shelves (freezer compartment)
3. Shelves (freezer compartment)
4. Lower shelf
5. Freezer-compartment drawer
6. Refrigerator-compartment drawer
7. Egg storage container
8. Shelves (refrigerator compartment)
9. Door shelves (refrigerator compartment)

#### Note:

The graphics in this manual are schematic representations and may not exactly match the product.

### 2. BEFORE USE

- This refrigerator includes a packaging designed to protect it during transport. Take the refrigerator out of the box. You can keep the original box and other elements in a safe place, this will help you prevent product damage when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or not in good condition, immediately contact the official Cecotec Technical Support Service.

#### Levelling

- Make sure you level your refrigerator with the front levelling feet. If it is not levelled, the refrigerator performance will be affected, or it can even cause a malfunction.
- After installing the refrigerator, wait 4 hours before using it to allow the refrigerant to stabilise.

### 3. INSTALLATION

The location you choose for the refrigerator must be properly ventilated and away from heat sources. Do not place the refrigerator near heat sources, like a cooker, and avoid direct sunlight to ensure the cooling effect and save on energy consumption. It is not recommended to place the refrigerator in a wet place, as it may rust and cause electrical leakage.



## ENGLISH

During operation, the refrigerator releases heat into the environment. Therefore, you should leave at least 300 mm of free space at the top, more than 100 mm on both sides, and more than 50 mm at the rear of the refrigerator.

Width (mm)	Depth (mm)	Height (mm)	A (mm)	B (mm)	C (°)	E (mm)	F (mm)
839	637	1763	1447	1013	140	50	100

Fig. 2

### Please note

Figure 2 only illustrates the space required for the refrigerator.

### Stable surface

Place the refrigerator on a solid, flat surface to keep it stable, otherwise vibrations and noises will occur.



Ensure a ventilation free of obstacles around the refrigerator.

### Preparing for use

#### Waiting time

Once the refrigerator is installed and clean, do not turn it on immediately, wait at least 4 hours before connecting it to the power supply.

#### Cleaning

Check the position of the shelves and drawers in the interior of the refrigerator and clean the interior with a soft cloth.

#### Switch-on

Connect the plug into a power socket to switch on the refrigerator. After one hour, open the freezer compartment door: if the temperature inside the freezer compartment has dropped, the cooling system is running normally.

#### Food storage

- Once the refrigerator is running, insert the food.
- When the temperature is high, food may take longer to cool down completely (try to open the refrigerator doors as infrequently as possible).

If the refrigerator is installed in a wet place, you must check the earthed cord and the leakage breaker are working normally. If vibration noises occur due to contact of the refrigerator





## ENGLISH

with the wall or if the wall turns black due to air convection around the compressor, keep the refrigerator further away from the wall.

The installation of the refrigerator may cause noise interference or image problems in mobile phones, landline phones, radio receivers, or televisions near the refrigerator, so in this case, keep the refrigerator as far away from these objects as possible.

## 4. OPERATION

Fig. 3 Control panel

1. Freezer-compartment icon
2. Smart icon
3. Inverter icon
4. Fast Freeze icon
5. Temp. button Zone
6. Function button
7. Unlock button
8. Refrigerator-compartment icon
9. Digital temperature indicator
10. Temp. button
11. OK button

When you connect the refrigerator to the power supply for the first time, all icons on the display will light up for 2 seconds, and the system will activate the Smart function by default. When all doors are closed, the display will automatically switch off if no button is pressed within 3 minutes. The display will light up if you open a door or press a button. Please note that the child lock is activated after 3 minutes of inactivity, so the buttons will be inactive until you deactivate the child lock.

The Inverter icon will light up when the refrigerator is connected to the mains and the compressor starts.

### Functions

#### Temperature setting

##### Setting the refrigerator compartment temperature

Press the Temp. button. until the refrigerator compartment icon starts flashing, then press the Temp. button to select the desired temperature; finally, press the OK button to confirm the setting.

The temperature setting cycles of the refrigerator compartment are:

5°C→6°C→7°C→8°C→OFF→2°C→3°C→4°C→5°C



## ENGLISH

OFF means the refrigerator compartment is off, and when you activate this function, the refrigerator will stop cooling.



Make sure you remove all the food from the refrigerator compartment before setting this function.

### Setting the freezer compartment temperature

Press the Temp. button until the freezer compartment icon starts flashing, then press the Temp. button to select the desired temperature; finally, press the OK button to confirm the setting.

The temperature setting cycles of the freezer compartment are:

-18°C → -17°C → -16°C → -24°C → -23°C → -22°C → -21°C → -20°C → -19°C → -18°C

### Fast freeze

When you activate the fast freeze function, the freezer-compartment temperature will be set to -32°C automatically. The fast freeze function is used to prevent loss of nutritional quality and to preserve the freshness of the food.



You cannot modify the temperature of the freezer compartment in the fast freeze function.

### Activating the fast freeze function

Press the Function button until the fast freeze icon starts flashing, then press the OK button within 5 seconds to confirm your choice. If you do not press the OK button within 5 seconds, this function will not be activated.

### Deactivating the fast freeze function

After 26 hours of operation, the fast freeze function will be automatically deactivated.

With the fast freeze function activated, press the Function button until the fast freeze icon starts flashing, then press the OK button to confirm and the fast freeze function will be deactivated.

When you activate the Smart function, the fast freeze function deactivates automatically.

### Smart

When you activate the Smart function, the temperature in the refrigerator compartment will be set to 5°C and the temperature in the freezer compartment will be set to -18°C, so that food will be preserved in the best possible conditions and the refrigerator will operate as efficiently as possible.



If the Smart function is active, the temperature in both compartments cannot be changed.

### Activating the Smart function

Press the Function button until the Smart icon starts flashing, then press the OK button within 5 seconds to confirm your choice. If you do not press the OK button within 5 seconds, this function will not be activated.



## ENGLISH

### Deactivating the Smart function

- With the Smart function activated, press the Function button until the Smart icon starts flashing, then press the OK button within 5 seconds to confirm your choice. The Smart function will be deactivated.
- When you activate the fast freeze function, the Smart function deactivates automatically.

### Child lock

- When you activate the child lock, you will not be able to modify the temperature and function to avoid undesired changes.
- If you do not press any button within 3 minutes, the child lock function will be activated automatically.

### Manual deactivation of the child lock

Hold down the Unlock button for 3 seconds to deactivate the child lock.

### Please note

The child lock function is not available on the product with glass door.

### Open door alarm

If any door is open for more than 3 minutes, the refrigerator will emit an alarm sound, which can be stopped by pressing any key, but will sound again if the door is still open 3 minutes later. The alarm sound will not stop until you close the door.

### Function memory after a power failure

In the event of a power failure, the refrigerator will save the functions set before the power failure and will activate them when the power is restored.

### Delay start

To prevent damage to the refrigerator compressor in the event of a short power failure (i.e., less than 5 minutes), the compressor will not start immediately after switch-on.

### Overheating warning (only after a power failure)

When the refrigerator cooling system is on, if the freezer-compartment temperature is above -10°C, the freezer-compartment temperature digits will flash on the display. The display will show the temperature of the freezer compartment when you press any button, and it will return to its usual state when you press any button again or after 10 seconds.

### Fault alarm

If the display shows E0, E1, E2, EH, or EC, it indicates there's a fault in the refrigerator. Contact the Technical Support Service of Cecotec.



## 5. INSTRUCTIONS ON FOOD STORAGE

### Use precautions

- The refrigerator may not operate consistently (there may be some defrosting of the contents, or the temperature may become too hot in the freezer compartment if placed in locations with a temperature out of the temperature range for which they are designed for a long period of time).
- The internal temperature may be affected by factors such as the location of the refrigerator, room temperature, and door opening frequency, etc., and you should take these factors into account if you decide to use any temperature-control devices.
- Effervescent or carbonated drinks should not be stored in the freezer compartment or drawer of the refrigerator.

### Food location

- Due to the circulation of cold air in the refrigerator, the temperature in each zone is different, so food must be placed in different zones.
- The refrigerator compartment is suitable to store food that does not need to be frozen, cooked food, beer, eggs, some seasonings that need to be kept cold, milk, fruit juice, etc. The crisper drawer is the best place to store fruit and vegetables.
- The freezer compartment is suitable to store ice cream, frozen foods, and foods that need to be kept for a long time.

### Using the refrigerator compartment

- Shelves: to remove the shelves, first lift them up and then pull them out; to put them back, put them into their position before lowering them. Keep the rear edge of the shelf facing upwards to prevent food from coming into contact with the wall. When removing and fitting shelves, hold them firmly and handle them carefully to avoid damage.
- Refrigerator-compartment drawer: pull out the fruit and vegetable crisper drawer to access the food. After using or cleaning the bottom shelf of the refrigerator (the drawer cover), put it back in place so that the internal temperature of the drawer is not affected.

### Drawer humidity control

- The humidity regulator of the drawer is designed to keep moisture steady and the vegetable freshness.
- If you slide the humidity regulator to the right, more gaps will be exposed, and the drawer will have a lower humidity level.
- If you slide the humidity regulator to the left, less gaps will be exposed, and the drawer will have a higher humidity level.

### Care for food storage

- Clean and dry food completely before storing it in the refrigerator. Before introducing food



## ENGLISH

in the refrigerator, it is advisable to seal it to prevent water evaporation and thus keep fruit and vegetables fresh on the one hand, and to prevent odours on the other.

- Leave enough space between the food; if they are too close together, they will block the flow of cold air, which will affect the cooling effect. Do not store too much or too heavy food to prevent the shelves from bending. When storing food, leave a distance from the interior wall; do not place water-rich food too close to the inner wall of the refrigerator to prevent it from freezing on the interior wall.
- Food storage by category: place daily food items at the front of the shelf so that you can reduce the door opening time and avoid food spoilage due to expiry.
- Energy saving tips: let hot food cool down to room temperature before putting it in the refrigerator. Place frozen food in the refrigerator compartment to defrost it.

### Storing fruits and vegetables

Please note that some types of fresh vegetables and fruits are sensitive to cold and therefore not suitable for storage in the refrigerator crisper drawer.

### Using the freezer compartment

The temperature of the freezer compartment is kept at -18°C, so it is advisable to store food that you wish to keep for a long period of time in the freezer compartment, always respecting the storage time indicated on the food packaging.

The freezer-compartment drawers are suitable to store food which needs to be frozen. Large fish and meat should be cut into small pieces and placed in freezer bags before placing them in the freezer-compartment drawers.

- Let hot food cool down to room temperature before putting it in the freezer compartment.
- Do not place a glass container with liquid or sealed canned liquid in the freezer compartment to prevent them from exploding due to volume expansion after freezing the liquid.
- Divide food into small portions.
- Food should be packed or covered with suitable materials that are firm, tasteless, impermeable to air and water, non-toxic, and non-polluting to avoid cross-contamination and odour transfer.

### Using the ice cube tray

Place the ice cube tray in the upper part of the freezer compartment so that it freezes as quickly as possible.

## 6. CLEANING AND MAINTENANCE


If the refrigerator is not to be used for a long period of time:

- Turn off the refrigerator and unplug it from the power supply.




## ENGLISH

- Remove all the food.
- Clean and dry the interior completely. To prevent mould or unpleasant odours, leave the door slightly open: lock it open or remove it if necessary.
- Store the device in a ventilated and dry place, away from heat sources; place the appliance carefully and do not place heavy objects on it.
- The unit must be kept out of the reach of children to prevent them from playing with it.

 Before cleaning, disconnect the power plug; do not connect or disconnect the power plug with your hands wet, as there is a risk of electric shock and injury. Do not spill water directly on the refrigerator to avoid rust, electrical leakage and accidents. Do not reach into the bottom of the refrigerator, as you may get scratched by the sharp metal corners.

### Cleaning the interior and exterior


- Food residues in the refrigerator can cause undesired odours, so you should clean the refrigerator regularly. The refrigerator compartment should be cleaned once a month.
- Remove all shelves, the crisper box, etc., and clean them with a soft cloth or sponge dampened with warm water or neutral detergent.
- Clean the dust that accumulates on the rear panel and side panels of the refrigerator regularly.
- After using neutral detergent, make sure you rinse it with clean water, and then dry it with a cloth.

-  Do not use bristle brushes, steel wire brushes, detergent, soap powder, alkaline detergent, benzine, petrol, acid, hot water, or other corrosive elements to clean the refrigerator surface, door gasket, plastic decorative parts, etc. to avoid damage.
- Carefully dry the door gasket and clean the slot with a wooden stick wrapped with cotton. After cleaning, fix the four corners of the door gasket and then gradually push it into the slot in the door.

### Power failure or cooling system fault

- If you receive an early power failure warning:
  1. Activate the fast freeze function, so that food is completely frozen. Set the temperature back to the original setting when the power supply returns to normal.

#### Note:

-  It is advisable to run the refrigerator uninterruptedly once you start using it.

### Defrost

This refrigerator includes an automatic defrost function, so there is no need to defrost it manually.



## ENGLISH

### Replacing the light bulb

The refrigerator has a LED light with low consumption and a long shelf life. In case of malfunction, contact the official Technical Support Service of Cecotec. The light bulb can only be replaced by the manufacturer.

#### Note:



If the power cord and/or plug are damaged or dusty, electric shock and fire may occur. If there is any malfunction, disconnect the cord and contact the Technical Support Service of Cecotec.

## 7. TROUBLESHOOTING

For the following minor malfunctions, please try to solve the problem yourself before contacting Cecotec Technical Support Service.

Fault	Possible causes	Possible solutions
The refrigerator does not work.	The refrigerator is not connected to the mains. The circuit breakers or fuses are damaged. There is no electricity or there has been a power cut.	Plug the refrigerator into the mains. Open the door and check the light is on. Check the electrical installation and protection elements.
Abnormal noise.	The refrigerator is not stable. The refrigerator is in contact with the wall.	Set the adjustable feet of the refrigerator. Separate the refrigerator from the wall.
Low cooling efficiency.	The food introduced is hot or there is too much food. You open the door too often. The door gasket has objects that do not allow to close it completely. The refrigerator receives direct sunlight or is close to a heat source. The refrigerator is not well ventilated. The selected temperature is too high.	Introduce food in the refrigerator when it is at room temperature. Check and close the door. Remove the refrigerator from the heat source. Keep the recommended distances in the installation section so the refrigerator is well ventilated. Set a suitable temperature.



## ENGLISH

Unpleasant smells in the refrigerator.	There is spoiled food inside. The refrigerator is dirty. You introduced food with strong smells.	Dispose of food which is spoiled. Clean the refrigerator. Pack food, especially if it has a strong smell.
The buttons do not work.	Check if the child lock is active.	Hold down the Unlock button for 3 seconds to deactivate the child lock and press any button (for more details, read the instructions on the child lock).
You cannot set the temperature.	Check if the Smart or fast freeze functions are not active on the control panel.	Deactivate the special functions and then set the temperature (for more details, check the Functions section).
The temperature on the freezer compartment is shown on the panel, but it flashes.	Check that the power supply has not been cut off before.	Press any button to activate the alarm (check the overheating warning section) and check that the food inside the refrigerator is not spoiled.



### Note

- If none of these situations match your problem, do not attempt to disassemble or repair the refrigerator yourself. Repairs carried out by unqualified persons may result in injury or serious malfunctions. Please contact the place where you bought the appliance or Cecotec's Technical Support Service. The repair must be carried out by an authorised technician, and you must use only original spare parts.
- When the unit is not to be used for a long period of time, disconnect it from the mains, empty all food and clean the refrigerator, leaving the door slightly open to avoid unpleasant odours.




## 8. TECHNICAL SPECIFICATIONS

You can find more information on this model by scanning the QR code on the energy label.





## ENGLISH

Product	Bolero CoolMarket SBS 430 White E	Bolero CoolMarket SBS 430 Inox E	Bolero CoolMarket SBS 430 Dark E
Reference:	02437	02438	02439
QR code			
Voltage	220-240 V		
Rated frequency	50/60 Hz		
Rated current	1.9 A		
Climate class	SN/N/ST/T*		
Refrigerant	R600a (72 g)		
Insulation	Cyclopentane		

(\*) Refrigerator intended for use at room temperatures between 10 °C and 43 °C.

This product features a light source with an energy efficiency grade G.

Technical specifications may change without prior notification to improve product quality.

Made in China | Designed in Spain

## 9. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

## 10. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.



## ENGLISH

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

## 11. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording, or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.



[www.cecotec.es](http://www.cecotec.es)

Cecotec Innovaciones S.L.  
C/ de la Pinadeta s/n, 46930  
Quart de Poblet, Valencia (Spain)  
YV01220209