

# REMINGTON®


## Wet 2 Straight Wide Plate Straightener



**S7350**




[www.remington-europe.com](http://www.remington-europe.com)

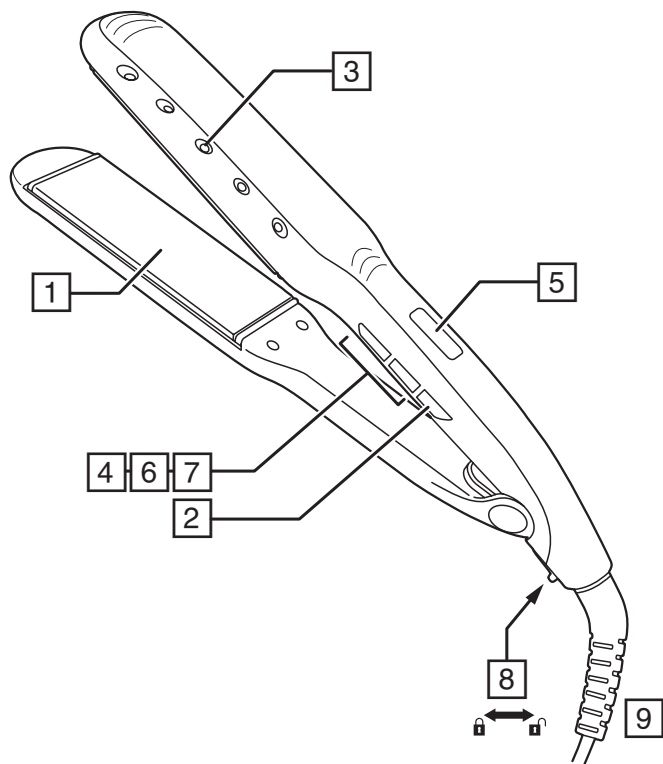

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**WARNING: This appliance is hot. Keep out of reach of children at all times.**

### IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
  - Never leave the appliance unattended when it is connected to the power supply.
  - Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.
  - If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.

- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- CAUTION: Always remove the appliance from the storage pouch/sleeve before heating and allow it to fully cool before placing it back.
- This appliance is not intended for commercial or salon use.

## PARTS


- |   |                                      |
|---|--------------------------------------|
| 1. Advanced ceramic coated plates infused with frizz resistant micro conditioners | 5. Temperature display               |
| 2. On-off switch  | 6. Temperature boost function        |
| 3. Vents to channel excess water away and allow water to evaporate quickly        | 7. Temperature lock function         |
| 4. Temperature controls   | 8. Hinge lock                        |
|   | 9. Swivel cord                       |
|   | 10. Heat resistant pouch (not shown) |

## ADDITIONAL FEATURES

- Fast heat up—ready to use in 15 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

## INSTRUCTIONS FOR USE

This Straightener can be used on wet or dry hair.

- Wash and condition your hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- Section the hair prior to styling. Style the lower layers first.
- Plug the product into the mains power supply.
- When the styler is plugged in but not turned on a lock symbol will show in the display window indicating the styler is in standby mode .
- Press and hold the on button to switch on.

### Wet Mode – Use on Towel Dried Hair

- Towel dry hair well before styling.
  - Do not use on dripping wet hair.
1. When you turn on the straightener it will automatically set itself to wet mode.
  2. It will default to 200°C which is the minimum temperature required for Wet mode straightening. This is indicated by the cloud icon.
  3. Start styling on lower temperatures first. Select the appropriate temperature for your hair type using the controls on the side of the product. '+' increases the temperature '-' decreases the temperature.
  4. The temperature bars and digital display will stop flashing when the desired temperature is reached.
  5. Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- Ensure the vent holes are directed away from the face, neck and scalp.

- When straightening wet hair you will hear a hissing sound and the unit will steam. This is a good thing – it is the sound of excess water in your hair evaporating and this is not harmful to the condition of your hair.

### Dry Mode – Use on Dry Hair

- Before use, ensure the hair is clean, dry and tangle-free.
- Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product. '+' increases the temperature '-' decreases the temperature.

### Recommended Temperatures

Temperature	Hair Type
140°C - 170°C	Fine
170°C - 200°C	Medium
200°C - 230°C	Thick


Caution: the hottest temperatures should only be used by experienced stylists.

- The temperature bars and digital display will stop flashing when the desired temperature is reached.
- Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- Only repeat twice per section to prevent damage to the hair.
- After use, press and hold the off button for two seconds to turn off then unplug the appliance.
- Let the appliance cool down before cleaning and storing away.

### Temperature Boost Function

- For quick touch ups of stubborn, hard to style sections.
- The temperature boost function boosts the temperature to 230°C.
- Hold the "+" button for 2 seconds to operate.
- Caution:** the highest temperature is not suitable for every hair type. If you plan to use this straightener on the boost setting of 230°C please test on a small section of your hair first.

### Temperature Lock Function

- Set the desired temperature using the + and – buttons then lock the settings by pressing the "—" button for 2 seconds. The  symbol will appear on the temperature display.
- To unlock the temperature setting, press and hold the "—" button for 2 seconds.

## STORAGE

Let the appliance cool before cleaning and storing away.

The plates can be locked together for easy storage:

To lock, close the plates and push the hinge lock forwards (towards the plates).

To unlock, slide the hinge lock backwards towards the cord to the unlocked position.

**NOTE:** Do not heat the unit in the locked position.

## CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.