



ACCESS CHAR-BROIL ASSEMBLY GUIDE

INTERACTIVE
STEP-BY-STEP
GUIDE




PATIO BISTRO E2COAL

MODEL NUMBER

26302401


26302402

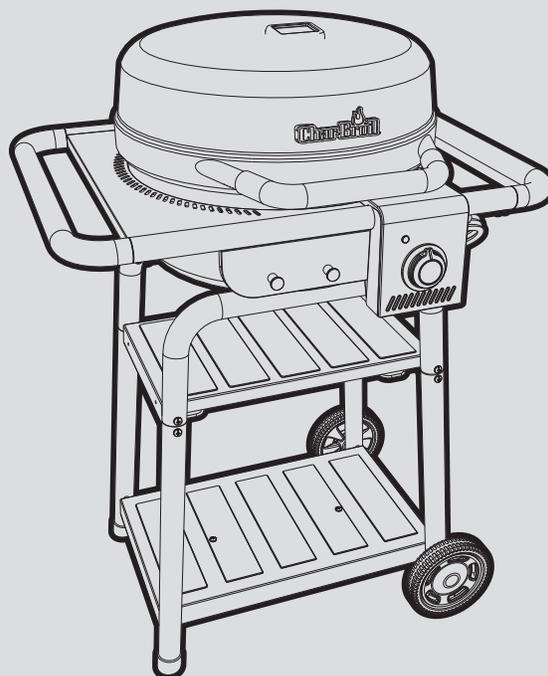

GB	Operating Instructions	3
CH, FR	Mode d'emploi	10
LU, AT, CH, DE	Betriebsanweisungen	17
CH, IT	Istruzioni per l'uso	24
LU, BE, NL	Gebruiksaanwijzingen	31
SE	Användning	38
FI	Käyttöohjeet	45
ES	Instrucciones de funcionamiento	52
PT	Instruções para Operação	59
DK	Brugsanvisning	66
NO	Instruksjoner for bruk	73
SK	Návod na používanie	80
IS	Notkunarlæðbeiningar	87
CZ	Návod k obsluze	94
IL	הלעפה תוארה	101
RO	Mnual de operatii	108
GR	Οδηγίες λειτουργίας	115
HU	Használati utasítások	122
BG	Инструкции за работа	129
SI	Navodila za uporabo	136

Assembly Instructions	146
Instructions d'assemblage	146
Montageanweisungen	146
Istruzioni per il montaggio	146
Montage-instructies	146
Montering	146
Kokoamisohjeet	146
Instrucciones de armado	146
Instruções para Montagem	146
Monteringsvejledning	146
Imontering	146
Návod na montáž	146
Smalámálsskipana	146
Montážní návod	146
הבכרה תוארה	146
Instrucțiuni de asamblare	146
Οδηγίες συναρμολόγησης	146
Szerelési útmutató	146
Инст рукции за сглобяван е	146
Navodila za montažo	146



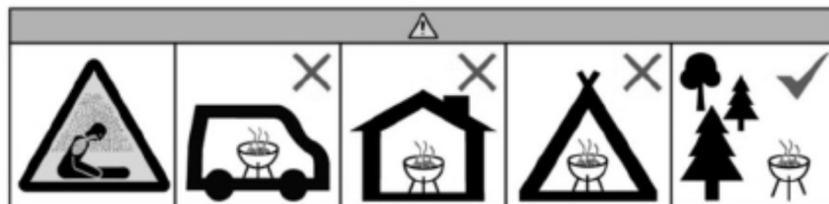

GB	Do not use the barbecue in a confined space and/or habitable space e.g. houses, tent, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality.
CH,FR	Ne pas utiliser le barbecue dans un espace confiné et/ou habitable par exemple des maisons, tentes, caravanes, camping-cars, bateaux. Risque de décès par empoisonnement au monoxyde de carbone
LU,AT,CH,DE	Den Grill nicht in geschlossenen Räumen und/oder bewohnbaren Räumlichkeiten wie z. B. Häusern, Zelten, Wohnwagen, Wohnmobilen, Booten benutzen. Es besteht Todesgefahr durch Kohlenmonoxidvergiftung
CH,IT	Non utilizzare il barbecue in ambienti chiusi e/o locali abitabili, come abitazioni, tende, roulotte, case mobili, barche. Pericolo di avvelenamento da monossido di carbonio.
LU,BE,NL	Gebruik de barbecue niet in afgesloten en/of bewoonbare ruimtes, zoals bijvoorbeeld huizen, tenten, motorcaravans, campers en boten. Dodelijk gevaar voor koolmonoxidevergiftiging.
SE	Använd inte grillen i tränga utrymmen eller i boendetrymmen, som till exempel hus, tält, husvagnar, husbilar, båtar. Risk för kolmonoxidförgiftning
FI	Älä käyttää grilliä suljetussa tilassa ja / tai asuttavassa tilassa, esim. taloissa, teltoissa, asuntovaunuissa, matkailuautoissa, veneissä. Vaarana hiilimonoksidista johtuva myrkytyskuolema.
ES	No use la parrilla en un espacio confinado y/o espacio habitable, como p. ej. en casas, tiendas de camping, remolques, casas rodantes, botes, etc. Existe el peligro de muerte por envenenamiento con monóxido de carbono
PT	Não utilize o churrasco num espaço confinado e/ou habitado, por exemplo, casas, tendas, caravanas, autocaravanas, barcos. Perigo de morte por envenenamento com monóxido de carbono
DK	Brug ikke grillen i et begrænset rum og/eller beboeligt rum f.eks. huse, telte, campingvogne, mobile huse, både. Fare for kullilteforgiftning.
NO	Ikke bruk grillen i lukkede områder eller innendørs, som for eksempel i hus, telt, campingvogn, bobil eller båt. Fare for dødelig karbonmonoksidforgiftning
SK	Gril nikdy nepoužívajte v uzavretých priestoroch a/alebo obytných priestoroch ako dom, stan, karavan, obytný prívies, loď a pod. Môže dôjsť k ohrozeniu života v dôsledku otravy kyslíčnikom uhlíčitým.
IS	Ekki nota grillið í lokuðu rými og/eða íbúðarhæfu rými t.d. húsi, tjaldi, hjólhýsi, bifreiðum eða bátum. Hætta á kolmónoxíðseitrun
CZ	Nepoužívejte gril v uzavřených prostorech nebo obydlích, například v domě, ve stanu, karavanu, v obytných vozech, na lodích. Hrozí nebezpečí smrtelné otravy oxidem uhelnatým.
IL	להוא, תיב נוג, מירוגמל שמשמש ללחב ו/או רוגס מוקמב לירגב שמתשהל יא תוומל מורגל הלולעש ינצמח דח ומחפ, תלערהל הנכס תמייק. הריס, מירוגמל שמשמה בכר ילכ, ואוורק
RO	Nu utilizați grătarul în spații închise și/sau spații de locuit, precum în casă, în cort, în rulotă, autorulotă sau în barcă. Există pericolul letal de intoxicație cu monoxid de carbon
GR	Μη χρησιμοποιείτε το μπάρμπεκιου σε περιορισμένο χώρο ή/και κατοικήσιμο χώρο π.χ. στίπια, σκηνή, τροχόσπιτα, μηχανοκίνητα στίπια, βάρκες. Κίνδυνος άνθρακα θνησιμότητα από δηλητηρίαση από μονοξείδιο.
HU	Ne használja a grillsütőt zárt helyen és/vagy lakható helyen, pl. házak, sátrak, lakókocsik, lakóautók, csónakok. Szénveszély Monoxid mérgezés halálos kimenetelű.
BG	Не използвайте барбекюто в затворено пространство и/или обитаемо пространство, напр. къщи, палатки, каравани, моторни къщи, лодки. Опасност от въглерод фатално отравяне с монооксид.
SI	Žara ne uporabljajte v zaprtem prostoru in/ali bivalnem prostoru, npr. hiše, šotori, prikolice, avtodomi, čolni. Nevarnost ogljika smrt zaradi zastrupitve z monoksidom.

IMPORTANT SAFETY INFORMATION

SAFETY SYMBOLS

DANGER, WARNING, and CAUTION statements are used throughout this Owner's Manual to emphasize critical and important information. Read and follow these statements to help ensure safety and prevent property damage.

The statements are defined below.



CAUTION

CAUTION: Indicates a potentially hazardous situation or unsafe practice which, if not avoided, may result in minor or moderate injury.



WARNING

WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



DANGER

DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

FOR OUTDOOR USE ONLY

1. For outdoor use only.
2. Do not use indoors or for commercial cooking.
3. Use appliance only in well-ventilated space.



WARNING

1. Do not store or use petrol or other flammable liquids or vapors in the vicinity of this or any other barbecue.

INSTALLER/ASSEMBLER:

Leave this manual with consumer.

CONSUMER:

Keep this manual for future reference.

It is the responsibility of the assembler/owner to assemble, install and maintain the barbecue.

Questions:

If you have questions during assembly or use of this barbecue contact your local dealer.

FOR YOUR SAFETY - BEFORE USING YOUR BARBECUE



WARNING

- This instruction manual contains important information necessary for the safe use of the appliance.
- Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook. Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.
- This appliance complies with technical standards and safety requirements for electrical appliances.

ELECTRIC SHOCK POSSIBLE


- This appliance is rated for: 220-240 Volts, 9.1 Amps, 50-60HZ, Power Output:2100 W
- Connect only to socket-outlet having an earthing ground and protected by circuit breaker with a rated fault operating current (RCD) having a maximum rating of 30 mA.
- Regularly inspect power cord sign of damage or wear. Do not use if cord is damaged.
- Supply cord must be replaced by a special cord or assembly available for the manufacturer or its service agent.
- Replace damaged part(s) only with Char-Broil supplied replacement parts. Do not attempt to repair damaged parts.
- In case of fire turn controller to **OFF** position, unplug barbecue from outlet and allow fire to burn out. Do not use water to put out a fire in this or another electrical appliance.
- To avoid the possibility of burns be sure barbecue is cool before removing and/or cleaning electric controller and heating element. Do not modify this product.
- Use appliance only as specified in this manual.
- Do not use in a traffic area where tripping over the cord is possible.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by Children without supervision.

- This barbecue is not intended for and should never be used as a heater.
- **Apartment Dwellers:** Check with management to learn the requirements and fire codes for using barbecue in your apartment complex. If allowed, use outside on the ground floor with a 60 cm clearance from walls or rails. Do not use on or under balconies.

SAVE THESE INSTRUCTIONS

Safety Tips

- The grease tray must be inserted into appliance and emptied after each use.
- If you have an appliance problem see the "Troubleshooting Section".
- Clean barbecue often, preferably after each cookout. If a bristle brush is used to clean any of the barbecue cooking surfaces, ensure no loose bristles remain on cooking surfaces prior to barbecuing. It is not recommended to clean cooking surfaces while barbecue is hot.

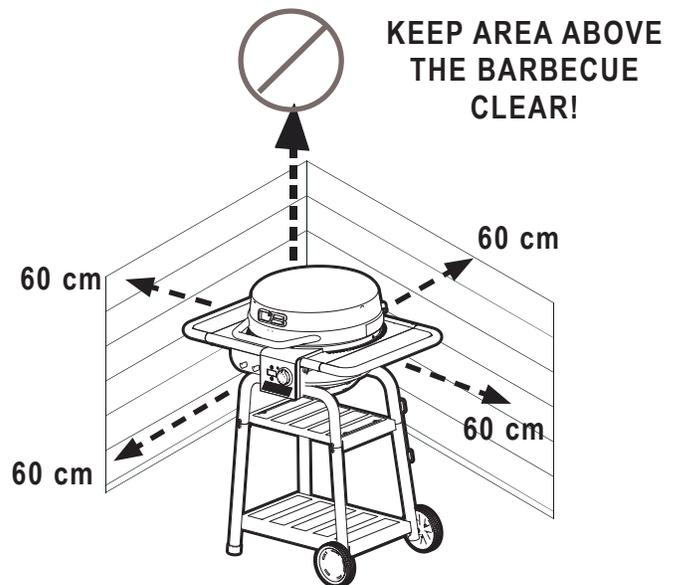

FOR YOUR SAFETY - BEFORE USING YOUR BARBECUE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS

- Do not touch hot surfaces with unprotected hands. Use handles and knobs provided for operation.
- To protect against electrical shock, do not immerse cord, plugs, controller or heating element in water or any other liquid.
- Do not leave appliance unattended.
- Close supervision is necessary when any appliance is used by or near children. Keep children and pets away from the appliance at all times.
- This appliance is not a toy.
- Never leave barbecue unattended when **ON**.
- Unplug from outlet when not in use and before moving or cleaning.
- Allow to cool before putting on or taking off parts. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. Use only accessory attachments recommended by manufacturer.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not use appliance for other than intended use. This appliance is not intended for and should never be used as a heater.
- To prevent barbecue from being splashed or falling into water, do not use barbecue within 3 meters of a pool, pond or other body of water.
- Keep barbecue and electric controller dry and out of rain at all times.
- Keep electric plugs off ground and dry.
- Do not use water or other liquid spray to clean product without first unplugging electric controller and removing heating element.

WARNING:

- Charcoal is intended to be used with this appliance, only when in charcoal mode.
- This appliance will be hot during and after use. Use insulated oven mitts or gloves and long-handled barbecue utensils for protection from hot surfaces or splatter from cooking liquids.
- Do not use or store gasoline, kerosene or other flammable liquids within 7 meters of this barbecue when in use.

Keep appliance area clear and free from materials that burn.

- Do not move the appliance when in use.
- When cooking, the appliance must be on a level, stable surface in an area clear of combustible material.
- The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- To avoid electrical shock disconnect electric cord and remove electric controller before removing heating element and cleaning barbecue. Never immerse electric controller or heating element in any liquid.
- Don't immerse the appliance in water for cleaning
- Do not use this appliance on the same circuit as other high powered appliances.



WARNING

- Putting out grease fires by closing the lid is not possible. This appliance is well ventilated for safety reasons.
- Do not leave appliance unattended while burning off food residue. If appliance has not been regularly cleaned, a grease fire can occur that may damage the product.

Extension Cord Use and Safety

- For best barbecue performance use of extension cord is not recommended.

For your safety - If you must use an extension cord:

- Use only outdoor type cord rated for 13 amperes or higher.
- Use the shortest length extension cord required. Do not connect 2 or more extension cords together.
- Keep connections dry and off ground.
- Do not let cord hang over edge of table top or other items where it can be pulled by children or tripped over.

This product must not be disposed together with domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.



USE AND CARE

Before first use of barbecue:

- Remove all packaging and sale labels from the barbecue. Do not use sharp tools to remove stickers.
- Wash cooking grate with warm soapy water, rinse and dry thoroughly.

Before each use of barbecue:

- Install and use the barbecue only on a firm and level surface to prevent tipping over.
- To prevent household circuit breakers from tripping, keep electric controller dry and do not use other electrical products on the same circuit.
- Check grease tray to make sure it is empty and is mounted under the drain hole.
- For stick-free cooking, apply a thorough coating of vegetable oil or vegetable oil based spray to the cooking grate.

Turn barbecue on:

- Ensure electrical controller is turned fully counterclockwise to the OFF position.
- Plug power supply cord into a properly grounded, GFI protected outlet. If extension cord must be used refer to "Extension Cord Use and Safety".
- Turn knob clockwise, Indicator light should come on.
- Fuel, such as charcoal briquettes, is not to be used with appliance.
- Charcoal is intended to be used with this appliance, only when in charcoal mode.

IMPORTANT NOTICE

Your Electric Barbecue requires a full 13-amp Type G (16 amp Type E/F is preferred) electric power outlet to operate properly. Running it on a lower current outlet/circuit breaker may cause the barbecue and/or circuit to trip.

To prevent power loss:

- An exterior outlet with a standard 16-amp circuit breaker is recommended.
- Unplug any other electrical devices, like patio lights, powered by the exterior outlet 16 amp circuit breaker before plugging in your barbecue.

If power is lost during use:

- Identify and unplug any other electrical devices that lost power at the same time and reset the breaker.
- Try using a different electrical outlet, if available. Check your owner's manual for recommended use of extension cords.

If your circuit breaker continues to trip during use, consult a qualified electrician.



CAUTION

Do not use sharp or pointed tools to clean barbecue.

Do not use abrasive oven cleaners, steel wool or metal brushes to clean porcelain grates or barbecue body. They will damage the finish.

Replace damaged part(s) only with Char-Broil certified replacement parts. Do not attempt to repair damaged parts.



DANGER

In case of fire unplug barbecue from outlet and allow fire to burn out. Do not use water to put out a fire in this or another electrical appliance.

To avoid electrical shock disconnect electric cord before removing heating element and cleaning barbecue. Never immerse electric controller or heating element in any liquid.

To avoid the possibility of burns be sure barbecue is cool before cleaning electric controller and heating element.

Barbecueing:

- For best results, cook with the lid closed to hold in heat and provide complete cooking.
- Temperature display on the controller indicates the cooking temperature inside the barbecue.
- Controller setting for various foods are dependant upon outdoor conditions and personal cooking preferences.

Turn barbecue off:

- To turn controller/barbecue off, press and hold the power button for 3 seconds until the display turns off.
- Unplug cord from outlet.

Cleaning electrical controller and heating element bracket:

- Clean controller case by wiping with a damp cloth using a mild detergent or hot soapy water.
- It is not necessary to clean the heating element. However, the element bracket may be cleaned with a damp cloth using a mild detergent or hot soapy water.
- Dry electrical controller and heating element before use.

Controlling grease fires:

To aid in controlling grease fires use the following precautions:

- Keep barbecue free from grease; chance of fire is greatly increased by grease buildup.
- Trim excess fat off meat and use less fatty cuts of meat to reduce chance of grease fires.
- If flare-up occurs during cooking reduce controller setting and close lid.
- If flare-up continues turn off the controller and unplug the power cord.
- Clean the reflector plate assembly under the heating element at least once a season, more often with heavy use.

USE AND CARE

Charcoal Lighting Instructions

1. With a cold grill, remove warming rack and cooking grate. See figure A.
2. Place charcoal rack in grill. See figure B.
3. Place a single layer of charcoal on charcoal rack, for lump charcoal: 0.5 kg maximum; for charcoal briquettes: 0.9 kg maximum.
4. Replace cooking grate and align the indicator to the C on the back panel for charcoal mode. See figure C.
5. Turn controller on "5" HIGH for 10 to 15 minutes with lid closed.
6. Turn controller OFF.
7. Open lid and wait 5 minutes, or until the charcoal turns white, before adding food.

NOTE: The barbecue should be heated up and the fuel kept red hot for at least 30 minutes prior to your first cook.



WARNING

- The type of fuel: Barbecue lump charcoal and barbecue charcoal briquettes that comply with local requirements, when without local requirements then follow latest EN 1860-2 standard requirements.
- Do not operate Electric for more than 15 minutes when using charcoal.
- Never use lighter fluid, kerosene, gasoline or alcohol to light charcoal.
- Never use instant light or lump charcoal in your grill.
- Other fuels such as wood, wood pellets, paper or coal must not be used.
- Start charcoal **ONLY** with charcoal rack properly placed in the firebox. See figure B.
- **Warning!** This barbecue will become very hot, do not move it during operation.
- Do not use indoors!
- **Warning!** Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3!
- **Warning!** Keep children and pets away.



WARNING

CARBON MONOXIDE HAZARD

Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor. NEVER burn charcoal inside homes, vehicles, or tents.

Cleaning Recommendations

- Clean up of the barbecue after each charcoal use is required.
- Make sure coals are completely extinguished and the unit has adequately cooled before cleaning.
- Removed charcoal rack and clean out all ashes.

Note: After use, the charcoal rack may discolor. This is normal during use.

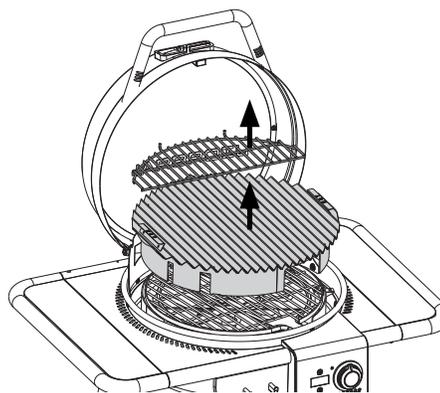


Figure A

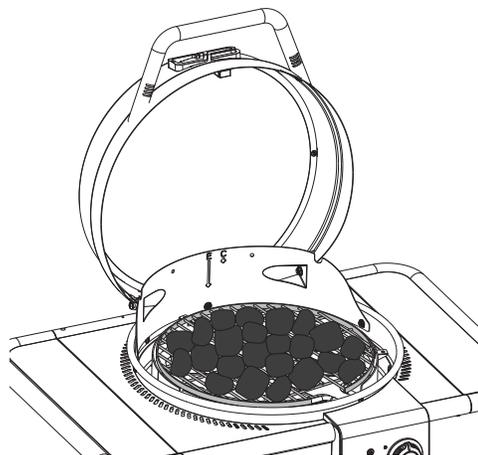


Figure B

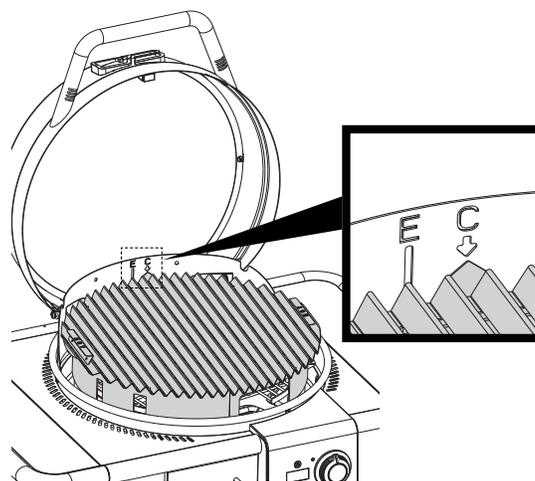


Figure C

USE AND CARE



WARNING

After a charcoal fire appears extinguished, unconsumed embers can retain heat for up to 24 hours, and if exposed to fresh air, can burst into flame unexpectedly. Any such embers outside the firebox of the grill pose a fire hazard and can ignite combustible surfaces such as wooden decks.

Cleaning your barbecue:

Excess build up of burned grease and food particles will reduce the barbecue's cooking performance. To obtain optimum performance:

- Clean the reflector plate assembly and frame at least once a season, more often with heavy use.
- Best results are obtained by brushing particle buildup downward and through drain hole in bottom of barbecue.
- Using a mild detergent or hot soapy water, moderately scrub surface of the reflector plate assembly with a plastic or brass bristle brush.
- Clean cooking grates regularly with warm soapy water or a baking soda and water solution. Use non-abrasive scouring powder for stubborn stains. If a bristle brush is used to clean any of the barbecue cooking surfaces, ensure no loose bristles remain on cooking surfaces prior to barbecuing. It is not recommended to clean cooking surfaces while barbecue is hot. Do not clean the cooking grate with a scraper, sharp tool or putty knife.
- It is not recommended to clean the cooking grates in a dishwasher.

Storing your barbecue:

- Clean cooking grate.
- Store barbecue in weather protected area or under barbecue cover when not in use.
- Always unplug your barbecue prior to storage.



WARNING

For Safe Use of Your appliance and to Avoid Serious Injury:

- The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- When cooking, the appliance must be on a level, stable surface in an area clear of combustible material.
- Do not leave appliance unattended. Keep children and pets away from the appliance at all times.
- Do not move the appliance when in use.
- This appliance is not intended for and should never be used as a heater.
- This appliance will be hot during and after use. Use insulated oven mitts or gloves and long-handled barbecue utensils for protection from hot surfaces or splatter from cooking liquids.
- Keep appliance area clear and free from materials that burn.
- Keep appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Use appliance only in well-ventilated space.



CAUTION

- Putting out grease fires by closing the lid is not possible. This appliance is well ventilated for safety reasons.
- Do not leave appliance unattended while burning off food residue. If appliance has not been regularly cleaned, a grease fire can occur that may damage the product.

USE AND CARE

Food Safety

Food safety is a very important part of enjoying the outdoor cooking experience. To keep food safe from harmful bacteria, follow these four basic steps:

Clean: Wash hands, utensils, and surfaces with hot soapy water before and after handling raw meat and poultry.

Separate: Separate raw meats and poultry from ready-to-eat foods to avoid cross contamination. Use a clean platter and utensils when removing cooked foods.

Cook: Cook meat and poultry thoroughly to kill bacteria. Use a thermometer to ensure proper internal food temperatures.

Chill: Refrigerate prepared foods and leftovers promptly.

How To Tell If Meat Is Cooked Thoroughly

- Meat and poultry cooked in the appliance often browns very fast on the outside. Use only thawed meat and a meat thermometer to be sure food has reached a safe internal temperature, and cut into food to check for visual signs of doneness.
- We recommend food to be at least 40°F before cooking in your appliance.
- Whole poultry should reach 165° F. Juices should run clear and flesh should not be pink.
- Beef, veal and lamb steaks, roasts and pork chops can be cooked to 145° F with 3 minute rest.
- NEVER partially cook meat or poultry and finish cooking later. Cook food completely to destroy harmful bacteria.
- Use a meat thermometer to ensure proper internal food temperatures.

Recommended Internal Cooking Temperatures

Ground Meat

Beef, Pork, Veal, Lamb	71°C 160°F
Turkey, Chicken.	71°C 160°F

Fresh Beef, Veal, Lamb

Medium Rare (let stand 3 minutes before cutting)	63°C 145°F
Medium	71°C 160°F
Well Done.	77°C 170°F

Poultry

Chicken & Turkey, whole	74°C 165°F
Poultry Parts	74°C 165°F
Duck & Goose	74°C 165°F

Fresh Pork

Medium Rare (let stand 3 minutes before cutting)	63°C 145°F
Medium	71°C 160°F
Well Done	77°C 170°F

TROUBLE SHOOTING

Problem	Possible Cause	Prevention/Solution
<p>Controller Failure</p> <ul style="list-style-type: none"> • No power to the control console. • The power indicator light is on, but you don't feel any heat generation. 	<ul style="list-style-type: none"> • The unit is not plugged in. • The power circuit fuse has tripped. • A power cord malfunction or failure. • Controller (PCB) malfunction. 	<ul style="list-style-type: none"> • Check to be sure if cord is properly plugged into outlet. • Check the power circuit fuse and replace the right fuse. • If you find a malfunctioning power cord, immediately disconnect it and do not use it to prevent electric shock or fire. Do not attempt to repair it on your own, contact after-sales service to obtain (or purchase) the correct replacement parts. • If the cord is in good condition and is properly plugged into outlet, and confirm that the power supply is normal. But the power indicator light is still off. Then there is a high probability that the controller is abnormal. Contact after-sales service to obtain (or purchase) the correct replacement parts and replacement guide. • Note: The fuse of this product is embedded in the PCB (printed circuit board). Cannot be replaced by the user.
<p>Heating Element Failure</p> <ul style="list-style-type: none"> • The power indicator light is on, but without any heating generation. 	<ul style="list-style-type: none"> • The heating element is damaged. 	<ul style="list-style-type: none"> • After excluding non controller and non power cord issues, there is a high probability that the heating element is damaged. Contact after-sales service to obtain (or purchase) the correct replacement parts and replacement guide.
<p>RCD Issues</p> <ul style="list-style-type: none"> • No power to the control console. • The power indicator light is off, barbecue stops working. • RCD tripping. 	<ul style="list-style-type: none"> • Faulty appliances. • Wiring Faults. • Moisture ingress. • Overloaded Circuits. • Power Surges. • RCD Degradation. • Component Degradation. 	<ul style="list-style-type: none"> • Reset the RCD: Push the switch firmly into the "on" or "up" position. • Test the RCD: Press the "TEST" button. A working RCD will cut power instantly. • Check Associated Circuits: If the RCD trips again, turn off all the circuit breakers that the RCD protects. • Identify the Fault: If the RCD resets with the circuit breakers off, turn them back on one by one. The one that causes the RCD to trip again indicates the faulty circuit or appliance. • Unplug faulty Appliances: If a circuit is the culprit, unplug appliances on that circuit. • Plug a different appliance into the same outlet and turn the appliance on. • If tripping occurs with a different appliance an electrician may be required.

Char-Broil®

GB	NOTE: This information is a guide only. Items included in your BBQ specification may differ depending on region or specific dealer specification.	All specifications are subject to change without notice.
CH,FR	NOTE: Ces renseignements sont donnés à titre indicatif. Il est possible que les articles inclus dans les spécifications de votre barbecue diffèrent selon la région ou les caractéristiques stipulées par le concessionnaire.	Toutes les caractéristiques sont susceptibles d'être modifiées sans préavis.
LU,AT,CH,DE	ANMERKUNG: Diese Anleitung dient nur zu Informationszwecken. Einzelteile der Grillspezifikation sind unter Umständen verschieden entsprechend der Vertriebsregion oder bestimmten Händleranforderungen.	Änderungen ohne vorherige Bekanntgabe vorbehalten.
CH,IT	AVVERTENZA: Queste informazioni hanno il valore di guida soltanto. Gli articoli compresi nelle caratteristiche tecniche del barbecue potrebbero variare a seconda della regione o del concessionario.	Tutti i dati tecnici possono cambiare senza preavviso.
LU,BE,NL	ATTENTIE: Deze informatie is alleen bedoeld als gids. Onderdelen in uw BBQ specificatie en pakket kunnen per regio of per dealer verschillen.	Alle specificaties kunnen zonder voorafgaande kennisgeving worden gewijzigd.
SE	ANM.: Denna information är endast avsedd som handledning. Specifikationerna för grillen kan variera regionalt eller beroende på de krav som olika återförsäljare har.	Kaikki oikeudet teknisten tietojen muutoksiin pidätetään.
FI	HUOMATKAA: Nämä tiedot ovat pelkästään suuntaa antavia. ostamamme grillin yksityiskohdat voivat olla erilaiset paikkakunnan tai erityisten myykohtaisten yksityiskohtien mukaan.	Kaikki yksityiskohdat voivat muuttua ilman etta niistä erikseen ilmoitetaan.
ES	NOTA: Esta información es una guía únicamente. Es posible que las indicaciones incluidas en las especificaciones de su Asador seandiferentes según la región o las especificaciones específicas del representante.	Todas las especificaciones estan sujetas a cambios sin previo aviso.
PT	NOTA: Esta informação é simplesmente um guia. Os itens incluídos na especificação do seu BBQ poderão diferir dependendo da especificação da região ou do vendedor específico.	Todas as especificações estão sujeitas a alteração sem aviso.
DK	NB.: Denne information er kun vejledende. Specifikationer kan variere efter ønske fra forhandler, eller i henhold til nationale regler.	Alle specifikationer kan ændres foruden varsel.
NO	NB.: Denne informasjon er kun veiledende. Spesifikasjoner kan variere som stipulert av forhandler, eller i henhold til nasjonale krav.	Spesifikasjoner kan endres utenvarsel.
SK	POZNÁMKA: Tieto informácie slúžia len ako pomôcka. Údaje uvedené v technických údajoch vášho grilu sa môžu líšiť podľa regiónu alebo špecifických technických údajov stanovených predajcom.	Všetky špecifikácie sa môžu zmeniť bez upozornenia.
IS	ATHUGIÐ: Þessar upplýsingar eru aðeins leiðbeinandi. Hlutir sem finna má í lýsingu á grilli þínu geta verið mismunandi á milli svæða eða söluaðila.	Allar lýsingar eru háðar breytingum án viðvörunar.
RO	NOTĂ: Prezenta informație este numai un ghid. Articolele incluse în specificația BBQ-ului dumneavoastră pot diferi în funcție de zona și specificul distribuitorului.	Toate specificațiile sunt supuse modificărilor fără notificare.
CZ	POZNÁMKA: Tyto informace slouží pouze jako instruktáž. Součástí vašeho BBQ. Specifikace se mohou lišit podle regionu/země nebo specifických údajů prodejce.	Všechny informace mohou být změněny bez předchozího upozornění.
IL	הערה: מידע זה נועד לייחוס בלבד. הפרטים הכלולים במפרט של מכשיר הגריל שברשותך עשויים להשתנות בהתאם לאזור או לדרישות של מפיץ מסוים.	כל המפרטים כפופים לשינויים ללא הודעה.



©2025 Char-Broil Europe GmbH
 Gasstraße 4c
 D-22761 Hamburg
 Germany
 Printed in China.