

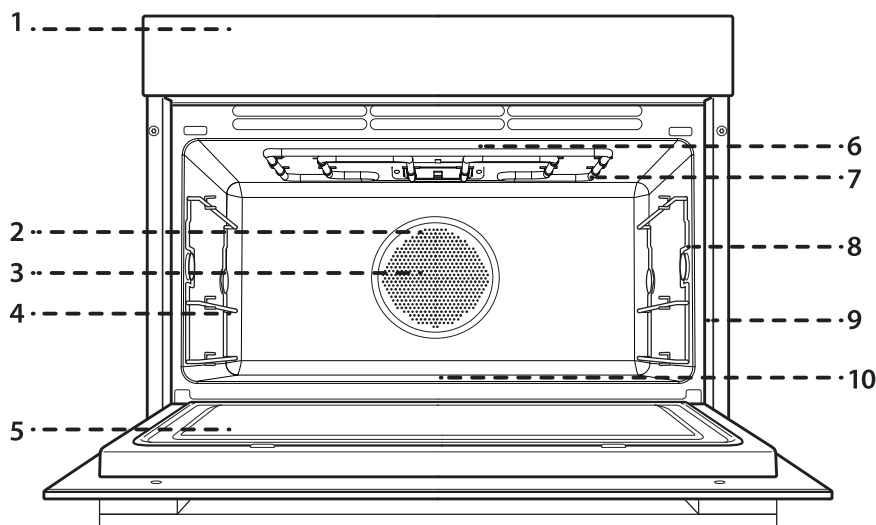


THANK YOU FOR BUYING A BAUKNECHT PRODUCT
In order to receive a more complete assistance, please register your product on www.register10.eu



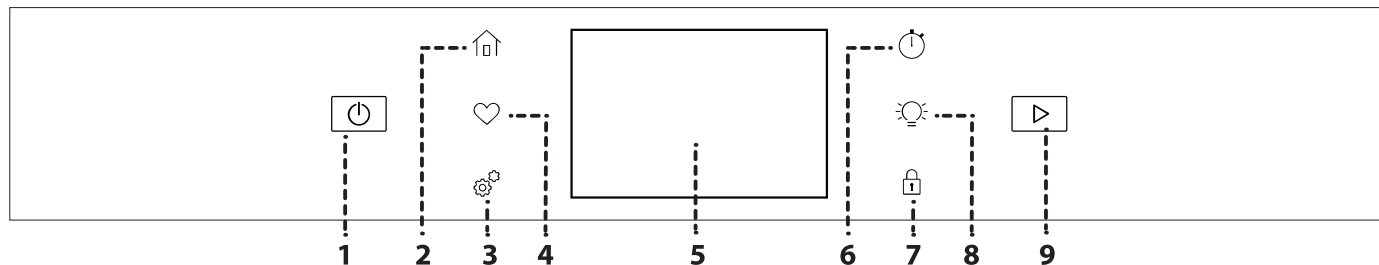
Before using the appliance carefully read the Safety Instruction.

PRODUCT DESCRIPTION



1. Control panel
2. Fan
3. Circular heating element (not visible)
4. Shelf guides
5. Door
6. Lamp
7. Grill
8. Food probe insert point
9. Identification plate (do not remove)
10. Lower heating element (not visible)

CONTROL PANEL DESCRIPTION



1. ON / OFF

For switching the oven on and off

2. HOME

For quick access to the main menu.

3. TOOLS

To choose from several options and also change the oven settings and preferences.

4. FAVORITES

For retrieving up the list of your favorite functions.

5. DISPLAY

6. TIMER

This function can be activated either when using a cooking function or alone for keeping time.

7. LOCK

Enables you to lock the buttons on the touch pad so they cannot be pressed accidentally.

8. LIGHT

To switch on or off the oven lamp and save energy.

9. START

For starting a function.

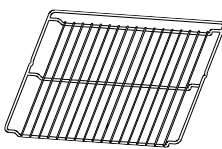
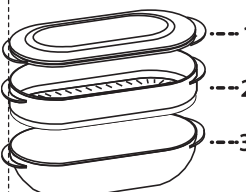
ACCESSORIES

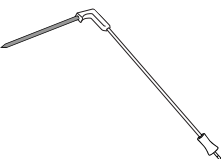
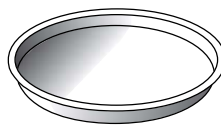
Before purchasing other accessories that are available on the market, make sure that they are heat-resistant and suitable for steaming.

Make sure that there is a gap of at least 30 mm between the top of any container and the walls of the

cooking compartment in order to allow steam to flow sufficiently.

Accessories during microwave function may raise in temperature. It is recommended to use protection to handle accessories at the end of the cycle.

	WIRE SHELF The wire shelf is suitable for all cooking modes, also in Microwave cooking. When using microwaves place the wire shelf always on level 1 (the lower one). You can place food directly on the wire shelf or use it to support baking trays and tins or other ovenware resistant to heat and microwaves.
	BAKING TRAY The baking tray is suitable for all cooking modes except for "Microwave" functions. Can be used to cook all kind of foods without container. Use it to collect the cooking juices, placing it below the wire shelf.
	HANDLE FOR CRISP PLATE Useful for removing the hot Crisp plate from the oven.
	STEAMER* (ONLY IN SOME MODELS) To steam foods such as fish or vegetables, place these in the basket (2) and pour drinking water (100 ml) into the bottom of the steamer (3) to achieve the right amount of steam. To boil foods such as potatoes, pasta, rice or cereals, place these directly on the bottom of the steamer (the basket is not required) and add an appropriate amount of drinking water for the amount you are cooking. For best results, cover the steamer with the lid (1) provided. Always place the steamer on the wire shelf at level 1 and only use it with the appropriate cooking functions, or with microwave function.

	FOOD PROBE To accurately measure the core temperature of food during cooking. Thanks to its rigid support, it can be used for meat and fish, and also for bread, cakes and baked pastries.
	CRISP PLATE Only for use with the designated functions. The Crisp plate must always be placed in the center of the wire shelf and can be pre-heated when empty, using the special function for this purpose only. Place the food directly on the Crisp plate. Place the silicone feet between the bars of the wire shelf for added stability.

The number of accessories may vary depending on which model is purchased.

*Other accessories can be purchased separately from the After-sales Service.

INSERTING THE WIRE SHELF AND OTHER ACCESSORIES

Insert the wire shelf onto the level you require by holding it tilted slightly upwards and resting the raised rear side (pointing upwards) down first.

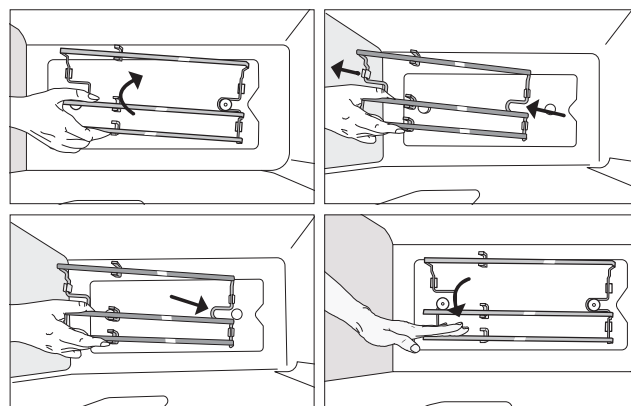
Then slide it horizontally along the runners as far as possible. Other accessories, like the baking tray, are to be inserted horizontally, letting them slide on the runners

Push the accessories all the way in, making sure, that it does not touch the appliance door.

REMOVING AND REFITTING THE LADDER RACKS

There are two ladder racks on both sides of the oven cavity, anchored on two button-shaped supports. The ladder racks are removable to make cleaning more convenient.

1. To remove the ladder racks, firmly grip the external part of the guide, and pull it upwards to extract it from the frontal support while rotating on the rear support, then slide out the whole part from the cavity.
2. To reposition the ladder racks, slide the back part onto the rear support. Then, once anchored, push the assy down until the ladder rack is inserted into the frontal support.



FUNCTIONS

MANUAL MODES



MICROWAVE

For quickly cooking and reheating food or drinks.

Required accessories: wire shelf, microwave-safe and heatproof container.

POWER (W)	RECOMMENDED FOR
950	Quickly reheating drinks or other foods with a high water content. If the food contains egg or cream choose a lower power.
750	Cooking vegetables.
600	Cooking meat, fish and dishes that cannot be stirred.
500	Cooking meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.
350	Slow, gently cooking. Perfect for melting butter or chocolate.
160	Defrosting frozen foods or softening butter and cheese.
90	Softening ice cream.

ACTION	FOOD	POWER (W)	DURATION (min)
Reheat	2 cups	950	1 - 2
Cook	Sponge cake	750	5 - 6
Cook	Egg custard	750	10 - 12
Cook	Meat loaf	600	15 - 25



CRISP

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special Crisp plate.

Required accessories: wire shelf at level 1, Crisp plate, handle for the Crisp plate.

FOOD	DURATION (min)
Leavened cake	10 - 12
Hamburgers*	9 - 15

*Turn food halfway through cooking

CRISP FRY: Fresh Foods and Frozen Foods

This healthy and exclusive function combines the quality of crisp function with the properties of the warm air circulation. It allows crunchy, tasty frying results to be achieved, with a remarkable reduction of oil needed compared to the traditional way of cooking, even removing the need for oil in some recipes.

To achieve best results with fresh foods brush or season with a little quantity of oil. Cook frozen food directly without any addition of oil.

Required accessories: wire shelf at level 1, Crisp plate, handle for the Crisp plate.



FAST PREHEAT

For quickly preheating the oven before a cooking cycle. Wait for the function to finish before placing food inside the oven. Once preheating has finished, the oven will select the "Forced Air" function automatically.

Required accessories: wire shelf with pan or baking tray



GRILL

For browning, grilling and gratins. We recommend turning the food during cooking.

Recommended accessories: wire shelf

FOOD	GRILL LEVEL	DURATION (min)
Toast	High	5 - 6



GRILL + MW

For quickly cooking and gratinating dishes, combining the microwave and grill functions.

Required accessories: wire shelf at level 1, microwave-safe and heatproof container.



TURBO GRILL

For perfect results, combining the grill and oven air convection. We recommend turning the food during cooking.

Recommended accessories: wire shelf



TURBO GRILL + MW

For quickly cooking and browning your food, combining the microwave, grill and the oven air convection.

Required accessories: wire shelf at level 1, microwave-safe and heatproof container.

FOOD	POWER (W)	GRILL LEVEL	DURATION (min)
Roast Chicken	350	Medium	20 - 30

*Turn food halfway through cooking



CONVENTIONAL

For perfectly cooking and browning both on the top and bottom any kind of dish on one shelf only. To achieve best results this function have the preheating phase: wait the end of preheat to insert the food.

Required accessories: baking tray or wire shelf and heatproof container.

FOOD	TEMP. (°C)	DURATION (min)
Cupcake / Smallcake	160	20 - 25
Cookies	165	15 - 20



CONVENTIONAL + MW

For preparing baked dishes more quickly by combining the conventional oven and the microwave.

Required accessories: wire shelf at level 1, microwave-safe and heatproof container.



FORCED AIR

For cooking sweets and meats with hot air circulation. To achieve best results this function have the preheating phase: wait the end of preheat to insert the food. Is possible to use it for cooking different foods that require the same cooking temperature on several shelves at the same time. This function can be used to cook different foods without odours being transferred from one food to another.

Required accessories: baking tray or wire shelf and heatproof container.



FORCED AIR + MW

For cooking any kind of dish on one shelf only combining hot air circulation and the microwave.

Required accessories: wire shelf at level 1, microwave-safe and heatproof container.



CONVECTION BAKE

For cooking meat, baking cakes and pies with fillings on one shelf only. To achieve best results this function have the preheating phase: wait the end of preheat to insert the food.

Required accessories: wire shelf with pan or baking tray



CONVENTION BAKE + MW

For quickly cooking all food with a liquid filling, by combining the microwave, conventional heating and air convection.

Required accessories: wire shelf at level 1, microwave-safe and heatproof container.



SPECIAL FUNCTIONS



KEEP WARM

For keeping just-cooked food hot and crisp, including meat, fried foods or cakes.



RISING

For optimal proving of sweet or savoury dough. To maintain the quality of proving, do not activate the function if the oven is still hot following a cooking cycle.

Required accessories: wire shelf and heatproof container.



YOGURT

For making yogurt.

Required accessories: wire shelf and heatproof container.



DEHYDRATION

To dehydrate fruits and vegetables. Cut in thin slices and place directly on wire shelf.

Required accessories: wire shelf



MAXI-COOKING

For cooking large joints of meat (above 2.5 kg). It is advisable to turn the meat over during cooking, to obtain even browning on both sides. It is best to baste the meat every now and again to prevent it from drying out.

Required accessories: baking tray at level 2.



ECO CYCLE

For cooking stuffed roasting joints and fillets of meat on a single shelf. When this ECO function is in use, the light will remain switched off during cooking. To use the ECO cycle and therefore optimise power consumption, the oven door should not be opened until the food is completely cooked.

Required accessories: wire shelf with pan or baking tray.



COOK 3

For cooking different foods that require the same cooking temperature on three levels at the same time without mixing flavors and smells.

This function can be used to cook cookies, tarts, frozen pizzas and to prepare a complete meals. The oven does have to be preheated.



COOKIES

Use this function to cook three trays of similar shortbread biscuits to maximize results. The function includes a preheat. Take the three trays out of the oven at the same time.



TART

Use this function to cook three trays of similar tarts to maximize results. The function includes a preheat. Take the three trays out of the oven at the same time.



PIZZA (FROZEN)

Use this function to cook three trays of similar frozen pizzas to maximize results. The function includes a preheat. Take the three trays out of the oven at the same time.



COOK 3 MENU 1

This cycle is designed to cook a complete meat-based meal and a dessert. The oven requires preheating.

Example of complete meal

Prepare a fruit tart according to your preferences in a round pan to be placed on the wire shelf at level 3. Prepare a lasagna according to your preferences (1.5 - 2 kg) in a pan to be placed on the wire shelf at level two. Prepare 6-10 chicken drumsticks with diced potatoes (500 - 800 g) directly in the baking tray to be placed on level 1. After preheating, bake all the dishes at the same time. After 50-60 minutes take out the tart, after 60-70 minutes take out the lasagna, after 80-90 minutes take out the chicken with potatoes.



COOK 3 MENU 2

This cycle is designed to cook a complete fish or vegetarian meal and a dessert. The oven requires preheating.

Example of complete meal

Prepare a fruit tart according to your preferences in a round pan to be placed on the wire shelf at level 3. Prepare pesto lasagna or cannelloni according to your preference (1.5 - 2 kg) in a metal or pyrex tray to be placed on the wire shelf at level two. Prepare fish fillets in foil (700 - 900 g) with sliced vegetables (600 -

900 g) directly in the baking tray to be placed on level 1. After preheating, bake all the dishes at the same time. After 45-55 minutes take out the tart, after 55-65 minutes take out the lasagna, after 60-70 minutes take out the fish with vegetables.

AUTO MODES

With the Auto Modes, simply select the type and weight or the quantity of the food items to obtain the best results. The oven will automatically calculate the optimum settings and continue to change them as cooking progresses.

To use at best this function, follow the indications on the relative cooking table.

Due to food variability, the cooking duration is set on an average grade. We always recommend to check the internal doneness of food and in case prolong the cooking time to achieve proper doneness.

DYNAMIC DEFROST

For quickly defrosting various different types of food. Always place the food in a container directly on the wire shelf for best results, except for Crisp Bread Defrost. At the end let the food stand for 5 minutes.

CRISP BREAD DEFROST

This exclusive Whirlpool function allows you to defrost frozen bread. Combining both Defrost and Crisp technologies, your bread will taste and feel as if it were freshly baked. Use this function to quickly defrost and heat frozen rolls, baguettes & croissants. The Crisp Plate must be used in combination with this function, directly placed on wire shelf.

FOOD	WEIGHT
Timed Defrost	-
Meat	100 g - 2.0 kg
Poultry	100 g - 3.0 kg
Fish	100 g - 2.0 kg
Crisp Bread Defrost	50 - 800 g

DYNAMIC REHEAT

For reheating ready-made food that is either frozen or at room temperature. The oven automatically calculates the settings required to achieve the best results in the shortest amount of time. Place food on a microwave-safe and heatproof dinner plate or dish directly on wire shelf at level 1.

Food	Weight/portions/pieces	Note
Plated Meal	250 - 800 g	Take out from packaging being careful to remove any aluminium foil. At the end of reheating process 1-2 minutes standing time always improves the result.
Lasagna [frozen]	400 g - 1.5 kg	Take out from packaging being careful to remove any aluminium foil.
Soup	100 - 800 g	Heat uncovered in a single container.
Milk	100 - 500 g	Heat uncovered in a single container.

Food	Weight/portions/pieces	Note
Water	100 - 500 g	Heat uncovered in a single container.

DYNAMIC SOFT & MELT

For melting and softening food. The oven automatically calculates the settings required to achieve the best results in the shortest amount of time. Place food on a microwave-safe and heatproof container directly on the wire shelf at level 1.

Food	Weight/portions/pieces	Note
Butter Soften	100 - 500 g	Place the butter on a container directly on the wire shelf for best results.
Ice Cream Soften	100 - 500 g	If you put the ice cream container directly in the oven, be sure that the container is microwave safe.
Chocolate Melting	100 - 500 g	Cut the chocolate in pieces for best results. At the end stir the chocolate to complete the melt process.
Cheese Melting	100 - 500 g	Cut the cheese in pieces for best results. At the end stir the cheese to complete the melt process.

DYNAMIC MW SOUS VIDE

Sous vide is a professional cooking technique that requires the use of vacuumized food grade plastic pouches, cooking at precisely controlled temperatures. This innovative function uses microwaves to accelerate the cooking process without losing the accuracy and performance guaranteed by this cooking method. The gradual and accurate cooking process contributes to the development of exceptional tenderness, flavor, and also ensures cooking uniformity within the whole food. This function allows you to cook meat, fish, vegetables and fruits, achieving chef's results. Check the Sous Vide cooking table to properly use the function.

OTHER FUNCTIONS MENU



FAVORITES

For retrieving the list of favorite functions.



SETTINGS

For adjusting the oven settings.

When "DEMO" is "On" all commands are active and menus available but the oven doesn't heat up. To deactivate this mode, access "DEMO" from "SETTINGS" menu and select "Off".

By selecting "FACTORY RESET", the product switches off and then it returns to first switch on. All settings will be deleted.

KITCHEN TIMER

This function can be activated either when using a cooking function or alone for keeping time. Once started, the timer will continue to count down independently without interfering with the function itself. Once the timer has been activated, you can also select and activate a function.

The timer will continue counting down at the top-right corner of the screen.

To retrieve or change the kitchen timer:

- Press kitchen timer option.

An audible signal will sound and the display will indicate once the timer has finished counting down the selected time.

- Tap "PAUSE" if you want to pause the timer. You can then tap "RESUME" to restart the timer.
- Tap "CANCEL" to cancel the timer or set a new timer duration.
- Tap "+1 min" to increase the duration of 1 minute.

LIGHT

To switch on or off the oven lamp.



CONTROL LOCK

The "Control Lock" enables you to lock the buttons on the touch pad so they cannot be pressed accidentally.

To unlock the appliance, long press the lock key on the touch pad.

AUTO MODES COOKING TABLE

For cooking several kind of dishes and foods and achieving optimal results in the easiest and quickest way. To get the best from this function, follow the indications on the relative cooking table.

Category	Food	Weight/ portions/pieces	Notes	Accessories
PASTA & CEREALS	Pasta Boil	1 - 3 portions	Set recommended cook time for the pasta. Add salted water and pasta all together into the steamer bottom and cover with steamer lid. Consider around 100g of pasta for each portion. Use 400g of water for each portion of pasta.	1 
	Lasagna	-	Prepare according to your favorite recipe. Pour bechamel sauce on top and sprinkle with cheese to get perfect browning.	1  + 
	Rice	1 - 4 portions	Set recommended cook time for rice. Add water and rice all together into the steamer bottom and cover with lid. Consider around 100g of rice for each portion. Use 300g of water for each portion of rice.	1 
	Spelt	1 - 4 portions	Set recommended cook time for spelt. Add water and spelt all together into the steamer bottom and cover with lid. Consider around 100g of spelt for each portion. Use 300g of water for each portion of spelt.	1 
	Barley	1 - 4 portions	Set recommended cook time for barley. Add water and barley all together into the steamer bottom and cover with lid. Consider around 100g of barley for each portion. Use 300g of water for each portion of barley.	1 

ACCESSORIES	 Wire shelf	 Heathproof tray on wire shelf	 Drip tray / Baking tray	 Heath and MW-proof container	 Food Probe	 Steamer bottom and lid	 Entire steamer	 Crisp plate
-------------	---	--	--	---	---	---	---	--

Category	Food	Weight/ portions/pieces	Notes	Accessories
MEAT	Roast Beef	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let rest for at least 15 minutes before carving.	1  +  + 
	Burger Patties	100 - 500 g	Lightly grease the crisp plate before preheating. The crisp plate needs to be preheated before inserting the food. The oven will notify you when it's time to insert the food. To get perfect results, during cooking you will be asked to turn food.	1 
	Roast Beef - Slow cooking	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let rest for at least 15 minutes before carving.	1  +  + 
	Roast Pork	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let rest for at least 15 minutes before carving.	1  +  + 
	Pork Shank	-	Brush with oil and rub with salt and pepper. Season with garlic and herbs as you prefer. At the end of cooking let rest for at least 15 minutes before carving.	1  +  + 
	Pork Ribs	400 g - 1.5 kg	Brush with oil and season as you prefer. Rub with salt and pepper. Distribute evenly in the container with the bone side downwards.	1 
	Bacon	50 - 400 g	The crisp plate needs to be preheated before inserting the food. The oven will notify you when it's time to insert the food. Distribute evenly in the crisp plate after preheat. To get perfect results, during cooking you will be asked to turn food.	1 
	Sausages & Wurstel	200 g - 1 kg	Distribute evenly on the crisp plate. Pierce the sausages with a fork to prevent bursting. To get perfect results, during cooking you will be asked to turn food.	1 
	Roast Chicken	800 g - 2.5 kg	Brush with oil and season as you prefer. Rub with salt and pepper. Insert into the oven with the breast side up.	1 
	Poultry Pieces	1 batch	Brush with oil and season as you prefer. Distribute evenly on the wire shelf. Use wire shelf on level 2 and baking tray with one cup of water on level 1 to collect foods essudates.	2  + 1 
	Poultry Breast Steamed	-	Add around 100g of water in the steamer bottom and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1 
	Breaded Fried Chicken	100 - 500 g	Brush with oil. Distribute evenly in the crisp plate.	1 

ACCESSORIES								
	Wire shelf	Heathproof tray on wire shelf	Drip tray / Baking tray	Heath and MW-proof container	Food Probe	Steamer bottom and lid	Entire steamer	Crisp plate

Category	Food	Weight/ portions/pieces	Notes	Accessories
FISH	Roasted Whole Fish	-	Brush with oil and season as you prefer.	1  +  + 
	Whole Fish Steamed	-	Add around 100g of water in the steamer bottom and position the fish in the center of the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Roasted Fish Steak	200 - 800 g	Brush with oil and season as you prefer.	1  + 
	Fish Fillets Steamed	-	Add around 100g of water in the steamer bottom and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Mussels Steamed	-	Add around 100g of water in the steamer bottom and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Shrimps Steamed	-	Add around 100g of water in the steamer bottom and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Fish and Chips [*]	1-3 portions	Distribute evenly in the crisp plate alternating the fish fillets and the potatoes. Consider around 100g of fish and 100g of chips for each portion.	1  + 
	Fried Seafood [*]	200 - 800 g	Distribute evenly in the crisp plate.	1  + 
	Crispy Shrimps	200 - 800 g	Distribute evenly in the crisp plate.	1  + 
	Fish Fingers [*]	200 - 800 g	Distribute evenly in the crisp plate. To get perfect results, during cooking you will be asked to turn food.	1  + 

ACCESSORIES	 Wire shelf	 Heathproof tray on wire shelf	 Drip tray / Baking tray	 Heath and MW-proof container	 Food Probe	 Steamer bottom and lid	 Entire steamer	 Crisp plate
-------------	--	---	---	--	--	--	--	---

Category	Food	Weight/ portions/pieces	Notes	Accessories
VEGETABLES	Roasted Potatoes	300 g - 1 kg	Cut in pieces, season with oil, salt and flavor with herbs. Distribute evenly in the crisp plate. To get perfect results, during cooking you will be asked to stir food.	1  + 
	Vegetarian Burger [*]	100 - 500 g	The crisp plate needs to be preheated before inserting the food. The oven will notify you when it's time to insert the food. Distribute evenly in the crisp plate after preheat. To get perfect results, during cooking you will be asked to turn food.	1  + 
	Stuffed Vegetables	600 g - 2.0 kg	Scoop out the vegetable and fill with a mixture of the vegetable flesh itself, minced meat and shredded cheese. Season with garlic, salt and flavor with herbs as you prefer.	1  + 
	Potatoes Gratin	400 g - 1.5 kg	Slice and place into a large container. Season with salt, pepper and pour over cream. Sprinkle cheese on top.	1  + 
	Potatoes Pieces Steamed	-	Add around 100g of water in the steamer bottom. Cut in pieces and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Roots Vegetables Steamed	-	Add around 100g of water in the steamer bottom. Cut in pieces and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Soft Vegetables Steamed	-	Add around 100g of water in the steamer bottom. Cut in pieces and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Fruit Pieces Steamed	-	Add around 100g of water in the steamer bottom. Cut in pieces and distribute evenly the food in the steamer basket. Cover with lid. This cycle uses sensors: do not open the door during cooking.	1  + 
	Vegetables Steamed [*]	-	Add around 100g of water in the steamer bottom and distribute evenly the food in the steamer basket. Cover with lid.	1  + 
	Fried Potatoes [*]	200 - 600 g	Distribute evenly in the crisp plate.	1  + 
	Potato Croquettes [*]	200 - 600 g	Distribute evenly in the crisp plate.	1  + 
	Fried Pepper	100 - 500 g	Cut in pieces and season with oil. Distribute evenly in the crisp plate.	1  + 

ACCESSORIES								
	Wire shelf	Heathproof tray on wire shelf	Drip tray / Baking tray	Heath and MW-proof container	Food Probe	Steamer bottom and lid	Entire steamer	Crisp plate

Category	Food	Weight/ portions/pieces	Notes	Accessories
SALTY BAKERY	Sandwich Loaf	-	Prepare dough according to your favorite recipe for a light bread. Form into a loaf container before rise. Use the oven's dedicated rise function.	1  +  + 
	Big bread	-	Prepare dough according to your favorite recipe and place it on baking tray. Use the oven's dedicated rise function.	2  + 
	Pizza	400 g - 1.2 kg	Prepare pizza dough according to your favorite recipe. Leave it to rise using the oven's dedicated function. Roll out the dough into a lightly greased baking tray. Add topping as you prefer.	2 
	Pizza [*]	250 - 700 g	Take out from packaging being careful to remove any aluminium foil.	1  + 
	Salty Cake	800 g - 1.5 kg	Line a pie dish for 8-10 portions with a pastry and pierce it with a fork. Fill the pastry according to your favorite recipe.	1  + 
SWEET BAKERY	Cheese Cupcake	1 batch	Prepare a mix for 12-15 pieces by using shredded soft cheese and diced bacon or ham. Fill in individual serve muffin tins. Distribute evenly on the baking tray.	2 
	Sponge Cake	-	Prepare a fatless sponge cake batter of 500-900g. Pour into lined and greased baking pan.	1  +  + 
	Marble Cake	400 g - 1.2 kg	Prepare a marble cake batter according to your favorite recipe. Pour into lined and greased baking pan.	2 
	Muffins	1 batch	Prepare a batter for 16-18 pieces according to your favorite recipe and fill in paper moulds. Distribute evenly on the baking tray.	2 
	Cookies	1 batch	Make a batch of 500g flour, 200g salted butter, 200g sugar, 2 egg. Flavor with fruit essence. Let cool down. Stretch evenly the dough and shape as you prefer. Lay the cookies on a baking tray.	2 
	Brownies	1 batch	Prepare according to your favorite recipe. Spread batter on the baking pan covered with baking paper.	1 
	Strudel	1 batch	Prepare a mix of diced apple, pine nuts, cinnamon and nutmeg. Put some butter in a pan, sprinkle with sugar and cook for 10-15 minutes. Roll it into a pastry and fold the external part.	2 
DESSERTS	Apple Pie	-	Line a pie dish with the pastry and sprinkle the bottom with bread crumbs to absorb the juice from the fruit. Fill with chopped fresh fruit mixed with sugar and cinnamon. Roll out the pastry scraps to make a lid, seal the edges and brush with egg.	1  + 
	Baked Apples	1 batch	Remove the core and fill with marzipan or cinnamon, sugar and butter.	2 
	Hot Chocolate	1-5 portions	Prepare according to your favorite recipe into a single container. Flavor with vanilla or cinnamon. Add corn starch to increase density. To get perfect results, during cooking you will be asked to stir food.	1  + 
EGGS	Scrambled Eggs	2 - 10 pieces	Prepare according to your favorite recipe into a single container. To get perfect results, during cooking you will be asked to stir food.	1  + 
SNACKS	Popcorn	-	Always place the bag directly on the wire shelf. Pop only one bag at a time. This cycle uses sensors: do not open the door during cooking.	1 
	Chicken Nuggets [*]	200 - 700 g	Distribute evenly in the crisp plate.	1  + 
	Onion Rings [*]	100 - 500 g	Distribute evenly in the crisp plate.	1  + 

ACCESSORIES								
	Wire shelf	Heathproof tray on wire shelf	Drip tray / Baking tray	Heath and MW-proof container	Food Probe	Steamer bottom and lid	Entire steamer	Crisp plate