

Personal Blender

User Manual



TBP5301X

EN | RO

01M-8837463200-5116-02

beko

Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Suitable for contact with food.



Do not immerse the appliance, power cable, or power plug in water or any other liquids.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

This appliance conforms to the WEEE regulation.



It does not contain PCB.
Made in P.R.C

CONTENTS

1 Important safety and environmental instructions 4

1.1 General safety.....4

1.2 Compliance with the WEEE Directive and disposal of waste products7

1.3 Package information.....8

1.4 Things to do for energy saving8

2 Your blender 9

2.1 Overview9

2.2 Technical data10

3 Operation 11

3.1 Intended use11

3.2 Operation11

3.3 Crushing ice cubes.....12

4 Cleaning and care 13

4.1 Cleaning13

4.2 Storage14

4.3 Handling and transportation.....14

1

Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

1

Important safety and environmental instructions

- This appliance can be used by people who have limited physical, sensory or mental capacity or who do not have knowledge and experience, provided that they are supervised or they understand the instructions with regard to safe use of the product and potential dangers.
- Children should not play with the appliance.
- Cleaning and maintenance works should not be performed by children.
- This appliance cannot be used by children.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Unplug the appliance when left unattended, while installing/removing accessories or before cleaning.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- Do not use the device for hot food.

1

Important safety and environmental instructions

- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not pull the power cable when unplugging the appliance.
- Unplug the appliance before cleaning, disassembly, accessory replacement and wait for it to stop completely.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.
- Never touch blades while using the appliance. There is the possibility of injury due to incorrect usage.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.

1

Important safety and environmental instructions

- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- If you keep the packaging materials, store them out of the reach of children.
- Keep the appliance and the power cable out of the reach of children.

1.2 Compliance with the WEEE Directive and disposal of waste products



This product does not include harmful and prohibited materials specified in the "Regulation for Supervision of the Waste Electric and Electronic Appliances" issued by the Ministry of Environment and Urban Planning. Complies with the WEEE Regulation. This appliance has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the appliance with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Ask the local authority in your area for these collection points. Help protect the environment and natural resources by recycling used products.

1

Important safety and environmental instructions

1.3 Package information



Package of the product is made of recyclable materials in accordance with our national legislation. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.4 Things to do for energy saving

Cut the solid food into small pieces before placing them in the appliance as stated in the user manual. Follow the other instructions and times specified in the manual. Select low speed levels if suitable for the food to be prepared. Switch off and unplug the appliance after using it.

2 Your blender

2.1 Overview



The values which are declared in the markings affixed on your product or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

2 Your blender

1. Mixing container
2. Chopping blade
3. Lids
4. Motor housing
5. Start button

2.2 Technical data

Voltage: 220-240 V~, 50/60 Hz

Power: 300 W

Insulation class: II

Technical and design modifications reserved.

3 Operation

3.1 Intended use

This appliance is intended only for household use; it is not suitable for professional use.

It is designed to chop small amounts of vegetables and fruit (strawberries, bananas, etc.).

3.2 Operation

Clean the appliance parts before initial use (see 4.1).



WARNING: Do not operate the appliance when it is empty or its cover is open.

1. Place your appliance on a solid and flat surface.
2. Cut the food, for example fruit and vegetables, into small pieces and fill the mixing container (1) with these. Fill up to the 600 ml mark on the mixing container (1) as a maximum.
3. Now screw in the chopping blade (2) by twisting clockwise onto the mixing container (1).

4. Place the mixing container (1) on the motor housing (4). Ensure that the markings ▼ on the chopping blade (2) align with those on the motor housing (4). Then gently twist the mixing container (1) clockwise until it locks into place.



The mixer will only switch on if the mixing container (1) is fitted correctly. A safety shutdown prevents the device from operating without the mixing container (1).

5. Now insert the mains plug into the socket.
6. The longer the start button (5) is pressed down, the smoother the food will be blended.
7. As soon as the desired consistency is achieved, release the start button (5) and remove the mains plug.

3 Operation

8. Remove the mixing container (1) from the motor housing (4). To do this, gently twist the mixing container (1) anti-clockwise and then lift it upwards, rotate the mixing container (1) so that the chopping blade (2) face upwards. Unscrew the chopping blade (2) by twisting anti-clockwise from the mixing container (1). You can now pour out the smoothie or juice. Alternatively, you can also use the mixing container (1) as a bottle. Screw the lid (3) onto the mixing container (1) to do this.

3.3 Crushing ice cubes

Insert up to 4 ice cubes and close the mixing container (1) with the chopping blade (2). Press the start button for just a few seconds (5). As soon as the ice cubes have returned to the bottom of the mixing container (1), you can press the start button (5) again for a few seconds. Repeat the process until the crushed ice has the desired consistency.

4 Cleaning and care

4.1 Cleaning

1. Unplug the appliance before cleaning.
2. Wait for the accessories used to stop completely.
3. Remove the accessory from the container after removing the mixing container (1) from the appliance (see. 3.2).
4. Clean the residual food in the mixing container (1) under running tap water.
5. After installing chopping accessory into the mixing container (1), replace the mixing container on the body (4).
6. Completely fill or fill half of the mixing container (1) with warm water and some drops of dish-washing liquid and operate the appliance in highest speed for a couple of seconds.
7. Then remove and rinse the mixing container.



WARNING: Do not immerse the body (4) in water. You can wipe it with a damp cloth.



WARNING: Chopping blade (2) is sharp. Do not hold the sharp edge or immerse in water while cleaning.



WARNING: Never use petrol, solvents, abrasive cleaners, or metal objects and hard brushes to clean the appliance.



Mixing container (1) and covers can be washed in the dishwasher.

4 Cleaning and care

4.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance before lifting it.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.