QUICK USER GUIDE


WINE COOLER

MDRW129FGG22




EN	More guidelines: Scan the QR Code to view the manual. You can find the QR code on the appliance.
DE	Weitere Anweisungen: Scannen Sie den QR-Code, um die Anleitung anzuzeigen. Sie finden den QR-Code auf dem Gerät.
IT	Ulteriori linee guida Scansiona il codice QR per visualizzare il manuale. Puoi trovare il codice QR sugli elettrodomestici.
FR	Plus de directives: Scannez le code QR pour afficher le manuel. Vous pouvez trouver le code QR sur les appareils.
ES	Para obtener más instrucciones, escanee el código QR para ver el manual. Puede encontrar el código QR en los electrodomésticos.
PT	Mais orientações: Escaneie o código QR para visualizar o manual. Você pode encontrar o código QR nos eletrodomésticos.


EU

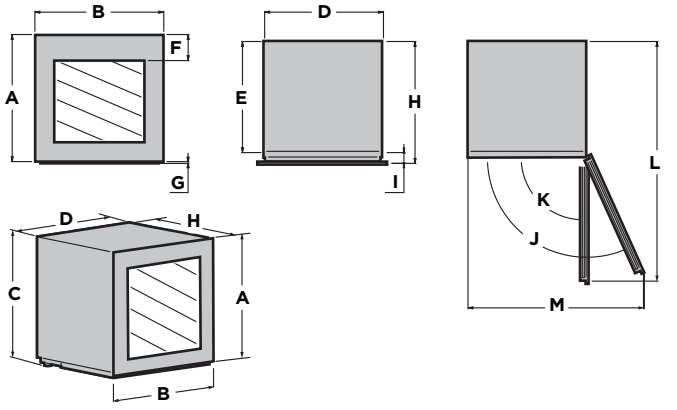


A. 585 mm	**B.** 593 mm	**C.** 583 mm — 593 mm		**D.** 552 mm
E. 517 mm	**F.** 120 mm	**G.** 8 mm	**H.** 565 mm	**I.** 48 mm
J. 115°	**K.** 90°	**L.** 1150 mm	**M.** 770 mm	

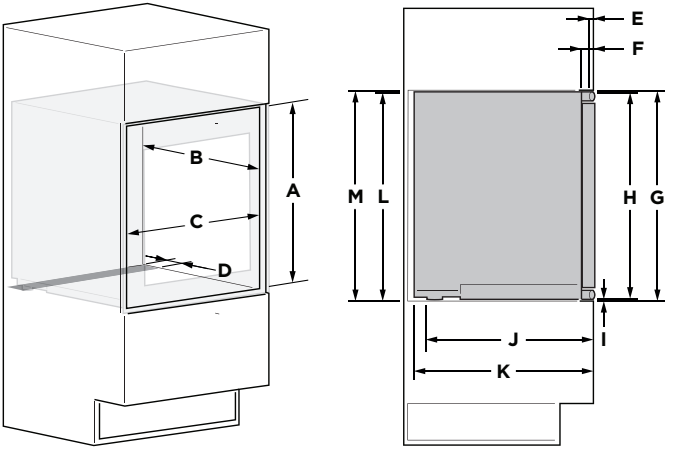

A. 585 mm — 595 mm		**B.** Min. 560 mm	**C.** 560 mm — 590 mm	
D. Max. 60 mm	**E.** Max. 25 mm	**F.** 48 mm	**G.** 593 mm	**H.** 585 mm
I. 8 mm	**J.** 506 mm	**K.** 565 mm	**L.** Min. 583 mm	**M.** Min. 585 mm

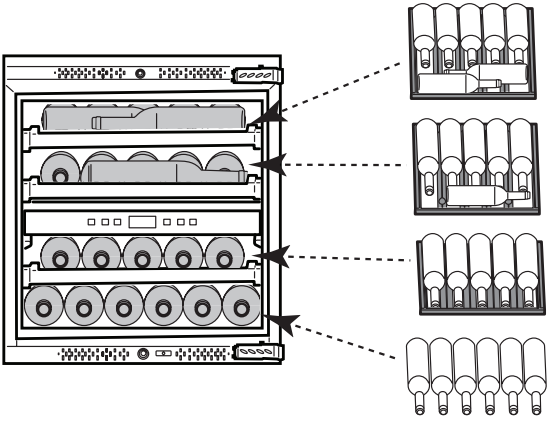

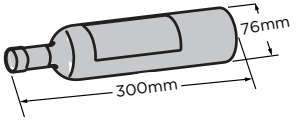
76mm
300mm



THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

ATTENTION

To ensure your safe usage, please read the safety instruction manual before use!

CONTENTS

PRODUCT INSTALLATION ---------- 02

OPERATION INSTRUCTIONS ---------- 03

STORING FOOD---------- 04

MAINTENANCE AND CLEANING---------- 05

CUSTOMER CARE AND SERVICE ---------- 05

PRODUCT INSTALLATION

Before the first use

The packaging must be undamaged. Check the device for transport damage.

Do not connect a damaged device under any circumstances. In case of damage, please contact the supplier.

1. Removing the packaging

Remove all packaging materials and any promotional stickers.

Recycling is better for the environment, so keep paper and plastic waste separated.

2. Placing the appliance

Place the product in a well ventilated room with a flat surface. See the manual for more information.

3. Levelling the appliance

Ensure that the appliance is level. If necessary, adjust the left and right leveling feet.

4. Connecting the appliance

After levelling the appliance, leave it standing for at least 2 hours before inserting the plug in the socket.

5. Cleaning the appliance

In the meantime, clean the interior of the appliance with a damp cloth and warm water containing some washing-up liquid, all-purpose cleaner or soda.

Wipe the interior once more with a damp cloth using clean water and then thoroughly dry everything.

When installing unit, keep distances around appliance according to detailed drawing and recommendations in user manual.

ATTENTION
The product dimensions/specifications can also be obtained by scanning the QR code on the nameplate to access the electronic manual.

⚠ **WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.**


- Depending on the climate class, this refrigerator is intended to be used at an ambient temperature range as specified in the following table.
- The product may not operate properly at temperatures outside of the specific range.You can find the climate class on the product label.

Climate Class	Ambient Temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C

OPERATION INSTRUCTIONS

Use and functions

For the most efficient use of energy, please keep the all inner fittings such as baskets, drawers, shelves and ice cube tray on the position supplied by manufacturer.

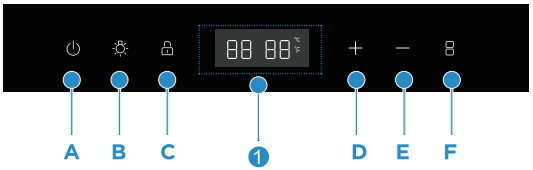

Description	
1	**Indication area** Display the temperatures of the upper and lower compartments in the wine cabinet.
A	**On/Off Button** Switch the whole appliance On or Off.
B	**Light switch button** Door Open: Light activates (turns on). Door Closed: Light deactivates (turns off). Press the button to activate the entertainment mode and keep the light constantly on even when the door is closed. Each time the button is pressed, a beep will sound.
C	**Enabling/disabling the child lock** The child lock is a feature for preventing children from changing the appliance's settings. Press this button for 3 seconds to lock/unlock the controlpanel.
D	**Temperature Increase Button** Press the button to Increase the temperature value by 1 degree with each press.
E	**Temperature Decrease Button** Press the button to decrease the temperature value by 1 degree with each press.
F	**Temperature Zone Selection Button**

Fahrenheit / Celsius Conversion

To switch between Fahrenheit and Celsius, press buttons (+) + (—) simultaneously for 3 seconds while the wine cooler is in the locked state. Aftera "beep" sound, the temperature display will be changed from °C to °F. Celsius is set as the factory default.

Fault code

When a malfunction occurs, contact a service technician for repairs

Fault Code	Fault Description
HH	Space temperature sensor short circuit
LL	Space temperature sensor open circuit
25/77	High temperature alarm
2	Upper temperature zone low temperature alarm
5	Lower temperature zone low temperature alarm
1H	Ambient temperature sensor short circuit
1L	Ambient temperature sensor open circuit

STORING FOOD

The wine's taste depends on right pouring temperature; therefore it determines its flavor. We suggests the wine's temperature reaches the following degree when pouring:

Wine Kinds	Serving Temp
Bordeaux red	18°C
Louis Family dry red wine/Barolo	17°C
Burgundy red/Bordeaux red	16°C
Port	15°C
Young Burgundy red	14°C
Young red wine	12°C
Young Beaujolais/all white wines with little residual sugar	11°C
Old white wines/Chardonnay	10°C
Sherry	9°C
Young white wines from late vintage	8°C
White wines Loire/Entre-deux-Mers	7°C

MAINTENANCE AND CLEANING

Turn off the power, unplug the appliance, and remove all bottles and wooden shelves.

Use a sponge or soft cotton cloth to dampen clean water or a baking soda solution (mix two tablespoons of baking soda with one liter of warm water) scrub the inner surface of the box.

Use a sponge or soft cotton cloth with clean water or mild detergent to clean the wooden shelves, control panel, cabinet shell, and glass door. Wring out the water from the sponge or soft cotton cloth before use.

Allow the wooden shelves to air dry before placing them in the wine cooler.

Do not use steel wool or wire brush to scrub stainless steel parts, otherwise it will cause the stainless steel to rust.

CUSTOMER CARE AND SERVICE

- If you want to return or replace the product, please contact the store where you bought it. (Remember to bring the purchase invoice.)
- Detailed information on the warranty period and terms of warranty in your country is available from our aftersales service, your retailer or on our website.
- The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website. **www.midea.com/global/support**
- Spare parts are available for a minimum period of seven years after the final version of the model has been placed on the market. Door seals are available for a period of ten years.
- The model information in the product database, as well as the model identifier, can be obtained through a weblink scanned by a QR code, if any, on the energy efficiency label of the product.
- For more information about the energy efficiency of the appliance, visit https://eprel.ec.europa.eu and search using the model name. (Only for Europe)
- The model name can be found on the rating label of the appliance.

Midea

make yourself at home

www.midea.com

© Midea 2022 all rights reserved

Version 1 2025.11