
cecotec

PROCLEAN 2800

Microondas / Microwave

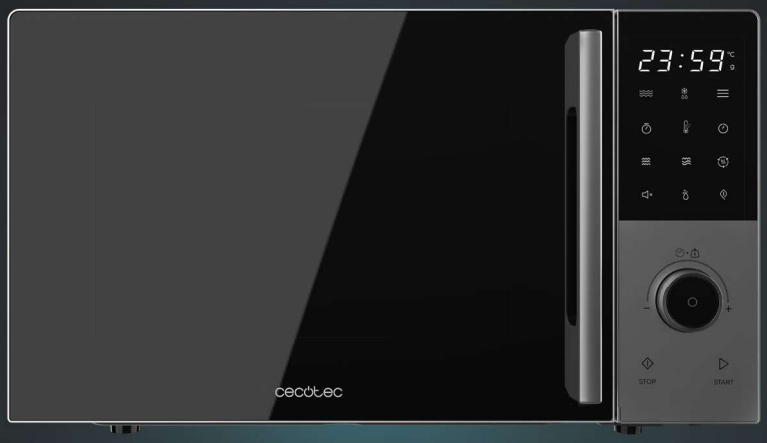

Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití
Kullanma kılavuzu
Οδηγίες χρήσης
Manual d'instruccions
Használati útmutató
دليل التعليمات

1. PARTS AND COMPONENTS

Fig. 1
1. Door lock
2. Door
3. Turntable ring
4. Turntable shaft
5. Turntable
6. Control panel
7. Rack
8. Mica plate

NOTE:
The graphics in this manual are schematic representations and may not exactly match the product.

2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the machine when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If any of them are missing or damaged, please contact the official Cecotec Technical Support Service immediately.
- Do not remove the serial number of the appliance in order to keep a correct traceability of it in case of assistance.

Box content
- Microwave
- Turntable
- Grill rack
- Instruction manual

3. INSTALLATION

1. Place the appliance on a flat, stable and dry place, away from any corrosive material, and avoid exposing it to heat or moisture.

2. To ensure proper ventilation, there must be a clearance of at least 10 cm from the microwave rear to the wall, at least 5 cm from the side and at least 20 cm from the top. In addition, the microwave should be placed at a minimum height of 85 cm.
3. The appliance must be placed at least 5 m away from TVs, radios, or antennas.
4. The microwave must be positioned so that the plug is accessible and must be properly grounded.
5. The microwave must be used with the door closed.
6. Do not place the microwave inside a cupboard. This appliance is not suitable for built-in installation.
7. After leaving the factory, some oil may remain in the interior cavity of the microwave or on the heating elements, which may cause a slight smell or even some smoke the first few times it is used. This is a normal phenomenon that will disappear with use. However, we recommend that you keep the door open to ensure good ventilation. To eliminate this problem, it is advisable to heat a glass of water in the microwave several times at full power.

4. OPERATION

Control panel. Fig. 2

1. **Before cooking**

When the microwave is connected to the mains, the display will switch on and then enter standby mode and show "1:00".

2. **Setting the power level**

- This microwave has the following 5 power level settings: 100 %, 80 %, 50 %, 30 % and 10 %.
- When the microwave is in standby mode, turn the knob to choose the desired function and then press it to confirm the selection.
- Then turn the knob again to adjust the power level. Once you have chosen the desired power level, press the knob to confirm the setting.
- Then turn the knob to set the desired cooking time. The adjustable time value ranges from 0:10 to 60:00.
- After setting the time, press START to begin the cooking process.
- When the time is up, the microwave will beep once.

HIGH (high/ maximum power)	100% power output	For fast and thorough cooking
Medium-high power	80% power output	For express cooking
Medium power	50% power output	For steam cooking
Medium-low power	30% power output	For defrosting food
LOW	10% power output	For keeping food warm


WARNINGS:

a. The maximum programmable time is 60 minutes.
b. Do not operate the microwave when empty.
c. At maximum microwave power, the appliance will automatically reduce power after a certain cooking time to extend its service life.
d. If you turn the food over while it is cooking, you will need to press START for the microwave to resume cooking.
e. If you wish to remove the food before the programmed time is up, press STOP to prevent the microwave from restarting unintentionally.

3. **Defrost** 

- This microwave has two defrosting modes: dEF1, for defrosting by weight, and dEF2, for defrosting by time.
- When the microwave is in standby mode, turn the knob to choose the Defrost function and then press it to confirm the selection.
- Turn the knob to select defrost by weight ("dEF1" will appear on the display) or by time ("dEF2" will appear on the display).
- Once you have chosen the desired defrosting mode, press the knob to confirm the setting. Then turn the knob again to choose the defrosting weight or time.

Note: The weight range of dEF1 is from 100 to 1500 g, and the time range of dEF2 is from 0:10 to 60:00.

- After setting the defrosting mode, press START to begin the defrosting process.
- When the time is up, the microwave will beep once.

Note: If you choose the dEF1 defrost mode, the microwave will beep to remind you to turn the food over during the defrosting process.

 WARNINGS:

a. It is necessary to turn the food over during operation to obtain a uniform effect.
b. Defrosting normally takes longer than cooking food.
c. When the food can be easily cut with a knife, it means that it is completely defrosted.
d. Microwaves penetrate about 4 cm into most food.
e. Defrosted food should be consumed as soon as possible. It is not recommended to put them back in the fridge and freeze them again.

4. **Preset programmes**

- This microwave has the following 8 preset programmes (A1-A8): Potatoes, Pasta, Pizza, Popcorn, Vegetables, Drinks, Meat and Fish.
- When the microwave is in standby mode, turn the knob to choose the Menu function (Preset programmes) and then press it to confirm the selection.
- Then turn the knob again to choose the desired programme. The display will show the code of the selected programme ("A.1"-"A.8").
- Once selected, press the knob to confirm the selection.
- After selecting the desired programme, turn the knob again to adjust the weight of the food items to be cooked in the microwave; this value will be shown on the display.
- After adjusting the weight, press START to begin the cooking process. When the time is up, the microwave will beep once.

Display	Type	Method
A.1	Potatoes	The weight you can select in this programme is 250 g, 500 g or 750 g.
A.2	Pasta	The weight you can select in this programme is 50 g, 100 g or 150 g.
A.3	Pizza	The weight you can select in this programme is 200 g or 400 g.
A.4	Popcorn	The weight you can select in this programme is 100 g.
A.5	Vegetables	The weight you can select in this programme is 200 g, 400 g or 600 g.
A.6	Drinks	The options you can select in this programme are 1, 2 or 3 cups of approximately 250 ml each.
A.7	Meat	The weight you can select in this programme is 200 g, 400 g or 600 g.
A.8	Fish	The weight you can select in this programme is 200 g, 400 g or 600 g.

INGS:

a. The temperature of the food before cooking would be 20-25 ℃. A higher or lower food temperature before cooking would require increasing or decreasing the cooking time.
b. The temperature, weight and shape of the food greatly influence the cooking result. If any deviation from the factor indicated in the above menu is detected, you can adjust the cooking time for optimal results.

5. **Timer**

- When the microwave is in standby mode, turn the knob to choose the timer function, and then press it to enter the timer function setting interface. When doing so, the value “0:00” and the timer function icon will appear on the display.
- To set the countdown time, use the knob. Please note that the maximum time you can select is 60 minutes.
- Press START to begin the countdown. When the countdown is up, the microwave will beep once.

6. **Reheat** 

- This function allows you to reheat food by weight.
- When the microwave is in standby mode, turn the knob to choose the Reheat function and then press it to confirm the selection.
- Then turn the knob to adjust the weight of the food items to be cooked in the microwave. The available weight options are as follows: 200 g, 400 g, 600 g, 800 g and 1000 g.
- After selecting the desired value, press START to begin the reheating process. When the time is up, the microwave will beep once.

7. **Clock (24 hours)** 

- When the microwave is in standby mode, turn the knob to choose the Clock function and then press it to confirm the selection.
- When entering this interface, the hour value will start flashing. To set it, turn the knob. Once you have chosen the correct hour value, press START to confirm the settings and switch to the minute setting mode.
- Turn the knob to set the minutes.
- Once you have chosen the correct minute value, press START to confirm the settings and and exit the clock setting mode.

8. **Grill function**

The Grill function has the three following modes: G., G-1 and G-2.
Note: These modes are explained in detail below. When the microwave is in standby mode, turn the knob to choose the Grill function and then press it to confirm the selection.

- Then turn it again to select the desired mode. The display will show the corresponding mode code ("G", "G-1" or "G-2"). After selecting the mode, press START to confirm the setting.
- Turn the knob to set the cooking time (up to a maximum of 60 minutes).
- Then press START to begin the cooking process. When the time is up, the microwave will beep once.

G	If you choose this mode, the heating element will start operating. This mode is suitable for browning thin beef steaks, sausages or chicken wings.
G-1	If you choose this mode, the Microwave function will run at a 30% power setting and the Grill function at a 70% power setting.
G-2	If you choose this mode, the Microwave function will run at a 55% power setting and the Grill function at a 45% power setting.


WARNINGS:

When the Grill function is on, all internal parts of the microwave, as well as the grill rack and the cooking containers, reach high temperatures. Be careful when removing any item from the microwave.
To avoid burns, use thick cloths or oven gloves.

9. **Combination function**
- The combination function has the two following modes: C-1 and C-2.

Note: These modes are explained in detail below.
- When the microwave is in standby mode, turn the knob to choose the Combi function and then press it to confirm the selection.
- Then turn it again to select the desired mode. The display will show the corresponding mode code ("C-1" or "C-2"). After selecting the mode, press the knob to confirm the setting.
- Turn the knob to set the cooking time (up to a maximum of 60 minutes). Then press START to begin the cooking process. When the time is up, the microwave will beep once.

C-1	If you choose this mode, the Microwave function will run at a 30% power setting and the Grill function at a 70% power setting.
C-2	If you choose this mode, the Microwave function will run at a 55% power setting and the Grill function at a 70% power setting.


WARNINGS:

When the Combi function is on, all internal parts of the microwave, as well as the grill rack and the cooking containers, reach high temperatures. Be careful when removing any item from the microwave.
To avoid burns, use thick cloths or oven gloves.

10. **Convection function**
- When the microwave is in standby mode, turn the knob to choose the Convection function and then press it to confirm the selection.
- Turn the knob to select the desired temperature, then press the knob to confirm the setting. Turn the knob to set the cooking time (up to a maximum of 60 minutes).
- Then press START to begin the cooking process. When the time is up, the microwave will beep once.

11. **Mute function**
- When the microwave is in standby mode, turn the knob to choose the Mute function and then press it to confirm the selection.
- Turn the knob to turn the microwave sound on or off.
- Then press it to confirm the setting.

12. **Cleaning function**

After using the Cleaning function, when the microwave has cooled down completely, you can clean the inside of the appliance with a damp cloth.
To select the Cleaning function, follow the steps below.
- When the microwave is in standby mode, turn the knob to choose the Cleaning function and then press it to confirm the selection.
- After this step, add 250 ml of clean water. Press START to start the appliance. When the time is up, the microwave will beep once.

13. **ECO mode**
- When the microwave is in standby mode, turn the knob to select this mode, and then press it to confirm the setting. When doing so, the display will turn off.
- If the microwave is in ECO mode, and you want the display to turn back on, press any button.

14. **STOP** STOP

While adjusting the cooking settings, you can press STOP to cancel the current selection and the microwave will return to standby mode.
To pause the cooking process, press STOP while the microwave is in operation. If you press STOP again when the cooking process is paused, the programme will be cancelled, and the microwave will return to standby mode.

15. **START** START
- After setting the cooking time or the weight of the food, press START to begin the cooking process.
- While the microwave is working, you can press START once to increase the time by 30 seconds.

Note: You will not be able to do this if you have selected the Defrost by weight function or one of the preset programmes.
- When the microwave is paused, you can press START to resume cooking.

16. **Child Lock function**

Use this function to lock the control panel when cleaning or to prevent children from using the microwave without supervision. When the child lock is activated, all buttons will be disabled.

1) To activate the child lock: When the microwave is in standby mode, press and hold STOP for 3 seconds.

2) To deactivate the child lock: Press and hold STOP again for 3 seconds.

5. TIPS

Placing food
Place the thicker parts of the food to be cooked towards the outside of the base and the thinner parts towards the inside. Make sure that the food is properly distributed, i.e. that no food is too close together or stuck together.

Setting the cooking time
Select a short time setting and, once cooking is complete, add more minutes if necessary. If you overheat food, it may burn and smoke.

Cooking food evenly
If you are cooking chicken, burgers or steaks, turn them over halfway through the cooking process. There are some foods that need to be stirred (from the outside to the inside) once or twice during the cooking process.

Do not remove the food from the microwave immediately after cooking is complete
After the cooking time has elapsed, do not remove the food from the microwave immediately. In this way, it will finish cooking thoroughly and cool gradually.

Knowing if the food has been cooked correctly
The colour and hardness of the food help to determine whether it is properly cooked. The following cases indicate good cooking:
- Steam comes out evenly from the food, not just from the edges.
- Bird parts are movable and not stiff.
- There is no trace of blood on meat or poultry pieces.
- Fish pieces can be cut with a fork.

Using a browning pan
When using a specific browning pan or a self-heating pan, always place a heat insulator underneath (e.g. a porcelain plate).

Microwave-safe plastic film
When cooking foods with a high fat content, do not let the cling film come into contact with the food to prevent it from melting.

Microwave-safe plastic cookware

Some microwave-safe plastic cookware may not be suitable for cooking foods with a high fat or sugar content. In addition, it must always be ensured that the preheating time specified in the cookware's instruction manual is not exceeded.

Microwave-safe containers

Only use containers that are suitable for the microwave. In general, heat-resistant ceramic, glass or plastic ones are. Never use metal containers, as sparks may be produced. If you are in doubt as to whether a container is suitable for the microwave, please refer to the table below.

Container material	Microwave-safe	Grill function	Combination function	Comments
Heatproof ceramics	Yes	Yes	Yes	Never use ceramics decorated with metallic or enamelled elements. It is recommended to use ceramic, heat-resistant glass or plastic containers that can withstand temperatures above 120°C.
Heatproof plastic	Yes	No	No	Avoid using this type of container for long cooking times.
Heat-resistant glass	Yes	Yes	Yes	
Plastic film	Yes	No	No	It must not be used for cooking meat, as excessive heat can damage the film.
Rack	No	Yes	Yes	The rack can only be used with the Grill and Combi functions.

Metal container	No	No	No	Do not put metal containers in the microwave. Metals hinder microwave penetration.
Lacquer	No	No	No	These materials are not very heat resistant. Not suitable for high temperature cooking.
Cannot be used for high-temperature cooking	No	No	No	These materials are not very heat resistant. Therefore, they are not suitable for high temperature cooking.

6. CLEANING AND MAINTENANCE

Warning

The appliance, as well as food remains, must be cleaned and removed regularly.

- Disconnect the power cable from the socket before cleaning the appliance. Do not immerse in water or any other liquid when cleaning.
- If you do not clean the microwave regularly, its service life will be affected.
- Do not use abrasive cleaning products or scouring pads to clean the microwave.
- Do not remove the mica plate.
- If you notice that the microwave is emitting unpleasant odours, follow one of the 3 cleaning methods below:

1. Place several lemon slices in a cup and heat them at high power for 2 to 3 minutes.
2. Place a cup of red tea and heat it on high power.
3. Put in some orange peels and heat on high power for 1 minute.

- When the microwave is not in use, place it in a dry and ventilated place.
- When you have finished using the microwave, wipe the inside surfaces that have come into contact with food with a damp cloth to remove any residue and then dry them thoroughly. Accumulated grease can overheat and start to smoke or catch fire.
- Also clean the exterior, door, seals, viewing window and adjacent parts.
    - Exterior: use a soft, damp cloth to clean the surface of the appliance.
    - Door: clean the door and window with a soft damp cloth. Clean the door seals and adjacent parts to remove any spills or splashes. Clean the control panel with a soft, slightly damp cloth.

- Inner walls: clean the inner surfaces with a soft, damp cloth. Clean the waveguide cover to remove any food splashes.
- Turntable / Turntable ring / Turntable shaft: Wash these parts with soap and water. Rinse and dry them thoroughly.

7. TROUBLESHOOTING

To check that the microwave is working properly, carry out the following checks:

1. Place a cup of water (approx. 150 ml) inside and close the door. The microwave light should turn off if the door is properly closed. Let the appliance run for 1 min.
2. Does the microwave light turn on?
3. Does the fan work?
   (Place your hand over the rear ventilation openings).
4. Does the turntable rotate?
   (The turntable can rotate clockwise or counterclockwise. This is quite normal.)
5. Is the water in the cup hot?
   If the answer to any of the above questions is "No", check the socket and the fuse in the meter box.

If both the socket and the fuse are not working properly, please contact the official Cecotec Technical Support Service.

8. TECHNICAL SPECIFICATIONS

Product reference: EU01_109731
Product: Proclean 2800

Rated input power: 1440 W
Rated input power (Convection): 2200 W
Rated output power: 900 W
Rated grill power: 1200 W
Microwave frequency: 2450 MHz
Voltage: 230 V
Frequency: 50 Hz
Capacity: 28 l

Technical specifications may change without prior notification to improve product quality.
Made in China | Designed in Spain

9. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

For detailed information on how to properly dispose of electrical and electronic appliances and/or batteries, consumers should contact their local authorities.

Compliance with the above guidelines will help protecting the environment.

10. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions and deadlines established by the applicable regulations.

Repairs should be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

11. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

12. SIMPLIFIED EU DECLARATION OF CONFORMITY

CE Cecotec Innovaciones hereby declares that this appliance complies with the essential requirements and other relevant provisions of the regulations applicable in the European Union. This appliance has been designed, manufactured and tested in compliance with required safety and quality standards. The full text of the EU Declaration of Conformity can be found on the following website: https://cecotec.es/es/information/declaration-of-conformity