

- i** The latest software for the BORA Classic 2.0 system is available on the BORA website free of charge. (www.bora.com – Products – BORA Classic 2.0 – BORA Classic cooktop extractor CKA2/CKA2AB – Documents). Scan the QR code and you will be redirected to the page with the latest software.



- i** A USB stick with FAT32 formatting is needed to save the update file. This USB stick must be inserted into the USB port on the cooktop extractor.
- i** A valid update file must be stored on the USB stick. When the occasion arises, you can obtain the update file from the BORA Service department.

Calling up the menu


- i** The menu can only be called up if all cooking zones and the cooktop extractor are inactive. In addition, there must be no residual heat.
- i** The menu button will only be displayed in the operating panel when all functions are inactive and there is no residual heat.

- ▶ Tap the menu button
- The menu is called up and the first menu item is displayed (colour mode “beige”).

Navigating the menu

- ▶ Tap or to go to the required menu item: Menu item 8: System software update
- If you have chosen a menu item, after 2 seconds the display automatically changes to the set value.

Starting the software update

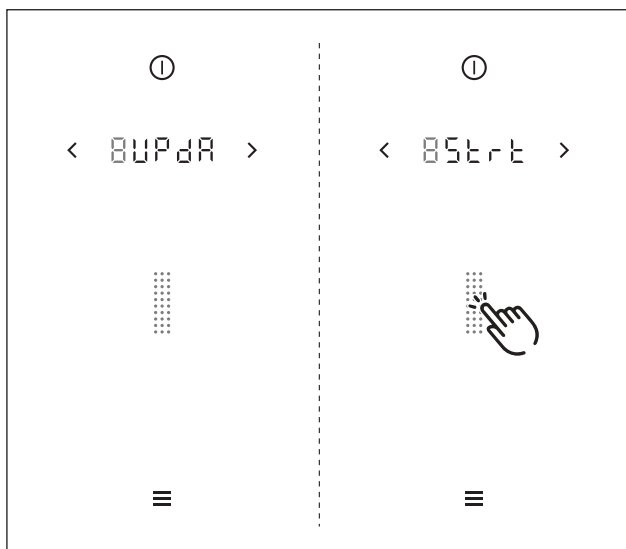


Menu item 8: Starting the software update

- ▶ Insert the USB stick with the update file in the USB port on the cooktop extractor.
- ▶ Tap the slider
- The software update is started.
- The indicator for the first part of the update process flashes.

Update process

The update process has three stages. These three stages are shown in the display by beige slider segments (). The currently active stage will flash. If a stage in the process has been completed successfully, the corresponding segment will stop flashing and will light up green. The next stage in the process is started.

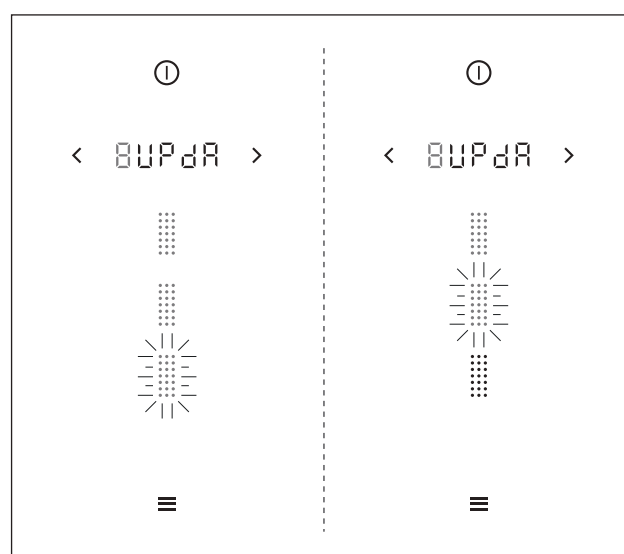

Menu item 8: Software update process stages

- i** If the update is completed without errors, all three segments will light up green. The system will then be restarted automatically.
- i** The update has been completed successfully if **! 5oFt** is shown in the display when the system is restarted.
- i** If an error occurs during an update stage (the corresponding slider segment lights up red), the complete update process is terminated. An error message appears in the operating panel display (e.g. **E 123**; see Troubleshooting chapter).