

- i** The latest software for the BORA Classic 2.0 system is available on the BORA website free of charge. ([www.bora.com](http://www.bora.com) – Products – BORA Classic 2.0 – BORA Classic cooktop extractor CKA2/CKA2AB – Documents). Scan the QR code and you will be redirected to the page with the latest software.



- i** A USB stick with FAT32 formatting is needed to save the update file. This USB stick must be inserted into the USB port on the cooktop extractor.
- i** A valid update file must be stored on the USB stick. When the occasion arises, you can obtain the update file from the BORA Service department.

## Calling up the menu


- i** The menu can only be called up if all cooking zones and the cooktop extractor are inactive. In addition, there must be no residual heat.
- i** The menu button will only be displayed in the operating panel when all functions are inactive and there is no residual heat.

- ▶ Tap the menu button
- The menu is called up and the first menu item is displayed (colour mode “beige”).

## Navigating the menu

- ▶ Tap or to go to the required menu item: Menu item 8: System software update
- If you have chosen a menu item, after 2 seconds the display automatically changes to the set value.

## Starting the software update

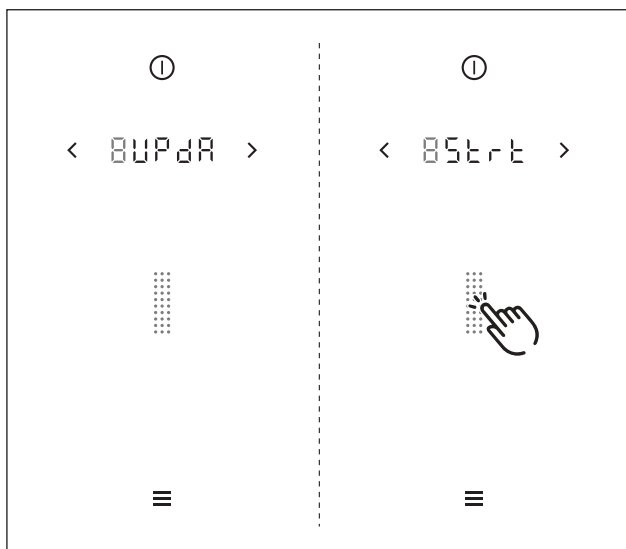


Menu item 8: Starting the software update

- ▶ Insert the USB stick with the update file in the USB port on the cooktop extractor.
- ▶ Tap the slider
- The software update is started.
- The indicator for the first part of the update process flashes.

## Update process

The update process has three stages. These three stages are shown in the display by beige slider segments ( ). The currently active stage will flash. If a stage in the process has been completed successfully, the corresponding segment will stop flashing and will light up green. The next stage in the process is started.

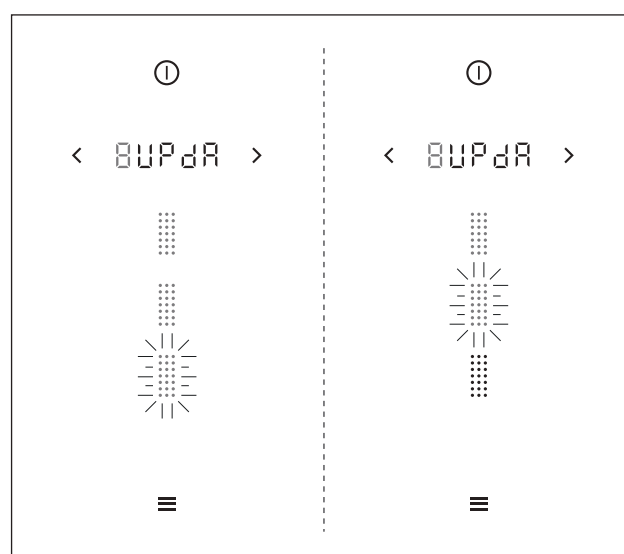

Menu item 8: Software update process stages

- i** If the update is completed without errors, all three segments will light up green. The system will then be restarted automatically.
- i** The update has been completed successfully if **! SoFE** is shown in the display when the system is restarted.
- i** If an error occurs during an update stage (the corresponding slider segment lights up red), the complete update process is terminated. An error message appears in the operating panel display (e.g. **E 123**; see Troubleshooting chapter).